

TASCAM CD-GT1 Factory Preset

Apr. 2003 Rev. B
TASCAM R&D / TEAC Corp.

Effect	Slot	ON / OFF	LIB	DIST / COMP	TONE	EFX1 PAR	EFX1 MIX	EFX2 PAR	EFX2 MIX	LVL
	A1	ON	00	71	02	5	37	15	69	64
	A2	ON	04	31	00	72	8	21	34	64
	A3	ON	14	0	00	-12	81	99	43	64
	A4	ON	09	58	11	10	81	44	68	64
	A5	ON	12	31	10	80	99	24	20	64
	B1	ON	16	32	7	18	26	50	11	64
	B2	ON	20	55	6	47	23	1	70	64
	B3	ON	21	71	11	37	99	24	61	64
	B4	ON	24	99	4	44	55	41	28	64
	B5	ON	27	79	12	99	99	23	45	64

*1: EFX1 depends on the "LIB" setting. (FLA, PHA, EXC, CHO, TRM, VIB, WAH, or PIT)

*2: EFX2 also depends on the "LIB" setting. (REV or DLY)

*3: To make the effect setting to "Factory Preset", Set "ON / OFF", "LIB" and "LVL" of each effect slots to these above. (Other effect parameters are set automatically by setting "LIB" parameter.)

Pitch	PIT	SSA
	0	OFF

Key	KEY	FINE
	0	0

Menu	PLAY	CUE	FOOT
	ALL	CUE	EFF