

WARNING Messages on LCD

Display	Problem	Solution
<p>WARNING!</p> <p>Clock Source: No Word Signal</p>	No word clock is fed into the WORD IN or the incoming word clock frequency is not correct.	Feed the correct word clock.
<p>WARNING!</p> <p>Clock Source: No Video Signal</p>	No video signal or frame pulse is fed into the VIDEO IN or the incoming clock is not correct.	Feed a correct video signal or frame pulse.
<p>WARNING!</p> <p>No clock from MASTER Check connections and settings</p>	No connection to the master DTRS machine. The master unit is turned off. Different Fs is selected on the master DTRS machine.	Connect PW-88S cable. Turn on the master machine. Set the correct Fs .
<p>WARNING!</p> <p>Clock Source: Video frame mode doesn't match..</p>	The Tc Frame Mode setting is different from the incoming video signal frame.	Correct the Tc Frame Mode . (see menu group 5)
<p>WARNING!</p> <p>Clock Source: Video PLL unlock!</p>	Incoming signal video signal / frame pulse frequency or level is out of range.	Check the signal or termination. (see VIDEO IN/THRU specifications)
<p>WARNING!</p> <p>Cannot Resolve No Video Signal</p>	No video signal or frame pulse is fed into the VIDEO IN .	Feed a correct video signal or frame pulse. Or turn off the Video Resolve . (see menu group 5)
<p>WARNING!</p> <p>Cannot Resolve Video frame mode doesn't match..</p>	The Tc Frame Mode setting is different from the incoming video signal frame.	Correct the Tc Frame Mode . (see menu group 5)
<p>WARNING!</p> <p>Broken tape: Replace the tape</p>	The tape is broken.	Replace the tape.
<p>WARNING!</p> <p>TDIF(dubbing)cable not connected</p>	TDIF-1 (dubbing) cable is not connected. This message appears when DIGITAL IN is turned on.	Connect PW-88D or PW-88DL cable to the TDIF-1(DIGITAL I/O) connector. Or turn off the DIGITAL IN .
<p>WARNING!</p> <p>Condensation on drum</p>	Condensation occurred on the head drum.	Leave the unit switched on for one or two hours, then cycle the power before using.

WARNING Messages on LCD (continued)

Display	Problem	Solution
<p>WARNING!</p> <p>Servo error ## Cycle the power</p> <p>## = 11 ## = 21 ## = 31 ## = 41</p> <p>## = 02 ## = 04 ## = 08,59,68</p>	<p>Servo error ## occurred.</p> <p>(## : see below)</p> <p>Unable to shift mechanism mode within the five seconds of command reception. Tape is not wound into cassette half even Eject is commanded. Occurrence of tape slack during tape runs. Unable to latch solenoid on FF/REW winding.</p> <p>The drum motor could not work correctly in time. The capstan motor could not work correctly in time. The reel motor could not work correctly in time.</p>	<p>Cycle the power and replace the tape. If a "Servo error" persists, contact TASCAM representatives.</p>
<p>WARNING!</p> <p>Cannot Chase Master frame mode doesn't match.</p>	<p>The Tc Frame Mode setting is different from the incoming video signal frame when the CHASE is turned on.</p>	<p>Correct the Tc Frame Mode. (see menu group 5)</p>
<p>WARNING!</p> <p>TC Record Source: Not Synchronized</p>	<p>The incoming Timecode does not synchronize to the DA-98 system clock. The message appears when TC REC is on with the External TC selected as TC Record Source.</p>	<p>Feed and record a correct timecode. Or select INTERNAL clock for CHASE if using the recorded unsynchronized timecode.</p>
<p>WARNING!</p> <p>Cannot Chase No Tape TC</p>	<p>No timecode is recorded on the tape.</p>	<p>Change the Tape TC Mode from Tc Track to ABS. (see menu group 5)</p>
<p>WARNING!</p> <p>Cannot Chase No Master TC</p>	<p>No master timecode is fed or the incoming timecode may have some drop.</p>	<p>Feed a correct timecode. Or try changing the Error Bypass value to 30 Frame. (see menu group 4)</p>
<p>WARNING!</p> <p>Cannot Resolve No Tape TC</p>	<p>No timecode is recorded on the tape.</p>	<p>Change the Tape TC Mode from Tc Track to ABS. (see menu group 5)</p>
<p>WARNING!</p> <p>Cannot Record TC: No Timecode from Selected Source</p>	<p>No timecode is fed when External TC recording. No timecode on the tape when Assembly Timecode recording.</p>	<p>Feed a correct timecode. Start Assembly Recording at where timecode exists.</p>
<p>WARNING!</p> <p>Sys ROM is too old. Please use Ver #.## or later</p>	<p>Sys ROM version does not match with the Sync ROM version.</p>	<p>Contact TASCAM representatives.</p>

WARNING Messages on LCD (continued)

Display	Problem	Solution
<div style="border: 1px solid black; border-radius: 10px; padding: 5px;">WARNING! Sync ROM is too old. Please use Ver ### or later</div>	Sync ROM version does not match with the Sys ROM version.	Contact TASCAM representaives.

Error Messages on 7-seg LED

Display	Problem	Solution
e. hl -8t.	No - Hi8 tape is inserted.	Use Hi8 tapes.
e. tHI nt	Thin tape (e.g. 180 - minute) is inserted.	Use 120-minute or shorter tapes.

Other Messages on 7-seg LED

Display	Meaning
--load--	Loading the tape.
-unload-	Ejecting the tape.
bot	At the beginning of the tape.
eot	At the end of the tape.
no tape	No tape is inserted.
no abs-t	"MEMO" key is pressed at unformatted area of the tape.