

## 90 DAY LIMITED WARRANTY ON MICROVISION GAME CARTRIDGE

The electronic game cartridge is warranted by Milton Bradley Company to the original purchaser for a period of 90 days from the original purchase date—under normal use and service against defective workmanship and materials.

This warranty is void if the electronic game cartridge has been damaged by accident or unreasonable use, neglect, misuse, abuse, improper service or other causes not arising out of defects in workmanship or materials.

Milton Bradley Company shall not be liable for loss of use of the electronic game cartridge or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

During the warranty period, the electronic game cartridge, if found to be defective due to workmanship or materials, will either be repaired or replaced with a reconditioned game cartridge of an equivalent quality (at Milton Bradley's option) without charge to the purchaser when returned, shipping prepaid to Milton Bradley Company with proof of purchase date to the address listed below. In the event that the electronic game cartridge is replaced, the replacement will be continued on the original warranty or for 30 days, whichever is longer.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

After the 90 day warranty period has elapsed, for a period of up to one year from the date of purchase, Milton Bradley will, at its option, repair or replace with a reconditioned game cartridge, when the game cartridge is returned with your check or money order in the amount of \$5.00, shipped prepaid with proof of purchase date to the address listed below. Milton Bradley shall not be obligated to perform this service if the game cartridge has been abused, misused or sustained other damage not arising out of defects in workmanship or materials.

 
Important—Before returning the electronic console and game cartridge for repair, we recommend that you test your console with fresh, strong batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

### MAILING INSTRUCTIONS PLEASE READ CAREFULLY

If your game does not work, return both the console and the cartridge. If you have several game cartridges, return the console and only the cartridges that do not work.

If the original packaging is available, repack the console and cartridge in end caps and box. If the original packaging is not available, wrap carefully, making sure to surround the console and cartridge with adequate padding. (Do not send the batteries with the console.) Mail to:

Milton Bradley Company  
Attn: Electronic Quality Control  
Building 104, Lincoln Street/Federal Square  
Springfield, MA 01105

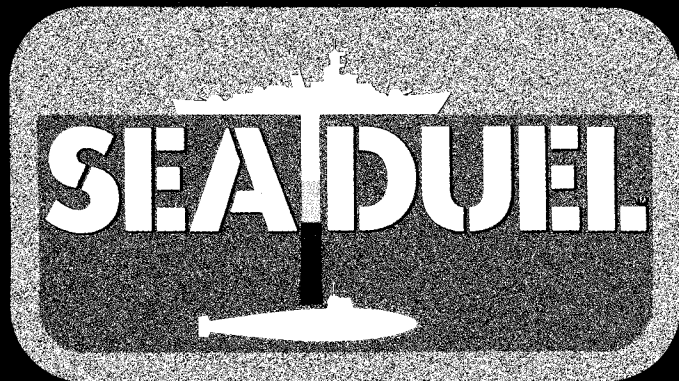

# MICROVISION™

BY MILTON BRADLEY



## GAME BOOKLET

# SEA DUEL™



Unique strategy game that pits a destroyer against a submarine in an intriguing naval battle of wits. Play solo. . . just you versus the computer; or challenge another player to an exciting match. Maneuver your vessel into a firing position and attack your opponent with a volley of depth charges or torpedoes. Hits score points. Six points wins the game.



Sea Duel is a thought-provoking, tactical thriller with unique screen action called Multiple Simultaneous Movement. It's a unique feature that allows you and your opponent to program your moving and firing actions at separate times yet it displays the actual battle action taking place at the same time. With such movement, there is absolutely no advantage in playing first or second. So let the battle begin and fire away!



## OBJECT OF THE GAME:



Out-manuever another player or the computer by being the first player to score 6 or more hits against another vessel.

## HOW TO PLAY THE GAME:

1. Slide ON/OFF switch to "ON" position. Listen to a few bars of the song "Anchors Away" and see a computer graphic of the American flag appear on the screen.
2. Press the GAME button to select a certain style of play: you against another player; or you against the computer. Each time you press the GAME button you will see the following symbols appear on the screen under the labels "SHIP" and "SUB". . . the symbol representing a PLAYER looks like a stick figure, shown here ; the symbol representing the COMPUTER looks like this . The placement of these symbols under the "SHIP" and "SUB" labels determines the style of play. For example:



| <u>SHIP</u>  | <u>SUB</u>   | Two player symbols mean you match wits against another player. You each choose a vessel to move and fire. In a two-player game, whoever chooses the destroyer plays first. |
|--|--|--|
|  |  |  |

| <u>SHIP</u>   | <u>SUB</u>   | A computer symbol under the ship and a player symbol under the sub mean the computer moves and fires the destroyer and you move and fire the submarine. In this style of play, you (the sub) play first. |
|---|--|--|
|  |  |  |

| <u>SHIP</u>   | <u>SUB</u>  | A player symbol under the ship and a computer symbol under the sub mean you move and fire the destroyer and the computer moves and fires the submarine. In this style of play, you (the destroyer) play first. |
|---|---|--|
|  |  |  |


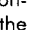
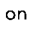
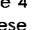
3. Now select the Skill Level by pressing the SKILL/SCORE button. . . Choose either 12 or 18. . . which means either 12 units of

ammunition and 12 units of fuel or 18 units of ammunition and 18 units of fuel. A unit of ammunition is used if you fire once; a unit of fuel is used if you move one square on the screen. The more difficult Skill Level is 12. **IMPORTANT**, once you run out of fuel or ammunition (screen displays a 0 under either "FUEL" or "AMMO"), you can no longer move and fire respectively. In a two-player game, the amount of fuel and ammunition is the same for both players and should be decided upon before play begins. When you play against the computer, your fuel and ammunition supply is limited to either 12 or 18 units. . . the computer, however, has an unlimited supply. **IMPORTANT**, if you forget to select a Skill Level, the easier 18 unit level is automatically set by the unit.

4. Press the GO button. The destroyer and the submarine appear on the screen. The destroyer is composed of 3 squares and looks like this ; the submarine is composed of one square and looks like this .
5. Notice the Player Indicator at the top of the screen. In a two-player game, it moves from the "SHIP" label to the "SUB" label and back again to designate whose turn it is to move and fire. If you are playing against the computer, the Player Indicator only appears under your vessel label not the computer's.
6. Notice the Move/Fire Indicator on the left side of the screen. Each player's (or the computer's) turn is composed of TWO distinct segments of moving and firing. In a two-player game, the Move/Fire Indicator moves from the "1st" label to the "2nd" label and back again to designate which part of the segment you or your opponent are programming in. If you are playing against the computer, the Move/Fire Indicator only appears when you are programming in. . . it will not appear when the computer is entering its moving and firing patterns.

## HOW TO PROGRAM MOVING AND FIRING ACTION

On each turn. . . you, another player or the computer may program TWO distinct segments of moving and firing action for your vessel. Here's how you do it:

Look at the "Move" panel on the keyboard. Notice the 4 directions indicated by the 4 arrows. When you press one of these arrow buttons, you'll propel your vessel one square on the screen in the direction the arrow indicates. Remember, one square moved on the screen uses up 1 unit of fuel, so every move you make must be well-planned. **IMPORTANT**, if you press either the east arrow  or the west arrow , the destroyer will appear and move horizontally on the screen; if you press either the north arrow  or the south arrow , the destroyer will appear and move vertically on the screen. Look at the "Fire" panel on the keyboard. Notice the 4 directions indicated by the 4 arrows. When you press one of these arrow buttons, you'll fire 1 depth charge (if you're the destroyer) or 1 torpedo (if you're the submarine) in the direction the arrow indicates. Remember, every time you fire, you use up 1 unit of ammunition. . . so think before you shoot.

Now it's time to show you the sequence of moving and firing in the TWO segments. Take a look:

**1st Segment** Press one move direction button   
 Press the same or another move direction button  
  
 Press one fire direction button   
 Press the same or another fire direction button  
  
 Now press GO button to move into the 2nd Segment

**2nd Segment** Press one move direction button   
 Press the same or another move direction button  
  
 Press one fire direction button   
 Press the same or another fire direction button  
  
 Now press GO button to either start the Battle Action or to set up your opponent for his or her turn at programming.

**IMPORTANT, ON YOUR TURN, YOU MAY DO ALL OF THE ABOVE MOVE AND FIRE DIRECTIONS IN THE ORDER SHOWN, PART OF THE ABOVE MOVE AND FIRE DIRECTIONS IN THE ORDER SHOWN OR NONE OF THE ABOVE MOVE AND FIRE DIRECTIONS DEPENDING ON YOUR GAME STRATEGY.**

**PLEASE NOTE**, the GO button must always be pressed after the 1st Segment in order for you to move into the 2nd Segment. **VERY IMPORTANT**, in order for your turn to be completed, you must program **ALL OR PART OF THE 2ND SEGMENT**. . . **OR NONE OF THE 2ND SEGMENT AT ALL**. To program **NONE** of the 2nd Segment, just press GO button (your vessel will not move and not fire, in this case).

Why not try some practice programming at this point. If you have followed carefully Rules 1. to 6., the unit should now be ready to program.

Be sure to watch the screen to see the movement and firing action of whatever vessel you're programming. This Instant Display feature is invaluable, for if you see an action you do not wish to occur, just press the CLEAR button, erase that entry and begin to program the entire 1st Segment again with no penalty of wasted fuel or ammunition.

Here's your first practice program:

Press move button  
 Then press move button  
 Then press fire button  
 Then press fire button  
 The 1st Segment of programming is completed  
 Now press GO (Move/Fire Indicator moves to "2nd" on screen)  
 Now press move button  
 Then press move button  
 Then press fire button  
 Then press fire button  
 The 2nd Segment of programming is completed.  
 Your turn is over.

Here's another. Press CLEAR button during this practice session to start anew:

Press move button  
 Press fire button  
 The 1st Segment of programming is completed  
 Now press GO (Move/Fire Indicator moves to "2nd" on screen)  
 Now press move button  
 Then press fire button  
 The 2nd Segment of programming is completed  
 Your turn is now over.

Press CLEAR button just to delete above moves. Here's another practice program. Do the following when you want to remain in the same position and not fire:

Do not program in any move or fire directions. Just press GO button. Move/Fire Indicator moves to 2nd Segment. Even though your vessel did not move or fire, the 1st Segment is completed. Now if you want to stay in the same position and **NOT** fire again, press GO button again and the following happens:

In a two-player game, your 2nd Segment is completed. The Move/Fire Indicator moves back to the 1st Segment. Hand over the unit to your opponent for his or her first programming attempt.

In a you-versus-the-computer game, the 2nd Segment is completed, but by pressing the GO button, you've activated the Battle Action (see Rule 8. for more information).

The above are just a few possibilities. When you actually play the game, you'll devise many other variations.

Here's a closer look at the firing patterns of the destroyer and the submarine, shown in Diagrams 1. and 2. Notice the destroyer's firing power with the depth charge covers a 9 square area. . . the submarine's torpedo is only 1 square wide but it is not limited in distance as the destroyer.

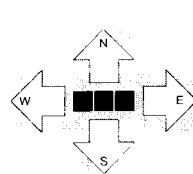 


DIAGRAM 1

Diagram 1 displays destroyer's firing patterns

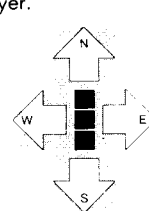 


DIAGRAM 2

Diagram 2 displays submarine's firing patterns

- Because Sea Duel is a game of strategic positioning, any programming you do must be hidden from your opponent. So after you secretly program the 1st and 2nd Segments of the moving and firing action, your turn is over. . . you then press the GO button and the following happens:

In a two-player game, the Player Indicator moves to the opposing vessel's label. The Move/Fire Indicator moves back to the 1st Segment. Your opponent takes the unit from you and secretly programs his or her TWO distinct move and fire Segments. Then your opponent presses the GO button and the Battle Action takes place on the screen. . . both players should observe this interaction!


In a you-versus-the-computer game, the opposing vessel's movements are automatically programmed by the computer. So as soon as you finish your programming and the GO button is pressed by you, the Battle Action takes place.

8. **BATTLE ACTION:** Sea Duel's Battle Action is unique Multiple Simultaneous Movement which displays the moving and firing action of both vessels together even though they were programmed separately. Here's what happens when a complete sequence of moving and firing action has been programmed: the vessels move into the firing positions that were entered for them in the 1st Segment of programming. . . the destroyer and the submarine fire alternately; then the 2nd Segment of programming action occurs. . . the vessels move into their firing positions. . . the destroyer and the submarine fire alternately. The Battle Action just described displays the complete sequence of moving and firing action that was programmed by both players. Remember, if you programmed only part of the sequence or none of the sequence, the Battle Action would display only what you programmed.
9. As soon as the Battle Action is over, the SCORE flashes on the screen. The Score is the number of successful hits you make against another vessel. In order to discover the amount of ammunition and fuel you have left, just press the SKILL/SCORE button before you begin to program. Notice the number of ammunition units will appear right above the "AMMO" label on the screen; the number of fuel units will appear right above the "FUEL" label on the screen. The number of successful hits (the SCORE) made by the destroyer will appear under the "SHIP" label and the number of successful hits (the SCORE) made by the submarine will appear under the "SUB" label. **IMPORTANT**, each player's ammunition and fuel supply should be kept secret from his or her opponent. Also, when playing against the computer, remember the computer has an unlimited supply of ammunition and fuel, so its amount never appears on the screen.
10. Continue to program and play as above. As soon as a Score of 6 or more hits is achieved by one of the vessels against another vessel, the game is over. When this happens, the SCORE will continuously flash on the screen.

#### HOW TO WIN THE GAME:

Whoever scores 6 hits or more against another vessel first wins the game. It is possible that a draw may result, if both players achieve the same score of 6 or more hits at the same time. If this happens, a new game is played to decide the winner. For another example of a draw situation, see Rule 3., under "Watch out for the Following. . ." on page 7.

#### WATCH OUT FOR THE FOLLOWING WHEN PLAYING SEA DUEL!

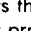1. Pay special attention to the GO button when programming. For example, if you wish to skip over the entire 1st Segment of moving and firing action, just press GO and you'll move right into the 2nd Segment of programming. If you press GO button again, you'll either start the Battle Action or set up your opponent for his or her turn at programming.
  2. If the CLEAR button is pressed when you are programming, it totally erases all previous programming of your turn. . . you are always returned to the 1st Segment to begin anew. **IMPORTANT**, you cannot press CLEAR button after your turn is over and after you have pressed the GO button. . . it will not be functional at this point.
  3. It is possible during the course of play that you will run out of either ammunition, fuel or both. . . if your "AMMO" score is "O", you cannot fire; if your "FUEL" score is "O", you cannot move. During programming, if you do run out of fuel, ammo or both, the SCORE automatically flashes on the screen and an "O" appears under "AMMO", "FUEL" or both. In a two-player game, if both players run out of fuel and ammo before one of the vessels has scored 6 or more hits, then a draw is declared. In a you-versus-the-computer game, if you run out of fuel and ammo and neither vessel has scored 6 or more hits, the computer is declared the winner.
  4. **HERE'S AN IMPORTANT GAME PLAY CAUTION:** it is possible for the submarine to actually be underneath the destroyer before programming and during Battle Action. If this happens, you will see only the 3 unit destroyer which looks like this  on the screen. Don't be alarmed, though, for the submarine is present directly below the destroyer. In this position, if the destroyer fires, the submarine will not be hit; but if the submarine fires (as shown in the diagrams, below) it will hit the destroyer.
- The **X** represents the location of the submarine under the destroyer. In Diagram 3, if the submarine is positioned under the middle unit of the destroyer, it can only fire in the directions indicated by the solid arrows for a hit; the directions indicated by broken arrows represent misses. In Diagrams 4 and 5, the submarine is positioned under one of the end units of the destroyer. In these positions, the sub fires in the directions of the solid arrows for hits. . . unfortunately, if the sub fires in the directions of the broken arrows, the result is a miss!

 


DIAGRAM 3

 


DIAGRAM 4

 
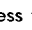
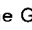


DIAGRAM 5

5. After a game is over, to start a new game just press the GO button. The PLAYER  and COMPUTER  symbols appear for you to select a certain style of play.