

COMDIAL

ExecuTech XE Key System

System Manual

This publication is applicable for the following common equipment:

NO820	Rev P and later	SW release 2.8 and later
N1024	Rev P and later	SW release 2.8 and later

Table Of Contents

Chapter 1 System Description	1-1
Section 1 Technical Documentation For The XE System	1-1
Manual Scope	1-1
Related Publications	1-1
Section 2 System Specifications For The XE System	1-2
Section 3 General information About the XE System	1-4
XE System Configuration	1-4
Common Equipment Description	1-5
Description Of XE System Supported Telephones	1-6
Description Of The Optional DSS/BLF Console	1-6
Chapter 2 Description Of System Features	2-1
Chapter 3 Installation	3-1
Mounting The System Equipment	3-1
Mounting Considerations	3-1
installation Notice	3-1
Mounting Procedure	3-2
Connecting The Power And System Grounding	3-4
AC Power Connection	3-4
Battery Back-Up	3-4
System Grounding	3-4
Connecting The Outside Lines To The System	3-6
Connecting Telephones To The System	3-8
Connecting Multiline Telephones	3-8
Connecting Single-Line Proprietary Telephones	3-8
Connecting industry-standard Telephones	3-8
Connecting The Optional DSS/BLF Console	3-8
Providing Off-Hook Voice Announce With Handsfree Answerback	2-9
Connecting A Power Failure Telephone	3-13
Connecting the Common Audible And Auxiliary Station Interface (Station 17 Audible)	3-14
Connecting The External Paging Interface At A Station PA Port	3-15
Connecting the External Paging Interface At A Line Port	3-16
Connecting Equipment At The Auxiliary Equipment Interface	3-17
Connecting Equipment At The Auxiliary Equipment Interface	3-17
Connecting Equipment To The Music Interface	3-17
Section 2 Checking Out The System Installation And Isolating Any Failures	3-18
Checking The installation	3-18
Isolating Failures	3-19
Section 3 Understanding Installer/User Information Regarding FCC Rules And Regulations	3-20
Chapter 4 System Programming	4-1
Section 1 Introduction To XE System Programming	4-1
Section 2 Class Of Service Programming	4-6
Section 3 Attendant Programming	4-20
Night Transfer (Of Ringing)	4-20
Music On Hold	4-20
System Speed Dialing	4-20
System Clock	4-20

Table Of Contents - **continued**

Chapter 5 System Operating Procedures	5-1
Section 1 Operating Multiline Telephones	5-1
Answering Calls	5-1
Making Calls	5-1
Holding Calls	5-3
Transferring Outside Calls	5-4
Making Conferencing Calls	5-5
Using The Message Waiting Light	5-5
Blocking Voice Announce Intercom Calls	5-5
Monitoring A Line	5-6
Signalling With Recall Or Flash	5-6
Making Page Calls	5-6
Engaging The DoNot Disturb Condition	5-6
Muting Your Telephone And Inhibiting Handsfree Answering	5-7
Switching Between Pulse And Tone Dialing	5-7
Choosing Personal Ringing Tones	5-7
Turning On Background Music	5-7
Operating A Speakerphone	5-8
Programming A Station	5-8
Section 2 Operating The Attendant Station	5-10
Setting The System Clock	5-10
Programming The System Speed Dial	5-10
Engaging the Night Transfer (of ringing)	5-10
Controlling The Music On Hold	5-10
Section 3 Operating Single-Line Telephones	5-12
Answering Calls Ringing At Your Telephone	5-12
Answering Calls Ringing At Another Telephone (Call Pickup Answering)	5-12
Making Calls	5-13
Holding Calls	5-14
Transferring Outside Calls	5-14
Making Conference Calls	5-14
Using The Message Waiting Light	5-15
Making Page Calls	5-15
Switching Between Pulse And Tone Dialing	5-15
Programming The Station Speed Dial	5-15
Section 4 Understanding The System Operating Characteristics	5-16
Using The Feature Dialing Code Numbering Plan	5-16
Setting The Ringer Volume Control	5-13
Understanding The Status Indicators And Tone Sequences	5-13
Chapter 6 Maintenance	6-1
Technical Assistance And Repair Service	6-1
Fuse Location	6-1
Wiring	6-1

List Of Illustrations

Figure 1-1. Outline Dimensions - Common Equipment I-5

Figure I-2. Station Outline Dimensions I-7

Figure 1-3. Station Images 1-8, 1-9

Figure 3-1. Mounting The Common Equipment 3-3

Figure 3-2. Connecting The Power and System Grounding 3-5

Figure 3-3. Connecting The Lines 3-7

Figure 3-4. Connecting The Telephones 3-11

Figure 3-5 Connecting A Secure Off-HookVoice Announce Telephone 3-12

Figure 3-6. Connecting A Power Failure Station 3-13

Figure 3-7. Connecting The Common Audible and Auxiliary Station Interface 3-14

Figure 3-8. Connecting the External Paging Interface At A Station PA Port 3-15

Figure 3-9. Connecting The External Paging Interface At A Line Port 3-16

Figure 3-10. Connecting Equipment At The Auxiliary Equipment Interface 3-17

Figure 3-l 1. Connecting Equipment To The Music Interface 3-17

Figure 4-1. Program Button Locations 4-3

Figure 4-2. System Programming Block Diagram 4-4, 4-5

Figure 5-1. Controls and Indicators 5-1 1

List Of Tables

Table 3-1. Line Connections 3-6

Table 3-2. Station Connections 3-10

Table 3-3. Voltage Measurements 3-18

Chapter 1 System Description

Section 1 Technical Documentation For The XE System

Manual Scope

This publication contains a complete description of the **ExecuTech** model XE electronic key system with multiline and single-line proprietary plus industry-standard telephone support on certain station ports. The manual is divided into the following chapters:

- System Description
- Feature Description
- Installation
- System Programming
- System Operation
- Maintenance

Related Publications

Related publications that contain additional information applicable to this electronic key system are available from the manufacturer and are identified by the following designations:

General Information

- IMI 01-005 Handling Of Electrostatically Sensitive Components

User Information

- GCA 70-1 10 Attendant Guide
- GCA 70-1 11 Station User Guide

Installer Information

- IMI 66-065 Class Of Service Programming Chart

Section 2 System Specifications

SPECIFICATION	MODEL NUMBER	
SYSTEM CAPACITY	NO820	N1024
LINES:	8	10
STATIONS:	20	24
DSS/BLF CONSOLES:	10	62
INTERCOM PATHS, MAXIMUM SIMULTANEOUS INTERCOM CONVERSATIONS:	7	6
POWER REQUIREMENTS		
(Fully loaded system)		
AC POWER:	117V +/- 10 % Singlephase - all models	
	8A	
	65W	
	80VA	
DIMENSIONS (approximate)		
COMMON EQUIPMENT:		
WIDTH (inches):	15.750	
HEIGHT(inches):	24.000	
DEPTH (inches):	3.0	
WEIGHT (pounds):	20.5	
PROPRIETARY STATIONS:		
FOOTPRINT (inches):	6.5 x 8.5	
WEIGHT (pounds):	1.9	
STATION CABLE REQUIREMENTS		
TYPE:	Twisted, non-shielded, #24AWG	
MAXIMUM LENGTH:	1500 feet for proprietary telephones 2000 feet for 1 (or 2 in parallel) model 2500 industry-standard telephone	
SWITCHING PRINCIPLE:	Solid-state, space-division analog switching with stored program control	
OPERATING ENVIRONMENT		
TEMPERATURE:	32-122 degrees F (0-50 degrees C)	
HUMIDITY:	90 percent relative, non-condensing	
TERMINATIONS		
LINE:	Standard, 6-conductor minijack (USOC RJ14C)	
STATION:	Standard 50-pin female connectors for connection to external distribution field	
IST PORTS:	2 (station ports 26 and 28)	

MUSIC INTERFACE

INPUT LEVEL: 3 Volts peak-to-peak maximum
 INPUT IMPEDANCE: Approximately 500 Ohms
 CONNECTOR: RCA phono jack

CENTRAL OFFICE LIMITS

LOOP LIMITS: 1900 Ohms maximum loop
 CABLE INSULATION
 LEAKAGE: 15000 Ohms minimum

INDUSTRY/REGULATORY
STANDARDS:

FCC Certified, part 15 (Class A)
 FCC registered (fully protected)
 Listed by OSHA-accredited, nationally recognized, test laboratory
 EIA RS478
 Bell publication 48002 guidance
 Hearing aid compatible handset

MEMORY RETENTION
AFTER POWER LOSS:

30 hours minimum (typically 200 hours)

FCC REGISTRATION NUMBER:

CVW7WC-12829-KF-E

RINGER **EQUIVALENCE** NUMBER:

0.4B

PRODUCT CODE:

*NOTE: These product codes become **K0820**
 and **K1024** when installers add a
 PCCXI conversion kit to them.*

Common Equipment

NO820 8-line, 20-station
 N1024 1 O-line, **24-station**

ExecuTech Proprietary Telephones

6700S **12-line** LCD speakerphone
 6701 X single-line
 6702X **2-line** monitor
 6706X **6-line** monitor
6714S **14-line** speakerphone with SOHVA
 6714X **14-line** monitor with SOHVA

Optional ExecuTech Proprietary Telephones

6614E 10 x 14 monitor with SOHVA (Rev. D and later)
6614T 10 x 14 speaker with SOHVA (Rev C and later)
 6620E 5 x 20 monitor with SOHVA (Rev D and later)
 6620T 5 x 20 speaker with SOHVA (Rev I and later)

Industry-Standard Telephones (station ports 26 and 28 only)

Comdial 2500
MaxPlus 3879X and **3979X**

DSS/BLF Consoles

EB32X 32-button console
DB32S 32-button console with call announce speaker

LCD Conversion

PCCXI Conversion kit
 6600E LCD speakerphone with SOHVA (Rev B and later)

Software Upgrade Kit

PSUXIQ NO820 and **N1024**

Section 3 General Information About the XE System

XE System Configuration

The model XE electronic key telephone system consists of an electronic key service unit (KSU), often referred to as common equipment, dedicated electronic telephones, and interconnecting wiring consisting of small, 4- or 6-conductor, twisted-pair cable.

The station and line capacity of the XE systems are per the following chart.

MODEL NO.	CO/PBX CAPACITY	STATION CAPACITY
NO820	8	20
N1024	10	24

The model XE telephone system is full featured, and supports a specially designed group of multiline and single-line proprietary telephones (product code series of 67xxx-xx) described on page 1-6. It also supports ExecuTech multiline telephones with product codes of: 6614E, 6614T, 6620E, 6620T, 6414 and 64148. (If a product code 6414S-xx is used, a moderate volume setting may be required to avoid the possibility of a squeal being sounded through the station speaker during call announce and/or background music operations.) Along with the proprietary telephones, the XE system supports the use of industry-standard telephones (such as the Comdial 2500) at two of its station ports (ports 26 and 28).

An LCD upgrade kit that includes an integrated circuit clock is available for the XE system to allow it to

support the operation of an ExecuTech LCD speakerphone (product codes 6700S or 6600E). The product code for this LCD upgrade kit is PCCXI. This kit is available through normal distribution channels for field installation by trained technicians. The product code of the XE system changes from Nxxxx to Kxxxx when the technician installs the LCD upgrade kit. The new product codes become K0820 and K1024.

The LCD speakerphone provides the following feature displays for the user's convenience:

- Time and Date
- Call Duration Time
- Do Not Disturb
- Line Identification When Chosen Followed By The Numbers Dialed
- Intercom Calling Party Identification
- Intercom Number Dialed
- Re-display Of Call Time Of Last Call When HOLD button Is Pressed

A software upgrade kit is available for field installation by trained technicians. The EPROM chip supplied in this kit will revise the operating system software of the XE system to the latest factory issued level. The product code for the software upgrade kit is:

PSUXI-2 for NO820 and N1024

The software upgrade kit is available through normal distribution channels.

General Information About The XE System - continued

Common Equipment Description

The common equipment is a fully electronic device. It is essentially a special purpose computer system acting as a communications controller between central office (CO), private branch exchange (PBX), or CENTREX supplied lines and the proprietary telephone stations. The software architecture of the

common equipment provides complete system support and great flexibility of operation.

The common equipment is contained in a functional, modern-style metal housing of contemporary design in keeping with the needs of the modern office environment. It is engineered to be wall or rack mounted. The outline dimensions of the common equipment cabinet are illustrated in **Figure 1-1**.

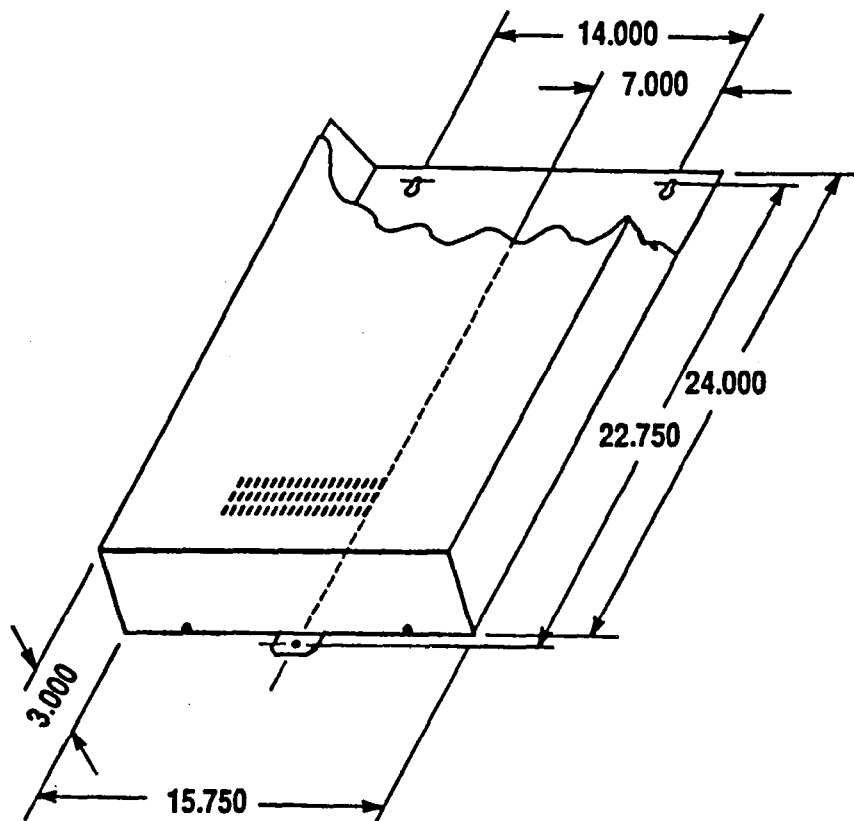


Figure I-1. Outline Dimensions - Common Equipment

General Information About The XE System - continued

Description Of XE System Supported Telephones

The model 67xxx-xx telephone stations are electronic, microprocessor-controlled devices. They allow not only multiline pickup but also single button access to features available from the serving CO, PBX, or CENTREX switch as well as the common equipment. The outline dimensions of the system stations are illustrated in Figure 1-2 and the images are illustrated in Figure 1-3.

The multiline telephones provide the following features:

- Full modular connection
- Four fixed feature buttons with indicators
 - SPKR
 - MUTE
 - HOLD
 - ITCM
- Two fixed feature buttons without indicators
 - TAP
 - TRANS/CONF
- Programmable buttons with and without indicators
- 7-foot, 4-conductor line cord
- 6-position, 4- or 6-conductor modular line jack
- K-type handset (hearing aid compatible)
- Ringer volume control (Off, Low, and High)
- Desk/wall reversibility

The single-line proprietary telephone provides the following features:

- Standard 3x4 metropolitan dial
- Two feature buttons: SHIFT/HOLD, TAP
- One status indicator (message waiting light)
- Ringer volume control (high/low)
- 7-foot, 4-conductor line cord
- 4-position line jack
- Desk/wall reversible mounting

Description Of The Optional DSS/BLF Console


The DSS/BLF console is an optional device designed to be a companion to a system attendant station in high call volume situations that require a dedicated

call transfer location. The console provides a direct station selection (DSS) intercom, and an associated busy lamp field (BLF). It also provides one-key access to all-call when that feature is available.


You can install a console at any other station port to work in conjunction with a companion telephone connected to the adjacent paired port.

The model EB32X-xx, DB32-xx, DB32S-xx, DB40-xx and DB70-xx DSS/BLF consoles are all compatible with the XE system. You must program the station port to which they are connected as a DSS/BLF console port. The console buttons are fixed for DSS/BLF operation beginning with station 10 and ending with the maximum station number in the system; however, they also provide **autodial** locations at a second level of storage (accessed with the HOLD button function). Additionally, any buttons that are from a number that is beyond the station capacity of the system through a maximum of 32 are available as **autodial** locations at the first level of storage. For example, a model N1024 key system and a EB32X-xx or DB32-xx console will fix the first 24 console buttons as DSS/BLF buttons, and provide the remaining eight buttons as **autodial** buttons. Plus, it will provide **autodial** locations at the second level of storage for the first 24 buttons. This means that it provides a total of 32 **autodial** storage locations. For larger consoles, any buttons beyond a maximum of 32 are blanked. Since the XE system has a maximum capacity of 24 stations, Comdial does not recommend the use of the larger consoles such as DB40 and DB70 because these consoles will show a large quantity of blanked buttons.

You can use the DB32S-xx Adjunct Feature Module to provide off-hook voice announce (OHVA) to a station already busy on a call and allow subsequent handsfree answerback (HFAB) by that station user. The DB32S-xx Module can serve as a DSS/BLF console at the same time if desired. You must program the station port to which the Adjunct Feature Module is connected to enable the equipment operation. When your site requires both DSS/BLF and OHVA operation, program the station port as an Off-Hook Call Announce port. When your site requires only DSS/BLF operation, program the port as a DSS/BLF Console port.

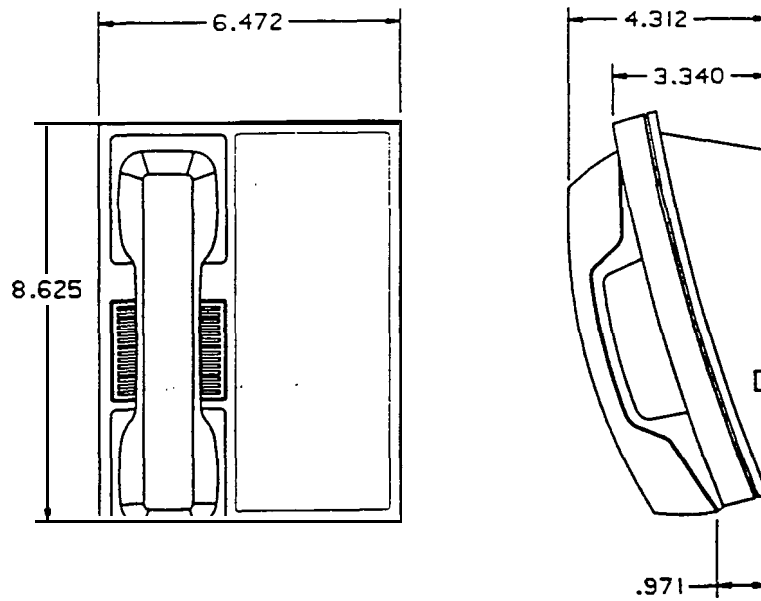


(Model Code 67xxx-xx)

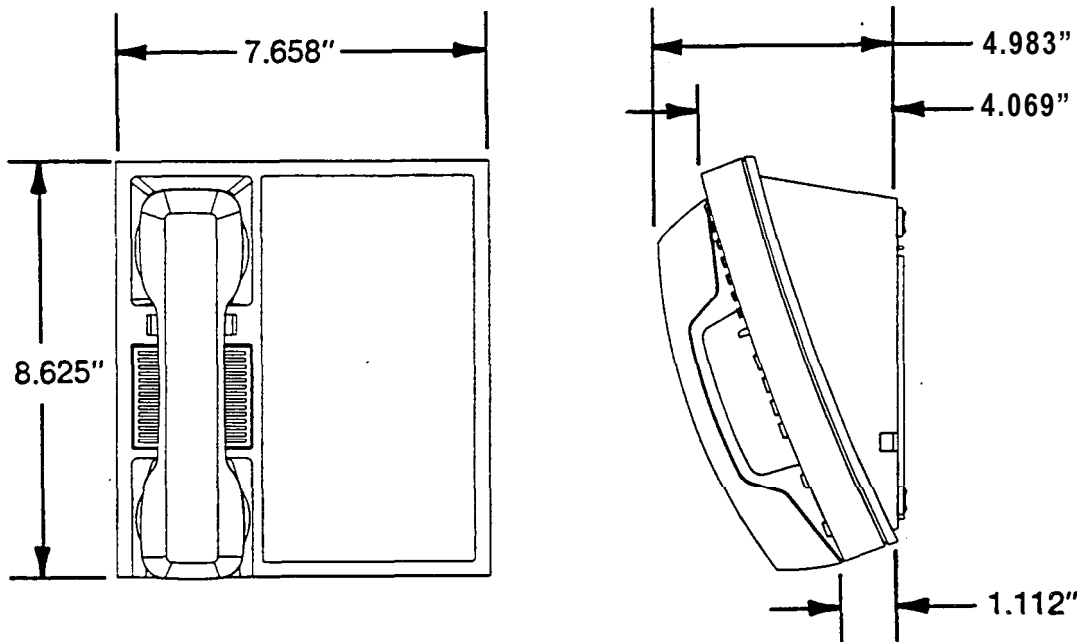


(Model Code 66xxx-xx)

Figure 1-2. Station Outline Dimensions


Description Of XE System Supported Telephones - continued on next page. . .

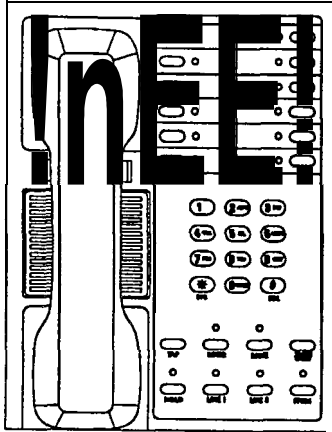


**14-Line Monitor Telephone
(6714X)
14-Line Speakerphone
(67148)**

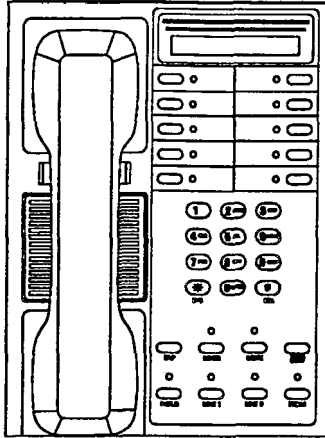


**12-Line LCD Speakerphone
(6700S)**

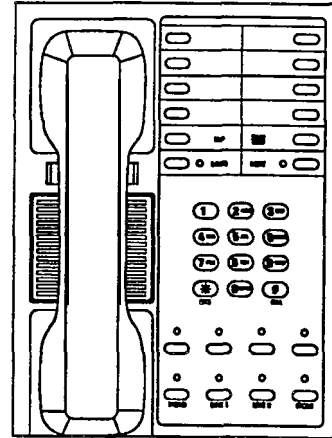


**6-Line Monitor Telephone
(6706X)**

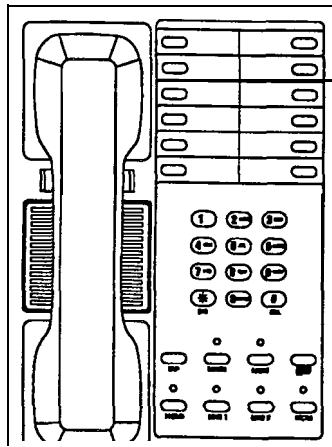

**2-Line Monitor Telephone
(6702X)**

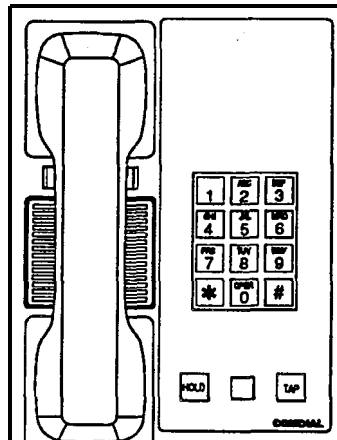


**Single-Line Proprietary
Telephone (6701X)**

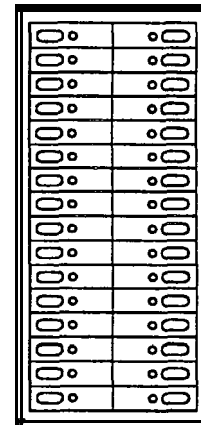


**DSS/BLF Console
(EB32X)**


Figure 1-3a. Station Images (Model Code 67xxx-xx)

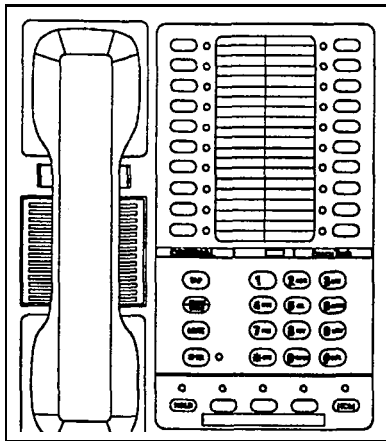


**5 x 20 Image Telephone
(6620E, 6620T)**

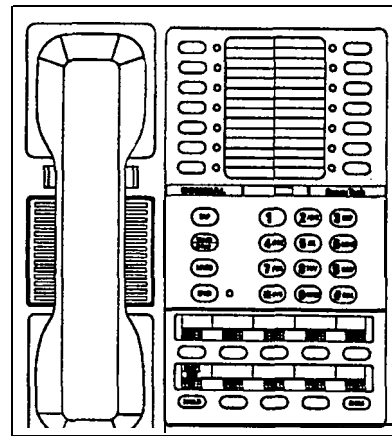


**10 x 14 Image Telephone
(6614E, 6614T)**

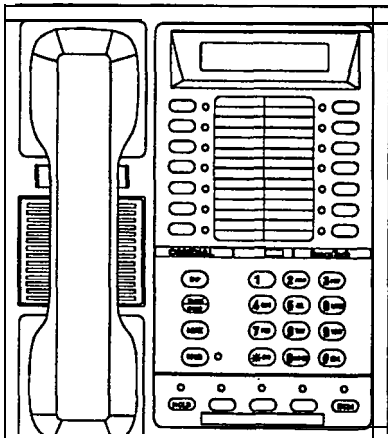

**5 x 14 Image LCD Speakerphone
(6600E)**

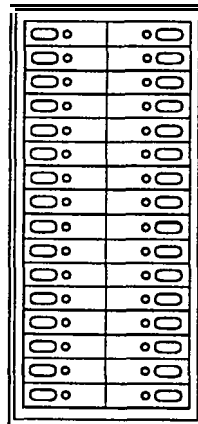

**32-Button Console
Adjunct Feature Module
(DB32S)**

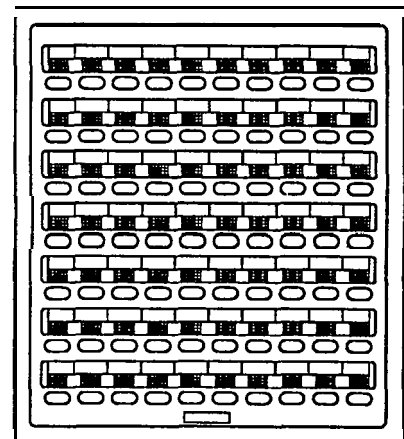

**10-Button DSS/BLF Console
(DB70)**

Figure 1-3b. Station Images (Model Code 66xxx-xx)

Chapter 2 Description Of System Features

Access Denied

Access to particular lines can be denied at certain stations in the system through system programming. This feature is programmable on a per line/per station basis as part of system or administration programming.

Add-On Conference (2 Internal, 1 External Parties)

This system feature allows a station, while operating in a private mode, to add another station to an outside call.

All-Call Paging (via Station Speakers)

All-call paging allows all of the stations to receive announcements at the same time through the station speaker. Origination of announcements must be via a station handset. Each station can be programmed to receive and/or to originate an all-call page. The system default condition is that all stations have both receive and originate capability. The arrangement of paging as all-call is controlled by both system and administration programming. See the discussion titled *Zone Paging (via Station Speakers)*.

All Intercom Links Busy Indication

When all intercom paths are busy, the system causes the intercom light at each station to be on steady.

Autodial

Each multiline station provides programmable dialing features. Programmable buttons can be programmed to store numbers for automatic dialing purposes. The stored numbers can be up to fifteen digits in length and can include line or intercom selection, numbers, #, *, pauses, and flash signals. A pause is stored each time the HOLD button is pressed, and a flash signal is stored each time the TAP button is pressed. The pause and flash intervals are programmable. Any programmable button that does not have a line assignment can be programmed as an auto dial. Additionally, an auto dial number can be stored as a secondary function at every button programmed for direct station selection. Often used host PBX or **CENTREX** feature access codes can be stored at a programmable button location to provide one-button access to the features. Also refer to the discussions titled *Automatic Pause In-*

sertion, Station Speed Dial, and Programmable DSS/BLF.

Auto-Save Feature

The auto-save feature can be **used** to save the last manually dialed number at any unprogrammed button or at a specific button that was previously reserved for this purpose. The button chosen for auto-save must be blank and not currently programmed as a DSS button, line select button, or auto dial button. An auto-save can be made at a button previously used as an auto-save button; however, the previously stored number will be over-written. As many manually dialed numbers can be saved in this manner as there are separate unused buttons to be used for storage. If a dialed number is longer than 15 digits, two or more buttons can be used to save portions of it for later chain dialing.

Automatic Abandoned Hold Release

If a distant party abandons a hold condition and disconnects, the central office (CO) will send a forward disconnect signal to the telephone system. When the key system detects this signal, it will drop the line from the hold condition and return it to service. The **forward** disconnect signal may be either 50 msec. or 350 msec. and the key system is programmable to match this time interval. Both the system and the administration programming can be used to set the time interval between hang-up and line-drop.

Automatic Hold Transfer To Intercom (Answer Hold)

If the intercom line is selected while an outside line call is active, this system feature causes the outside call to be automatically placed on hold.

Automatic Pause Insertion

When the system stores a dialed number for later **redial**, it automatically stores a pause whenever the user waits between digits. The automatic pause is inserted in the stored number sequence at the point where the manual pause in dialing occurred. The wait time is programmable between 2 sec. and 750 msec. The wait period is programmable by system or administration programming.

Automatic Privacy (Programmable)

A line can be made private or non-private through class of service programming. In the private mode, a station has exclusive use of the line during a call. No other station can access that line unless it is included through the use of the add-on conference feature. In the non-private mode, all stations with that line appearance can gain access at the same time (sometimes known as common line pickup). A line **is** specified as private or non-private through system or administration programming. Also see the discussion titled **Add-on Conference And Privacy Release**.

Automatic Redial (Of Busy Number Or Unanswered Call)

Automatic redial of the last dialed number can be made available at every station through button programming. In most cases, the station user must program a button for use as an auto redial button; however, some telephone models provide an A1 6 button as part of the A-button field and this **provides** an auto redial function as a fixed feature. With this feature, a busy number or an unanswered call can be redialed repeatedly. Once automatic redial is activated, the station will select the line, automatically dial the number, and wait for a response. **It** will do this once a minute for approximately 10 minutes. The user must lift the handset to take immediate control if the call is completed. Users of the optional speakerphone station can take control by pressing the SPKR button instead of lifting the handset.

Auxiliary Equipment Interface

A non-key system telephone device or data device can be connected ahead of the common equipment on certain line ports across the tip and ring leads. Special terminals in the line jack are provided for this purpose. The system can detect an off-hook condition in the connected device, and turn on the line status light at the key system telephone stations with access to the line to indicate the busy **condition**.

Auxiliary Station Ringer Interface

The auxiliary station ringer interface provides "dry-contact" relay closures whenever station **17** rings. The contact closures track the ringing pattern of station **17**, and can be used to control an external **signalling** device. When a particular station port is programmed to function as a PA port, the auxiliary ringer interface relay contacts automatically become supervisory contacts. They close when the PA port is called. In this configuration, they are used to enable an external PA

system. Also refer to the discussion titled **Common Audible Ringer Interface**.

Background Music

If an external music source is provided, background music can be turned on and off at individual stations. Background music automatically turns off during calls. Also refer to the discussion titled **External Music Source**.

Basic Key Service (1A2)

The system provides all of the basic, **1A2-type**, key service features. These features are: selective line pickup, common line pickup, multiline pickup, and hold.

Battery Back-Up (Chassis, Cable, And Batteries)

Battery back-up assemblies including chassis, cable, and battery are offered as optional kits (available from **Comdial**). The assemblies are designed to connect directly to the **un-interruptable** power source (UPS) interface located on the common equipment chassis. No user intervention is required with this feature, and no class of **service** programming **is** required.

Battery Back-Up interface

Provision has been made for attaching a **Comdial** provided optional battery back-up kit to give full **uninterruptable** system power in case of an AC power loss. The switching and trickle charge circuitry are in the common equipment, while batteries, chassis, and cable are packaged as a separate option. When plugged into an active AC power source the common equipment will constantly charge the attached **batteries** with a trickle current. Built-in circuitry automatically switches to battery power when AC power is **lost**. **With** batteries at full charge, a fully loaded system will operate for a minimum of one hour without AC power. No class of service programming is required.

Call Announce With Handsfree Answerback

The **internal** speaker at each **multiline** station provides call-announce capability over the intercom link. A handsfree response to a call-announce call can be made. This response is transmitted by the microphone built into the handset. Also refer to the discussion titled **Voice Announce Blocking**.

Call Pickup - Directed

A user at any station can dial a special prefix code, followed by the number of a ringing station, to answer a ringing call at that station.

Call Pickup - System

A user at any station can dial a special code and answer a ringing call at any station in the system. The feature can be enabled or disabled by system or administration programming.

Call Transfer - Screened

Screened call transfer allows outside calls to be transferred from one station to another, via the intercom link, in one of two ways. If both stations have access to the line, a common line pickup transfer can be effected. If the other station does not have access to the incoming line, transfer can still take place using the system transfer feature. For a screened transfer, a call is transferred to another station with a pre-transfer announcement by the transferring party. Transferring of calls is accomplished with the T/C (TRANSFER/CONFERENCE) button.

Call Transfer - Unscreened

An active call can be transferred to another station without being announced. The transferred call will ring the other station and await an answer. The call will automatically ring back to the transferring station after a programmable recall period. A transferred call will only ring if the station is idle. If the other station is busy on intercom or is already ringing with another call, the transferred call will immediately recall the transferring station. If the other station is idle or has background music enabled, it will start ringing immediately. If it is in any other state, it will not ring until it returns to an idle state.

Calling Station Identification

If the station number of a calling station has been programmed into the DSS/BLF of a called station, the calling station will be identified by the flashing BLF light at the called station. The lights adjacent to programmable buttons indicate status of DSS telephones: dark = idle, steady-on = in use, and flash = calling.

Class Of Service Programming (Each Line And Station)

Each line and station in the system can be programmed with a unique class of service operating condition. Class of service programming can be performed using instructions provided in Chapter 4.

Class Of Service Programming (From Main Station)

Both system and administration class of service (COS) programming is performed from station 10 after a base level programming step is entered. System COS

programming is used by the installer to configure the system and assign the line conditions. Administration COS programming is used by the on-site administrator to re-configure the system as required. Line condition assignment is not a part of administration programming. Refer to Chapter 4 for programming details.

Common Audible Ringer Interface

Connections are available at the key service unit which provide "dry-contact" relay closures whenever an incoming line rings. These contact closures track the ringing pattern and can be used to control an external signalling device. When a particular station port is programmed to be a PA port, the common audible ringer interface contact points automatically become supervisory contacts which close when the PA port is called. In this configuration, they are used to enable an external PA system. Also, see the discussion titled *Auxiliary Station Ringer Interface*.

Default Functional Program

At initial power up of the system, the operating features are set to a specific group of operating conditions (default conditions). The default conditions provide a complete operating system for normal use. The system can be left as a defaulted system or operating conditions can be reprogrammed if desired. A system can be **defaulted** at any time using the master clear procedure included with the system class of service programming; however, this action also clears all user stored auto dial and speed dial numbers.

Delayed Ringing

Refer to the paragraph titled *Flexible Ringing Assignments*.

Dial 0 For System Attendant

The system attendant station (station 10) is signalled whenever the digit 0 is dialed on the intercom line.

Direct Station Selection Intercom

Refer to the discussion titled, *Programmable DSS/BLF*.

Distinctive Ringing

The ringing cadence of an incoming call is the same as the ringing cadence of the TELCO, PBX, or CENTREX system. The **ringing** cadence of an intercom call presents two tone bursts sounded every 4 seconds.

Do Not Disturb

Any station can be set to a do-not-disturb mode using the SPKR button. While in this mode, the station will not ring on any incoming call nor will it accept an intercom call. A party making an intercom call to a station set in the do-not-disturb mode hears a fast busy tone. The feature cannot be overridden by the calling party.

DSS/BLF Console (Optional)

The DSS/BLF Console is designed to be a companion to any system station. It is useful with high call volume systems which require a dedicated call transfer location. The console provides a one-button direct station selection (DSS) intercom and an associated busy lamp field (BLF). It also provides one-button access to system-wide, all-call paging. The console is designed to be connected to any station port and serve as a companion to the station connected to the adjacent data-paired port. System or administration programming is used to program a station port as a DSS/BLF port.

End To End Signalling On Intercom

After an intercom call has been established, the system can continue to send dialing signals (DTMF tones) through the intercom path to station ports that are programmed as OPX unit ports. This feature can be performed from every station in the system, and is used by peripherals such as an OPX unit and voice mail equipment.

End To End Signalling On Lines

After an outside call has been established, the system can continue to send dialing signals (DTMF tones) through the **telco** network and have them received at the distant end for inward call completion (bank by phone, etc.). This conventional, off-hook dialing feature can be performed from every station in the system. No class of service programming is required.

Exclusive Hold

Exclusive hold prohibits a held call from being retrieved by any other station. The exclusive hold condition also links the held call to the timed hold recall timeout feature. After timeout, audible and visual **sig-**nalling will occur and the exclusive hold condition will revert to a normal line hold condition. System or administration programming can enable this feature.

External Paging Interface

A station port or line port can be programmed to interface with an external paging amplifier. The paging amplifier can then be dial accessed through the station port or directly accessed through the line port from other stations in the system. DTMF tones can be dialed through the interface to make a zone selection if zone paging is provided by the external paging amplifier. System or administration programming can be employed to program a station **port** as an external paging port. Only system class of service programming can be used to program a line port as an external paging port.

Extended Dual Tone Multiple frequency (DTMF) Tones

The model XE telephone system can access answering machines, banking computers, voice mail equipment, etc. that require DTMF tones that are longer than the standard one with a 50 ms. on and off time. A shift to a longer tone of preprogrammed length is automatically made 10 seconds after a line is selected or 10 seconds after the last digit is dialed. A user can **shift** from one tone length to the other by pressing the HOLD button and then selecting the line again. While the off-time of a DTMF tone is maintained at 50 ms, the class of service programmer can increase the **on-**time 80 ms. so that he or she can program even longer DTMF tones. Normally a short DTMF tone gives satisfactory results but **if** a longer one is needed, the programmer should choose the one **with** the shortest tone duration that is necessary. DTMF generation is a system feature and if several stations are using the extended DTMF feature at the same time, a delay in the time between button press and tone sound may be noticed.

Flexible Line Assignment

Refer to the discussion titled Square/nor?-Square **Sys-**tern.

Flexible Ringing Assignments

Ringing assignments are programmable on a per station/per line basis. Ringing can be controlled for **every** line that has an appearance at each station. Direct, or immediate, ringing can be programmed for some assigned lines and delayed ringing programmed for others. Direct or delayed ringing is programmed through system or administration programming.

Handsfree Answer inhibit

The MUTE button on a **multiline** station can be used to block all handsfree answerback response. This arrangement will prevent a station user from monitoring another station site using the monitoring ability of the voice announce feature. When the button is pressed, all handsfree answerback is disabled thus inhibiting any off-site monitoring. The speaker light will flash to indicate that this feature is active. Also refer to the discussion titled *Mute*.

Headset interface

A station port can be programmed to allow the operation of special telephones which provide the user with a headset option. Programming for this feature is through either system or administration programming.

Hearing Aid Compatible Handset

The station handset is compatible with **magnetically-coupled** hearing aids.

Idle Line Preference

The system can be programmed on a per station basis to enable idle line preference. When idle line preference is enabled, taking the handset off-hook will automatically connect the station to any assigned line that is idle and has been arranged for this feature. The line button will not have to be pressed. This feature is mutually exclusive with prime line automatic. Programming for this feature is through either system or administration programming.

Hold And I Use indications

The light associated with a line button provides a visual indication of the status of that line. When a station user has a line in-use or on-hold at a station, the light indication provided at that station is of a different flash rate than the indication provided at the other stations in the system.

Industry-Standard Telephone

The XE system supports an industry-standard telephone on station ports 26 and 26. **The industry-standard** telephone provides its user with outside line access and basic intercom service plus access to system features through special dialing codes. At **default**, the telephone provides intercom line access when the user takes it off-hook. With either prime line alone or prime line and idle line preference enabled through programming, the industry-standard telephone provides an outside line when the user takes it **off-hook**. After going off-hook and receiving outside line dial tone, the user can get the intercom line by **press-**

ing and releasing, or flashing, the hookswitch (or by pressing the TAP button if the telephone includes one). If he or she dials no digits after taking the telephone off-hook, the system drops the outside line when the user flashes the hookswitch; however, if the user dials digits after taking the telephone off-hook, the system places the outside line on hold when the user flashes the hookswitch. The class of service programmer must designate the two station ports as OPX ports to support the operation of industry-standard telephones.

Intercom Call Progress Tones

Intercom call progress is marked by special tones. A steady tone is provided for dial tone. For tone **signalled** intercom calls, a two-tone burst is sounded every four seconds at a called station and returned to the caller as ring-back. For a voice signalled intercom call, a single tone burst is sounded at a called station and returned to the caller as ring-back. When a called station is busy on an outside call, the feedback supplied to the caller is programmable with class of service programming. This feedback can be either a ring-back tone or a busy tone. When set for ring-back tone, the called station sounds subdued ringing during the call. When a called station is busy on the intercom, a busy signal of one tone burst sounded each second returns to the calling station.

Intercom Line Lockout

Refer to the discussion titled *Voice Announce Blocking*.

Intercom Line Timeout

Should the intercom line be selected with no dialing or other action taking place, the intercom will timeout after ten seconds, and return to an idle state.

Last Number Redial

Each station is provided with a last number redial feature. This feature will save thirty **digits** of the last outside number dialed. A newly dialed number will always automatically replace a previously dialed number. Upon command, the system will choose a line and redial the saved number. The system will first choose the prime line if assigned and idle. If it is busy or unavailable, the system will choose any line assigned to idle line preference. If they are unavailable, the system will choose the last line used at the station. If it is busy, no further choice is made. Also refer to the discussion titled *Automatic Pause Insertion*.

LCD Support

The common equipment can be field modified with an optional up-grade kit which allow the system to support the use of LCD speakerphones having a Liquid Crystal Display (LCD). The LCD speakerphone ports are identified by system or administration programming.

When a system is modified, the model code of **it** is changed from an N prefix to a K prefix (that is **N1024-IST** becomes **K1024-IST** for example).

Line Preselection

A line can be manually selected before lifting the handset (for handsfree dialing) or after the handset is lifted.

Line Type

A line port is programmed as to type. The program type is chosen based upon the toll restriction that is to be applied to calls made over the line connected to that port. A line port is assigned as type 1 when any enabled toll restriction is to be applied with the first digit dialed. Such a line type is often assigned when a CO line is connected. A line port is assigned as type 2 when any enabled toll restriction is to be applied beginning with the second digit dialed. Such a line type is often assigned when a PBX or **CENTREX** line **with** any trunk access code is connected. A line port is assigned as type 3 when any enabled toll restriction is to be applied beginning with the second digit dialed whenever the first digit is a 9. If the first digit is not a 9, no restriction is applied. Such a line type is often assigned when a PBX or **CENTREX** line with a trunk access code of 9 is connected. Line types can only be selected as part of system class of service programming.

Manual Hold

A button activated feature at each station will place an outside line on hold. Pressing the HOLD button holds the call, provides a distinctive flash rate of the line button indicator, and allows the user to access other station features. The holding station or any other station which has access to the line can retrieve the held call.

Memory Retention Without Batteries

Independent of the optional battery pack, the system memory is electronically protected during AC power failures by an electronic component sometimes referred to as a "super-cap". The stored program data will remain in memory for a minimum of 30 hours provided that the system has been powered continuously for at least 30 minutes prior to the power failure or disconnection.

Message Waiting

Special dialing codes enable a station user to control the message waiting (MW) light at other stations in the system. When the message waiting light is turned on at a station, a call can be placed to the originating station to pick up the message.

Modular Wiring And Jacks 4-Conductor Wire System

The system **can** be completely interconnected by employing industry standard **50-pin** connectors and modular plug/jack combinations. Station wiring is small, 4-conductor, twisted-pair cable throughout the system.

Momentary Buttons With LED Indicators

The station buttons are momentary contact, press and release types. They provide line selection, call monitoring, and other feature selection. Visual indication of the feature selection is provided by solid-state, long-life, light emitting diodes (**LEDs**).

Multiline Conferencing

This feature will allow one or more multiline stations to access two outside lines at the same time resulting in a conference arrangement. Conference transmission levels are not compensated.

Music Interface (External Source)

A jack is provided on the common equipment for the connection of a customer-provided KX registered music source. Also refer to the discussions titled *Background Music and Music-on-hold*.

Music-On-Hold

Music is provided to outside lines that are placed on hold if an external music source is connected to the system and the feature is turned on from station **10**. System, administration, or attendant programming can be used to program this feature.

Music-On-Hold System-Wide Enable/Disable

Music is provided to outside lines that are placed on hold **if** an external music source is connected to the system. Music-on-hold can be disabled system-wide by attendant action. Attendant programming is used to enable/disable this feature. Also refer to the discussions titled: *Music Interface, and Music-on-hold*.

Mute

Each station has a MUTE button which, when pressed, will mute the handset transmitter (or internal microphone on speakerphones) to prevent the **user's** voice from being heard by the distant party. The speaker light flashes to indicate a muted condition. The button provides push-on/push-off operation. Also refer to the discussion titled *Handsfree Answer Inhibit*.

Night Transfer (Of Ringing)

The day, or normal, ringing of incoming lines can be transferred to a particular station or stations (chosen through class of service programming) for off-hour or special purpose answering. The night transfer mode can only be activated from station 10. Night transfer of ringing can be assigned to specific stations using system or administration programming. It is then turned on or off by using system or administration as well as attendant class of service programming.

Off-Hook Voice Announce With Handsfree Answerback

With the off-hook voice announce (OHVA) feature, an announcement can be made from one station to another station that is busy on a call. The OHVA announcement is made in a manner that permits the distant on-line party to hear it and to hear the verbal response to it unless action is taken **with** the MUTE button. The OHVA feature is available at stations that are equipped with a multiline telephone and an adjunct feature module (32-button DSS/BLF console with **call-announce**). **Two data-paired stat/on ports are required to provide OHVA operation,**

An OHVA call is preceded by a ring burst. Then, several quick tone bursts followed by the announcement are delivered through the loudspeaker in the adjunct feature module. The called party can verbally reply to an OHVA call in a handsfree manner without interrupting the active call. Reply is made by speaking toward the OHVA microphone included in the adjunct feature module. The distant on-line party can hear this response unless the MUTE button is pressed at the called station to mute the handset transmitter.

A station that has the voice announce blocking feature turned on cannot receive an OHVA call.

Station class of service programming is used to program a station port to be a multiline telephone port and the data-paired port to be a console with **call announce** port. Also refer to the discussion titled: *Secure Off-Hook Voice Announce*.

On-Hook Dialing

Every **multiline** station provides manual and/or automatic dialing while the station handset is on-hook. An

internal speaker monitors call progress for completion. The handset must be taken off-hook to provide the voice link on non-speakerphone stations.

OPX support

The system supports the operation of the optional off premises extension (OPX) **unit**. System or administration programming arranges a station port for OPX operation.

A telephony device that is connected through an OPX unit to a station port has access to both outside line access and basic intercom service plus access to system features through special dialing codes. The system default provides intercom line access when the device goes off-hook. **With** either prime line alone or prime line and idle line preference enabled through programming, the device will seize an outside line when it goes off -hook. After going off -hook, the device can obtain the intercom line by generating a flash signal. If it does this before **it** generates any DTMF codes, the system drops the outside line when **it** detects the flash signal. If the device generates any DTMF tones before it generates a flash signal, the system places the outside line on hold when **it** detects the flash signal.

Originating Denied

The ability to originate calls on certain lines can be denied at individual stations through system programming. The originating denied feature is programmed on a per station/per line basis. Originating denied does not prevent a user from answering a ringing line, retrieving a held call or receiving a transferred call. Call origination on a line is denied at a particular station by the system or administration programming.

PBX/CENTREX/Central Office Compatible

System features and programmable buttons support the requirements of most **PBXs**, Central Offices, and **CENTREX** systems. Numbers, **#s**, ***s**, programmable pauses, and flash signals can be made a part of every stored number for access to host system feature codes.

Personalized Ringing Tone

This programmable feature enables stations to ring in a distinctive manner with one of four different tones. The ringing tones are combinations of four different frequencies and two **different** warble rates. Personal ringing tones can be assigned with system or administration programming.

Power Failure Transfer

A power failure line connection is available for installing an industry-standard telephone such as a Comdial model 2500-xx. The installed power-fail telephone is automatically connected directly across line 1 by the system whenever there is an AC power failure. Normal origination and reception of calls through the power-fail telephone is possible during an AC power failure. The power-fail telephone is automatically disconnected as soon as power is restored.

Power On, Visual Indication

The common equipment has a red LED which monitors the status of the system, and provides an "AC power-on" indication.

Prime Line Automatic

If a station is programmed for prime line automatic, the designated outside line or intercom line will be automatically selected when the handset is taken off hook. Prime line pick up may be pre-empted by preselecting another line before lifting the handset. If the prime line is ringing, it is automatically answered by lifting the handset. Assign a prime line to a station through system or administration programming.

Privacy Release

A line can be made non-private at a particular station while remaining private at all other stations. This arrangement allows other stations with that line appearance to join that particular station whenever it is on the privacy-released line. A line is specified as private or non-private at a particular station with system or administration programming. Also see the discussions titled *Add-on Conference and Automatic Privacy*.

Programmable Buttons

All multiline telephones are equipped with a minimum of twelve programmable buttons which can be programmed a line pick-up, auto dial, station speed dial, and DSS action. Refer to the discussions titled *Auto Dial, Programmable DSS, And Station Speed Dial*. System or administration programming is used to assign functions to programmable buttons.

Programmable DSS/BLF (Direct Station Selection/Busy Lamp Field)

A multiline station user can store true, one-button, direct station selection (DSS) at any programmable button location to create a DSS button. When this button is pressed, any active outside call is automatically placed on hold and an intercom call is automatically made to that previously stored station number. The

visual indicators of the stations programmed at the button locations form a busy lamp field (BLF). The BLF conveys station status to the user. An auto dial number can also be programmed as a secondary function at every DSS/BLF memory location. Also refer to the discussions titled *Tone Or Voice Signalling (Intercom and Auto Dial)*.

Pull Out Directory

Each desk mounted telephone is equipped with a pull out directory. This directory can be used for recording the system speed dial, station speed dial, or other frequently called numbers.

Pulse/Tone Switchable

When rotary dial lines are installed, the user can switch from pulse (rotary dial signals) to tone (Dual Tone Multiple Frequency signals - DTMF). This feature is useful for accessing special circuits requiring DTMF tones such as banking machines, etc. The system is programmed on a per line basis to allow this feature at all stations. The system or administration class of service programming enables this feature on a per line basis.

Ringing Line Preference

The system can be programmed on a per station basis to provide ringing line preference on all lines programmed for ringing at a station.

When ringing line preference is enabled at a station, taking the station off-hook automatically connects it to any outside line which happens to be ringing at the station. A line button will not have to be pressed. The ability of a particular station to answer a ringing line without line selection is enabled by the system or administration class of service programming.

Secure Off-Hook Voice Announce

With the secure off-hook voice announce (SOHVA) feature, an announcement can be made from one station to another station that is off-hook and busy on a call. The SOHVA announcement is made in a manner that prevents the distant on-line party from hearing it or from hearing the verbal response to it because the MUTE button must be pressed for reply. The SOHVA feature is available at stations that are equipped with a telephone that includes SOHVA capability. **The telephone requires two data-paired station ports to provide SOHVA operation.** Telephone users can make secure off-hook voice announcements to busy stations and then transfer calls to them after making the announcement if they wish. The transferred calls camp-on at the busy stations and wait to be answered. To do this, a user performs a normal screened call transfer procedure but uses the SOHVA method to an-

nounce the call. When he or she does this, the transferred call automatically camps-on at the busy station.

A SOHVA call is preceded by a ring burst. Several quick tone bursts, followed by the announcement, are then delivered through the handset receiver of the telephone. Delivering the announcement in this manner prevents the distant party from hearing it. A station employing a speakerphone being operated in a **hand-free** mode will receive a ring burst and its user can then take it off-hook to receive the SOHVA call. The announcing caller receives several tone bursts to alert them that they are making a SOHVA call and that they may not get a reply should the called party choose to not respond.

The user responds to the SOHVA call by pressing and holding the MUTE button and speaking into the telephone handset. Because the MUTE button is pressed, the distant party is prevented from hearing the response.

The system provides SOHVA operation at every station port; however, a station that has the voice announce blocking feature turned on cannot receive a SOHVA call. Also, on headset equipped telephones, the telephone headset cannot be used to receive a SOHVA call.

Station class of service programming is used to program a station port to be a multiline telephone port and the data-paired port as a console with call announce port. Also refer to the discussion titled: *Off-Hook Voice Announce with Handsfree Answerback* and to the Chapter 3 paragraph titled *Secure Off-Hook Voice Announce Station*.

Secure Off-Hook Voice Announce (SOHVA) Groups

The ability to receive and originate SOHVA and OHVA calls is provided to every station in the system. Any station in the system can send a SOHVA or OHVA call to any other SOHVA or OHVA-equipped station in the system. Through this feature, the ability of a station to receive and/or originate SOHVA or OHVA calls can be disabled through programming so that certain stations can be grouped together for SOHVA or OHVA calling between one another while other stations in the system are excluded from this group. Stations can be arranged in up to four different groups for exclusive SOHVA or OHVA calling. For example, the stations of an executive and an assistant can be arranged into the same group as follows: Program the executive's station for receive in group 1 and program the assistant's station for originate in group 1. Do not program any other stations to have receive or originate

capability in group 1. This arrangement provides exclusive SOHVA or OHVA calling between the two stations. More executive stations can be programmed to have receive capability in group 1 thus giving the assistant the ability to make SOHVA or OHVA calls to them as well. These executive stations in group 1 cannot make SOHVA or OHVA calls to one another, however, since they do not have originate capability. Both class of service and administration programming can be used to form SOHVA groups. Also refer to the discussion titled *Secure Off-Hook Voice Announce* and *Off-Hook Voice Announce with Handsfree Answerback*.

Self Diagnostics

Each station can execute a self test when so enabled. This test verifies processor, indicator, and tone functions. Instructions for activating self diagnostics are provided in Chapter 3, Section 3 of this publication.

Single-Digit Station Dialing

Refer to the discussion titled *System Speed Dial*.

Single-Line Proprietary Telephone Support

The XE system supports a proprietary single-line telephone on every station port except port 10. The single-line proprietary telephone provides its user with outside line access and basic intercom service plus access to system features through special dialing codes. At default, the telephone provides intercom line access when the user takes it off-hook. With either prime line alone or prime line and idle line preference enabled through programming, the single-line proprietary telephone provides an outside line when the user takes it off-hook. After going off-hook and receiving outside line dial tone, the user can get the intercom line by pressing the TAP button. If he or she dials no digits after taking the telephone off-hook, the system drops the outside line when the user presses the TAP button; however, if the user dials digits after taking the telephone off-hook, the system places the outside line on hold when the user presses the TAP button. The class of service programmer must program a station **port** to support a single-line proprietary telephone if he or she wishes it to do so.

Speakerphone (Optional)

The optional speakerphone provides handsfree operation of all features, except voice signalled intercom calls. The handset must be lifted for this purpose.

Square/Non-Square System

(Button Mapping)

A system can be programmed to be square or **non-square** as desired. In a square system, a specific line is assigned to the same button on every station in the system. In a non-square system, any line can be assigned to any available programmable button on every station in the system. Also refer to the discussion titled *Tenant Service*. Button mapping for line appearance can be **performed** on each station using the system or administration class of service programming.

Station By Station Privacy

Refer to the discussions titled *Automatic Privacy* and *Privacy Release*.

Station Speed Dial

Each station can be programmed to provide ten speed dial numbers at the keypad buttons. Station speed dial numbers can be up to fifteen digits in length and can include line or intercom selection, numbers, **#**, *****, pauses, and flash signals. A pause is stored each time the HOLD button is pressed, and a flash signal is stored each time the RECALL button is pressed.

System Speed Dial

Thirty, system-wide, speed dial numbers are provided. The system speed dial numbers can be up to fifteen digits in length, and can include numbers, **#s**, ***s**, pauses, and flash signals. System speed dial number programming can only be performed at station 10; however, once programmed, they can be used at every station in the system. System, administration, or attendant programming can be used to program system speed dial numbers.

System Speed Dial Toll Restriction Override

This feature makes it possible to override toll restriction parameters when a system speed dial number is dialed. With it, it is possible to use toll restriction tables to restrict calls from being made to certain toll areas yet allow specific numbers in the restricted areas to be called by storing them as system speed dial numbers. With override enabled, toll restriction

parameters assigned at a station will be overridden when a system speed dial number is called. With override disabled, toll restrictions assigned at a station will prevent it from calling a system speed dial number that matches the restrictions. Class of service programming or Administration programming can be used to enable or disable this feature. Refer to the discussions titled *System Speed Dial* and *Toll Restriction - Flexible*.

Subdued Ringing

Subdued ringing is automatic at any station that is busy on an outside line,

Tap (Flash/Recall)

When host system custom calling features are available via a "flash" signal, the system can be programmed so that the TAP button will generate a "flash" signal when it is pressed. When custom calling features are not available, the TAP button functions as a positive disconnect or dial tone recall button. These two features are mutually exclusive. The flash/recall time is assigned through system or administration programming.

Tenant Service

Two or more closely located sites can simultaneously be served by the same common equipment. Each site is provided with dedicated trunk facilities and separate feature and class of service complements. Also, refer to the discussion titled *Square/Non-Square System*. Button mapping for line appearance can be performed on each station using the system or administration programming.

Timed Hold Recall

After a call has been on hold for a programmed length of time, the system will recall the station that placed the call on hold. It also visually signals all other stations. The audible signal is repeated at the end of each reoccurring time out period. The visual indication continues until the held call is picked up. The system or administration programming sets the timed hold recall time period.

Toll Restriction - Flexible

Flexible toll restriction can be programmed to prohibit some or all stations from calling a wide range of number combinations while allowing specific exceptions. Restrictions are specified by up to four entries on a deny table while exceptions are specified by up to four entries on an allow table. Allow entries will always override deny entries. Up to eight digits are permitted for each entry. A “match anything” digit (# symbol) can be included as **part** of an entry to represent any digit from 1 to 0. This is used to deny or allow a range of numbers with one entry. A separate pre-programmed **1+800** allow table permits this dialing feature to be selected regardless of any restrictions which may be specified. The dialing of 911 and **1+911** is always allowed.

Once programmed, flexible toll restriction is assigned on a per line/per station basis. In addition to flexible restriction, or as an alternative to it, stations can be restricted with I/O call restriction assignment. When I/O call restriction is selected, 1+ 7 digit dialing can be allowed if desired. Either system or administration programming is used to specify the deny and allow entries and assign the restriction to line and station.

Tone Or Voice Signalling (Intercom)

Intercom calls can be tone signalled or voice signalled as desired. The tone signalled intercom call must be answered by lifting the handset. The voice signalled intercom call can be responded to in a handsfree manner. The class of service programming determines

which signalling method is employed as the primary method when an intercom call is made. The alternate method is available through user action at the station. Intercom call progress is marked by special tone signals. The system or administration programming determines which type of intercom signalling is first option signalling for the system. Also refer to the discussions titled *Intercom Call Progress Tones* and *Voice Announce Blocking*.

Voice Announce Blocking

This feature allows the user to block voice announced intercom signalling by dialing a special code. This feature, when enabled, also blocks the reception of a SOHVA call.

Zone Paging (Through Station Speakers)

Zone paging allows groups of stations to receive announcements through the station speakers. The programming can enable zone paging in up to three different zones. A station can be programmed to only receive announcements or programmed to originate announcements as well. Each station can be programmed to be in any or all zones for both receiving and originating announcements. The ability of each station to originate and/or receive a page, and the arrangement of the paging into different zones are controlled by system or administration programming. Also, refer to the discussion titled *All-Call Paging (via Station Speakers)*.

Chapter 3 Installation

Mounting The System Equipment

Mounting Considerations

- Attach the common equipment cabinet vertically to any sturdy, flat, surface or vertically rack mounted if desired.
- Locate the cabinet within four (4) feet of a proper electrical outlet. The system requires a dedicated **117VAC** 15 AMP circuit, with a third-wire ground, supplied to a standard electrical outlet (NEMA **5-15R**).
- The distance between the common equipment and the TELCO/PBX jacks must be 25 feet or less as per FCC requirements. A nominal distance of 7 feet is recommended.
- The mounting location must be secure and dry and have adequate ventilation. The temperature range of the location must be within **32-122** degrees F (0-50 degrees C), and the relative humidity must be less than 90 percent non-condensing.
- If the mounting surface is damp or if it is concrete or masonry material, you must attach a backboard to the mounting surface to be used for common equipment mounting. Suitable mounting backboards are available commercially or can construct one out of **1/2-inch** plywood cut to size.
- Tools and hardware required:

- Fasteners - wood screws (**1/4** x 1-inch round head), toggle bolts, or wall anchors
- Screwdriver-to match fasteners
- Electric drill - if prepared holes are required
- Connecting tool - for fastening wires to a type-66 connector block.
- Crimping tool - for 623-type modular plugs.

Installation Notice

Per The Underwriters Laboratories regulation 1459, 2nd edition, be aware of the following precautions when installing telephone equipment that is to be directly connected to the telephone company network:

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Mounting Procedure

1. Unpack, and carefully inspect the common equipment and telephones for shipping damage. Notify the shipper immediately of any damages found. Verify that the packages contain all parts and accessories needed for proper installation and operation.
2. If a backboard is required at the mounting location, attach it securely to provide a stable mounting surface for the equipment.
3. Attach the common equipment with three screws that you thread into three mounting holes located as shown on **Figure 3-1**. While referring to **Figure 3-1**, measure and mark the location of the mounting holes on the mounting surface.
4. Drill holes in the mounting surface of a proper size to accommodate the hardware being used. If necessary, prepare these holes with inserts, anchors or other attachment devices as dictated by the type of mounting surface.
5. Insert the top screws into the mounting surface, and tighten them to within approximately **1/8-inch** of the surface.
6. **Hang the** cabinet on the top screws using the mounting holes located on the rear of the cabinet. Note that these holes are elongated with an enlargement at one end. This feature allows the cabinet to slide down on the screws to secure the mounting when the cabinet is hung on them.
7. **Insert** a third screw through the mounting tab located on the lower edge of the cabinet and into the mounting surface, and tighten it into place

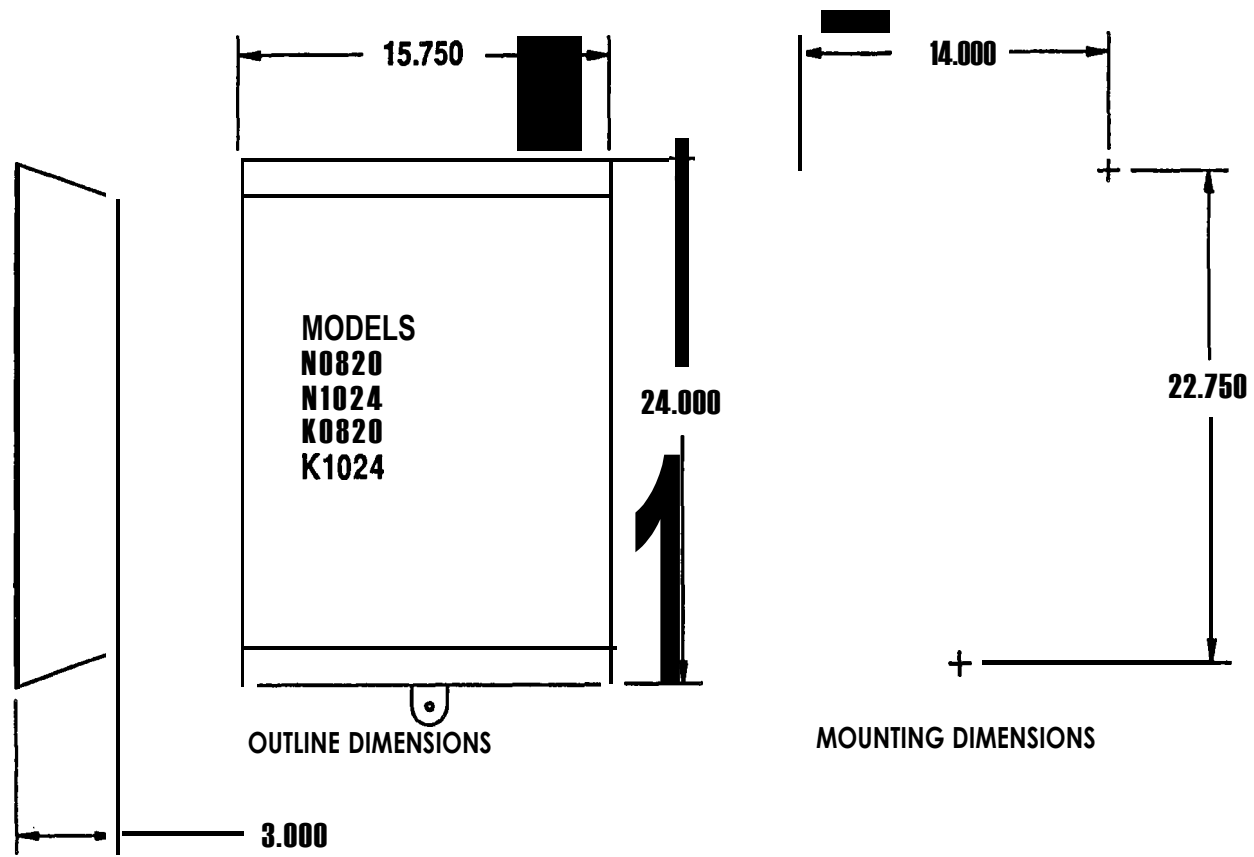


Figure 3-1. Mounting The Common Equipment

Connecting The Power And System Grounding

AC Power Connection

Employ a dedicated **117VAC** 15 AMP circuit, with a third-wire ground, supplied to a standard **electrical** outlet (NEMA 5-15R) for the AC power connection.

- A plug-in power line surge protector should be installed between the power cord and the AC outlet.
- Do not connect the AC power cord until the installation has been checked.
- To apply AC power, connect the power cord to the electrical outlet.

Battery Back-Up

The common equipment provides an interface connector for the connection of an optional external battery assembly. This assembly is available separately as a kii.

CAUTION

Be sure that the AC power cord is connected to the electrical outlet before connecting the external battery assembly to the common equipment Interface connector. This ensures that Internal protection circuitry is operating to prevent damage that could result from improper connection.

- When charged to full potential, the optional Comdial model BBUOI external battery assembly provides a minimum of one hour of operation should the AC power to the system be interrupted. No calls will be dropped when an AC power failure causes the system to automatically switch over to **BBU01** operation

The BBUOI external battery assembly may include batteries from either of the following suppliers:

- Model PS-1265 from Power-Sonic Corporation, Redwood City CA, 94032.
- Model **EP1265-26** from Elpower Corporation, Santa Anna, CA 92704

- During AC operation, the common equipment provides recharging current to maintain the voltage potential of the external battery assembly at an operational level.

*NOTE: The optional external battery assembly requires approximately 24 hours to completely re-charge to **full** potential after it has been completely discharged and, in some cases, when initially installed. The charging circuit may not provide an adequate charge if an installed battery assembly has a current rating of greater than **15** ampere-hours-*

The BBUOI **external** battery assembly has a 6.5 ampere-hour current rating and provides an absolute minimum of one hour of operation should the AC power to a system be interrupted. Calculate the actual minimum battery back-up time for any configured system using the following formula:

$$T = \frac{(K)(e)}{1 + [(0.1)(N)]}$$

T = Back-up time in hours

K = 0.9

e = Ampere-hour capacity of battery (BBUOI = 6.5)

N = total number of stations

Examples:

N0820-IST, K0820-IST

$$T = \frac{(0.9)(6.5)}{1 + [(0.1)(20)]} = 0.4 \text{ Hours} \quad \text{+!.%t-iOUrS}$$

N1024-IST, K1024-IST

$$T = \frac{(0.9)(6.5)}{1 + [(0.1)(24)]} = \frac{5.85}{3.4} = 1.72 \text{ Hours}$$

System Grounding

The common equipment cabinet has internal secondary surge protection on all line ports. In order for this protection to be effective, you **MUST** connect the cabinet to a reliable earth ground such as a metal cold water pipe or a building frame ground. The grounding wire must be of **#10** or **#12** insulated, solid copper and separate from the three-wire AC line cord. The common equipment cabinet provides a ground stud for this purpose.

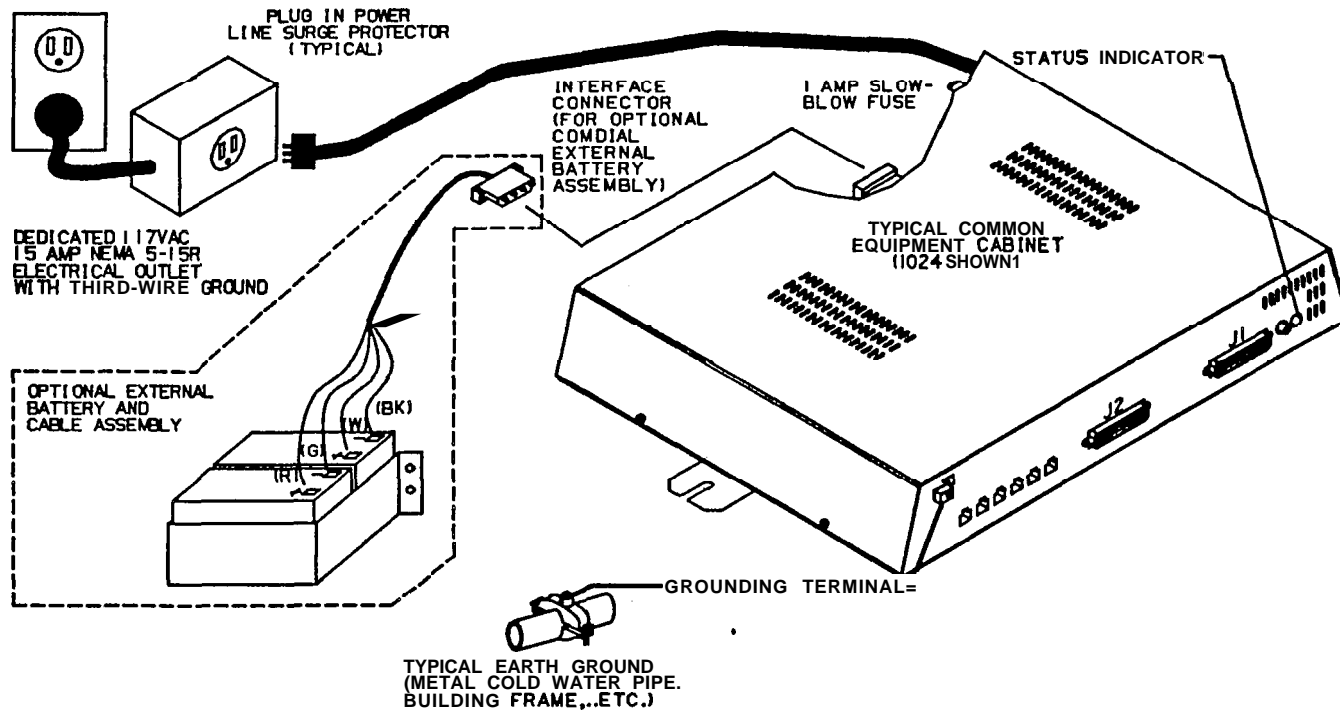


Figure 3-2. **Connecting** The Power and System Grounding

Connecting The Outside Lines To The System

The common equipment cabinet line terminations are standard modular plug/jack **connections**. Each modular jack (2-6) provides termination for two lines. Modular jacks 2 and 3 also provide termination for an auxiliary pair in addition to the two outside lines. Line terminations at the demarcation point can either be at a type **66M-xx** connector block or at individual **6-position** modular jacks. **Table 3-1** shows the line connection details.

The time cord that is routed between the CO line termination and the common equipment cabinet termination should be twisted-pair wiring.

Six-wire twisted pair cable is recommended for wiring between the CO termination and modular jacks 2 and 3 to provide auxiliary equipment interface wiring.

CAUTION

To help ensure that external over-voltage surges do not damage the system, verify that gas discharge tubes or similar protection devices are installed, and properly grounded, on all connected outside lines.

Table 3-1. Line Connections

JACK	PIN NO.	CONNECTION	TELEPHONE NUMBER
1	1	No Connection	
	2	No Connection	
	3	Power Failure Station TIP	
	4	Power Failure Station RING	
	5	No Connection	
	6	No Connection	
2	1	Auxiliary 1 TIP	
	2	Line 2 RING	
	3	Line 1 RING	
	4	Line 1 TIP	
	5	Line 2 TIP	
	6	Auxiliary 1 RING	
3	1	Auxiliary 2 TIP	
	2	Line 4 RING	
	3	Line 3 RING	
	4	Line 3 TIP	
	5	Line 4 TIP	
	6	Auxiliary 2 RING	
4	1	No Connection	
	2	Line 6 RING	
	3	Line 5 RING	
	4	Line 5 TIP	
	5	Line 6 TIP	
	6	No Connection	
5	1	No Connection	
	2	Line 8 RING	
	3	Line 7 RING	
	4	Line 7 TIP	
	5	Line 8 TIP	
	6	No Connection	
6	1	No Connection	
	2	Line 10 RING	
	3	Line 9 RING	
	4	Line 9 TIP	
	5	Line 10 TIP	
	6	No Connection	

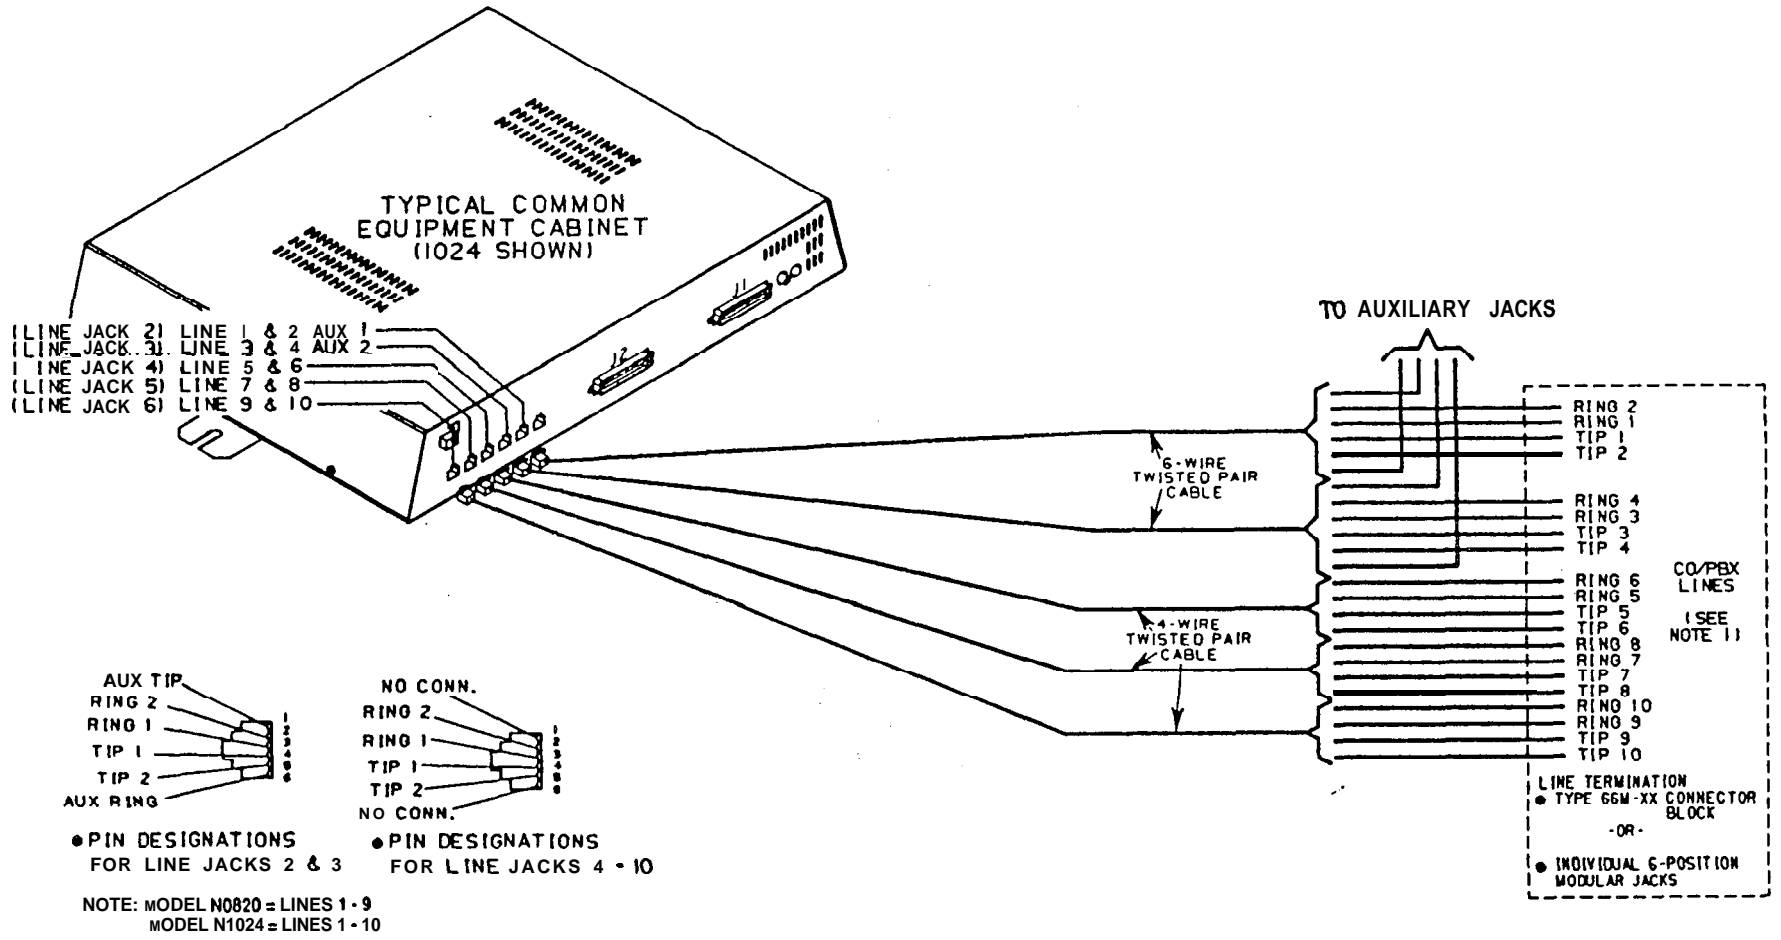


Figure 3-3. Connecting The Lines

Connecting Telephones To The System

Connecting Multiline Telephones

Place individual telephones as desired and in keeping with accepted industry and office standards. Mount the telephones on the wall or on a desk as needed. The telephone housings are desk/wall reversible for this purpose.

- Connections between the common equipment and the stations for both the NO820 and the N1024 are via two type **66M-xx** connector blocks that are cable connected to the common equipment **50-pin** male connectors. Table 3-2 shows the station connection details.
- The maximum distance allowed from the common equipment to the station when using **#24** gauge, twisted-pair cable is 1500 feet.

*NOTE: If spare conductors exist in the cables that are run between the common equipment **66M-xx** connector blocks and the station jacks, it is a good practice to connect them to earth ground. Doing this may help prevent them from inducing radio frequency and/or AC interference into the system.*

CAUTION

The polarity between the individual wires in a particular voice or data pair is **NOT** critical; however, do not connect the voice circuits to the data circuits.

Pairing The Stations

Station ports are paired for both data and overload protection as follows:

10--11	14--15	18--19	22--23	26--27	30--31
12--13	16--17	20--21	24--25	28--29	32--33

Connecting Single-Line Proprietary Telephones

You can connect a single-line proprietary telephone (product code 6701X-xx) telephone at any **port** except station port 10. You must program the station port to be compatible to this type of telephone using instructions provided in Chapter 4.

Placement and distance limits for the single-line proprietary telephone are the same as those specified for the multiline telephones.

Connecting Industry-Standard Telephones

You can connect an industry-standard telephone (IST), such as the Comdial **2500**, to the voice pair of station ports 26 and 28. When you do this, you must

program these ports to be compatible with this type of telephone (program the ports as OPX ports). Refer to Chapter 4 for programming details.

When you connect an IST to station ports 26 and 28, there are several precautions that you must take. They are as follows:

Connect the IST to the tip and ring pair of the station port. Do not connect any wiring to station port's data pair.

The battery-feed voltage is 24 VDC at a constant current of 42 ma. In distance, this translates to a maximum location distance of 2000 feet for an IST with 300 ohms of impedance including the **#24** twisted-pair station wiring.

The XE system's **55-volt** ring generator supports a telephone with a ringer equivalence number (REN) of 2.0.

CAUTION

The **IST** must be installed as an on-premise device because the IST station ports provide neither the long-loop capacity nor the lightning protection that an off-premise telephone requires.

Connecting The Optional DSS/BLF Console

The optional **DSS/BLF** consoles may be installed at any station port except port 10 to work in conjunction with a companion station connected to the adjacent port (for example, **port 10** for station and **port 11** for console).

The model **EB32X-xx**, **DB32-xx**, **DB32S-xx**, **DB40-xx**, and **DB70-xx** DSS/BLF consoles are all compatible with the XE system. The station **port** to which they are connected must be programmed as a DSS/BLF console port. The console buttons are fixed for **DSS/BLF** operation beginning with station 10 and ending with the maximum station number in the system. These buttons also provide autodial locations at a second level of storage (accessed with the HOLD button function). Additionally, any buttons, from beyond system station capacity through a maximum of 32, are available as **autodial** locations at the first level of storage. For example, a model **N1024** key system and a **EB32X-xx** or **DB32-xx** console will fix the first 24 console buttons as DSS/BLF buttons, and provide the remaining eight buttons as **autodial** buttons. Plus, it will provide **autodial** locations at the second level of storage for the first 24 buttons. It provides a total of 32 **autodial** storage location. For larger consoles, any buttons beyond a maximum of 32 will still be blanked.

For this reason Comdial recommends that the larger consoles (DB40 and DB70) not be used unless absolutely necessary since the XE system has a maximum station capacity of 24 stations thus leaving these consoles with a large quantity of blanked buttons.

- The installed distance limit between the common equipment and a console is the same as that specified for a multiline telephone. Connect all **four** wires (voice pair and data pair) of the console cable to the station connector block.
- You can use the voice pair connections of the console simultaneously to enable a PA port function or to provide off-hook voice announce capability if you wish. Refer to the information titled *External Paging Interface - Station PA Port* for paging details. If the particular PA system being used requires an enable signal, the console and PA equipment connections are limited to station ports 15 and 17.
- The DSS/BLF console port must be programmed as a DSS/BLF port before console operation can take place.

- The console port must be also programmed as a PA port if a PA amplifier has been connected to the voice pair as part of the system.

Providing Off-Hook Voice Announce With Handsfree Answerback

You can use the **DB32S-xx** Adjunct Feature Module to provide off-hook voice announcing (OHVA) to a station already busy on a call and allow subsequent handsfree answerback (HFAB) by that station user. The **DB32S-xx** Module also functions as a **DSS/BLF** console at the same time. You must program the station port that is connected to the Adjunct Feature Module to activate the feature. When a site requires both **DSS/BLF** and OHVA operation, program the station port as an Off-Hook Call Announce port. When a site requires only **DSS/BLF** operation, program the port as a **DSS/BLF** Console port.

- Two data-paired station ports are required to provide the **OHVA/HFAB** feature.
 - Connect a telephone to the first data-paired port
- Connect the **DB32S-xx** Adjunct Feature Module to the voice pair and the data pair of the second data-paired port.

Table 3-2. Station Connections

N0820 = Station 10 - 29
N1024 = Station 10 - 33

25-PAIR CABLE CONNECTIONS			4-WIRE CONNECTIONS		J-1 CONNECTIONS		J-2 CONNECTIONS		
WIRE COLOR	PAIR	PIN NO.	CLIP TERM.	PAIR	WIRE COLOR	STA	LOCATION	STA	LOCATION
WHITE-BLUE	1	26	1	VOICE	GREEN	10		22	
BLUE-WHITE		1	2		RED				
WHITE-ORANGE	2	27	3	DATA	YELLOW				
ORANGE-WHITE		2	4		BLACK				
WHITE-GREEN	3	28	5	VOICE	GREEN	11		23	
GREEN-WHITE		3	6		RED				
WHITE-BROWN	4	29	7	DATA	YELLOW				
BROWN-WHITE		4	8		BLACK				
WHITE-SLATE	5	30	9	VOICE	GREEN	12		24	
SLATE-WHITE		5	10		RED				
RED-BLUE	6	31	11	DATA	YELLOW				
BLUE-RED		6	12		BLACK				
RED-ORANGE	7	32	13	VOICE	GREEN	13		25	
ORANGE-RED		7	14		RED				
RED-GREEN	8	33	15	DATA	YELLOW				
GREEN-RED		8	16		BLACK				
RED-BROWN	9	34	17	VOICE	GREEN	14		26	
BROWN-RED		9	18		RED				
RED-SLATE	10	35	19	DATA	YELLOW				
SLATE-RED		10	20		BLACK				
BLACK-BLUE	11	36	21	VOICE	GREEN	15		27	
BLUE-BLACK		11	22		RED				
BLACK-ORANGE	12	37	23	DATA	YELLOW				
ORANGE-BLACK		12	24		BLACK				
BLACK-GREEN	13	38	25	VOICE	GREEN	16		28	
GREEN-BLACK		13	26		RED				
BLACK-BROWN	14	39	27	DATA	YELLOW				
BROWN-BLACK		14	28		BLACK				
BLACK-SLATE	15	40	29	VOICE	GREEN	17		29	
SLATE-BLACK		15	30		RED				
YELLOW-BLUE	16	41	31	DATA	YELLOW				
BLUE-YELLOW		16	32		BLACK				
YELLOW-ORANGE	17	42	33	VOICE	GREEN	18		30	
ORANGE-YELLOW		17	34		RED				
YELLOW-GREEN	18	43	35	DATA	YELLOW				
GREEN-YELLOW		18	36		BLACK				
YELLOW-BROWN	19	44	37	VOICE	GREEN	19		31	
BROWN-YELLOW		19	38		RED				
YELLOW-SLATE	20	45	39	DATA	YELLOW				
SLATE-YELLOW		20	40		BLACK				
VIOLET-BLUE	21	46	41	VOICE	GREEN	20		32	
BLUE-VIOLET		21	42		RED				
VIOLET-ORANGE	22	47	43	DATA	YELLOW				
ORANGE-VIOLET		22	44		BLACK				
VIOLET-GREEN	23	48	45	VOICE	GREEN	21		33	
GREEN-VIOLET		23	46		RED				
VIOLET-BROWN	24	49	47	DATA	YELLOW				
BROWN-VIOLET		24	48		BLACK				
VIOLET-SLATE	25	50	49			STATION17		COMMON	
SLATE-VIOLET		25	50			AUDIBLE		AUDIBLE	

AW051

Note : Station ports 26 and 28 are universal ports. they support either proprietary telephones or industry-standard telephones.

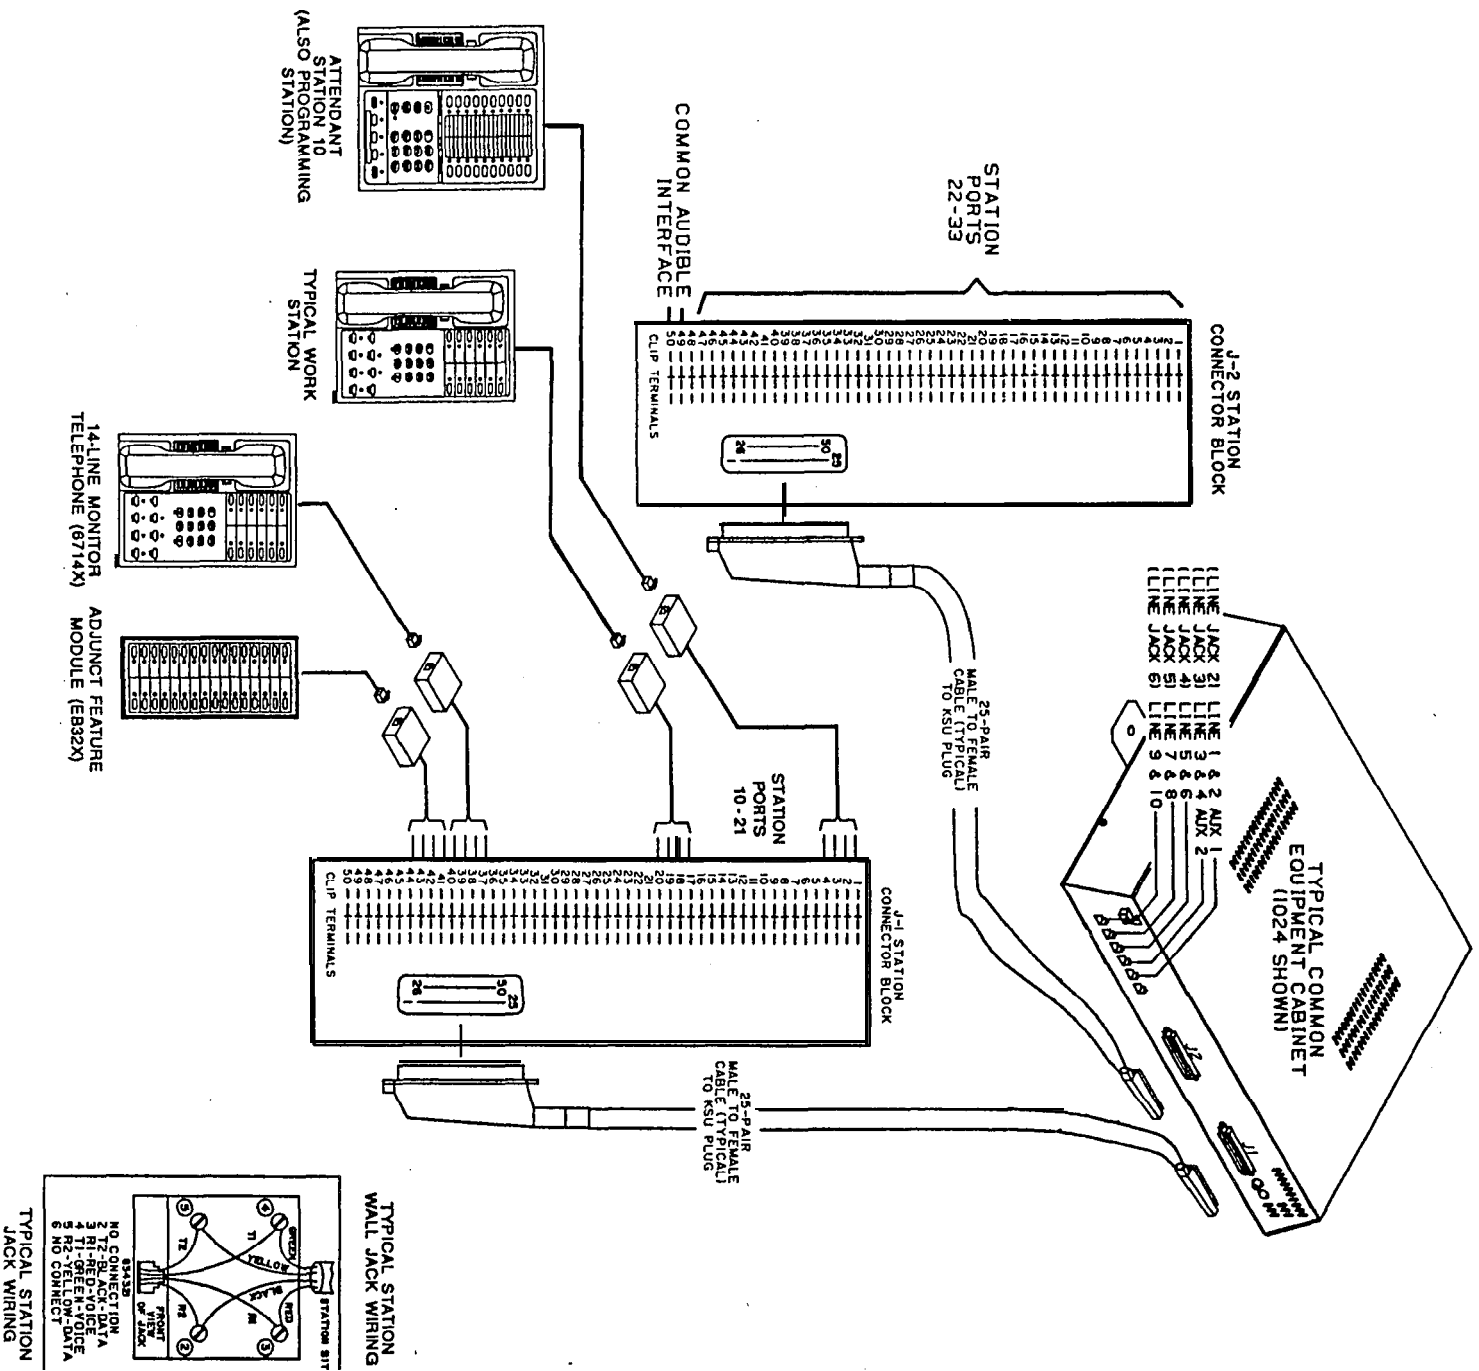


Fig e-3-4. Co ec g he epho s

Connecting Telephones To **The System** - continued

Connecting A Secure Off-Hook Voice Announce Telephone

The XE system supports the Secure Off-Hook Voice Announce (SOHVA) feature provided by telephones with the following product codes:

- 6714X-xx all revs.
- **6600E-xx** Rev. **B** and later
- **6614E-xx** Rev. D and later
- **6614T-xx** Rev. C and later
- **6620E-xx** Rev. D and later
- **6620T-xx** Rev. I and later

NOTE: If OHVA capability is required, it is provided by the model **DB32S-xx** console (adjunct feature module) as described in the previous paragraph.

Two data-paired ports are **required** to provide SOHVA **support**. The SOHVA equipped telephones contain a **6-position, 3-pair** line jack. Using **6-wire**, twisted-pair cable, connect the two inside pairs of the line jack to the first data-paired port and connect the outside pair to the second data-paired port.

- Connect pins 3 and 4 to the voice pair and pins 2 and 5 to data pair of the first data-paired port.
- Connect pins 1 and 6 to the voice pair of the second data-paired port.

For the feature to be enabled, the first port must be programmed as a telephone port and the second port must be programmed as an Off-Hook Call Announce port.

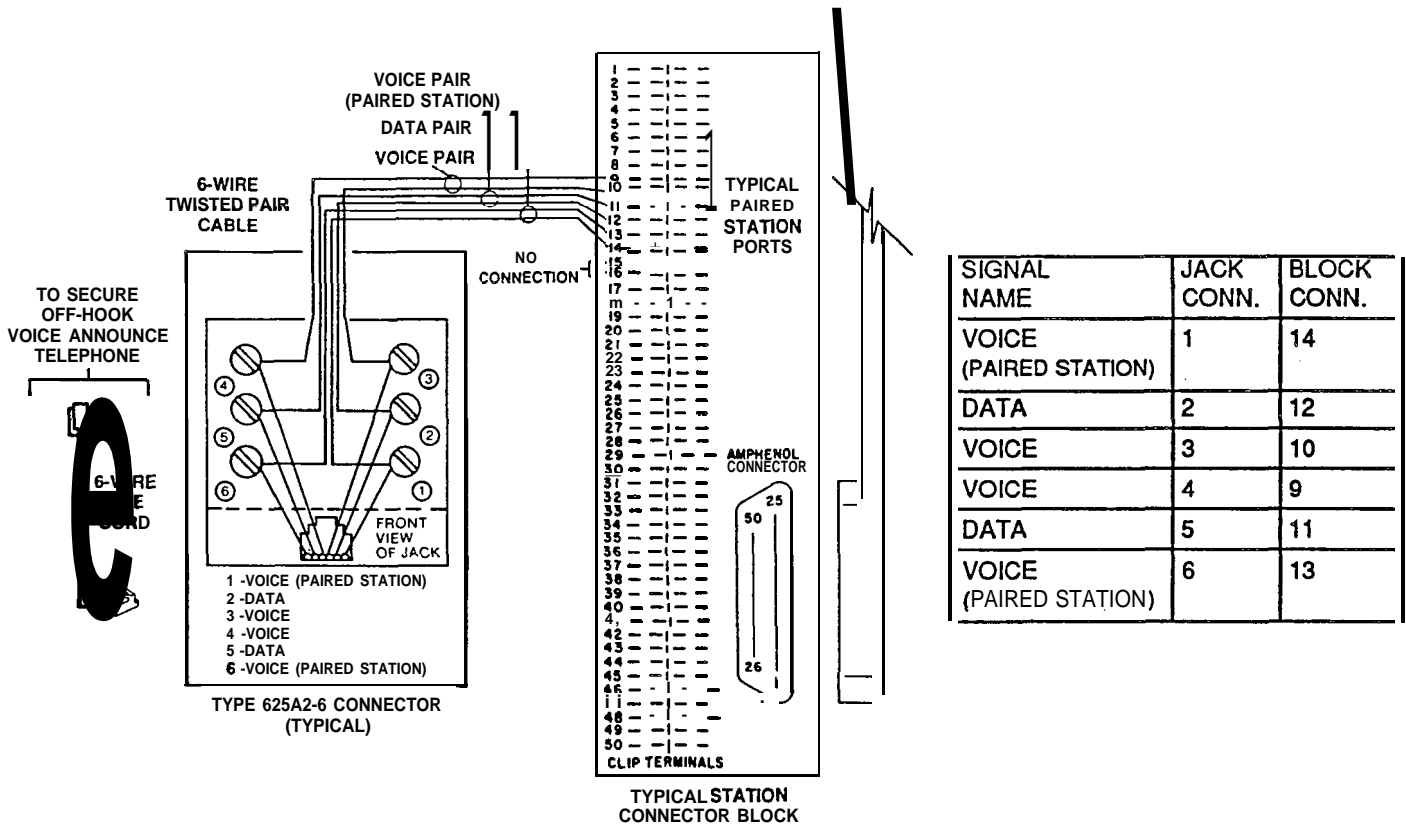


Figure 3-5 **Connecting** A Secure **Off-Hook Voice** Announce Telephone

Connecting A Power Failure Telephone

The system provides a tip and ring pair connected to line one that is to be used as an emergency power failure circuit. This power failure pair is located on Mod jack 1 for all common equipment models. This jack is the right-most jack when facing the right side of the cabinet. The power failure pair is only active

during an AC power failure. An industry standard single-line telephone, such as a **Comdial 2500-xx** can be connected to the power failure pair and used to provide communications capability should the AC power to the system be interrupted.

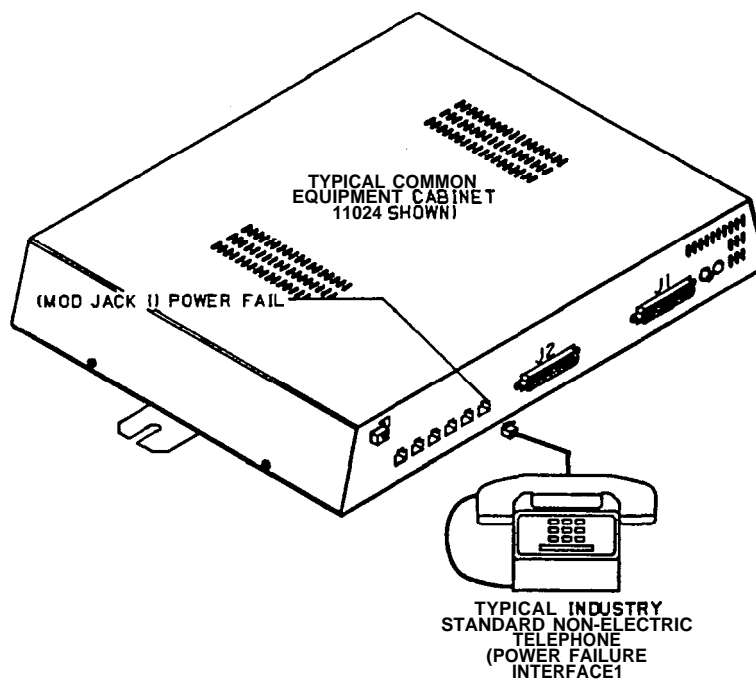


Figure 3-6. Connecting A Power Failure Station Connection.

Connecting the Common Audible And Auxiliary Station Interface (Station 17 Audible)

Two sets of relay closure dry-contact points are available. These are located at the J-1 and J-2 connector blocks. These closures track the ringing pattern. They are closed during the ringing period and open during the silent period.


- Station **17 Audible:** (J-1 connections 49 and 50) provides a dry-contact closure whenever system station 17 rings.
- **Common Audible:** (J-2 connections 49 and 50) provides a dry-contact closure whenever any of the

TELCO/PBX lines, connected to the common equipment, ring.

CAUTION

Do not exceed a 1 amp at 24 volts AC or DC (.5 amp at 48 volts) load on these control terminals. If the load requirements exceed this limit, connect the load through an external slave relay. DO NOT CONNECT THESE CONTROL TERMINALS DIRECTLY TO THE 117VAC LINE.

(Wiring shown for low current application - see caution text)

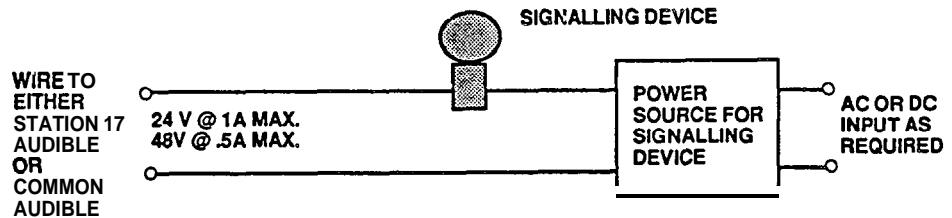

(Wiring shown with slave relay connection for high current application - see caution text)

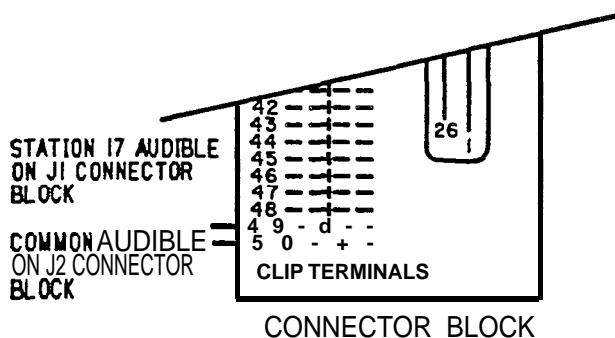
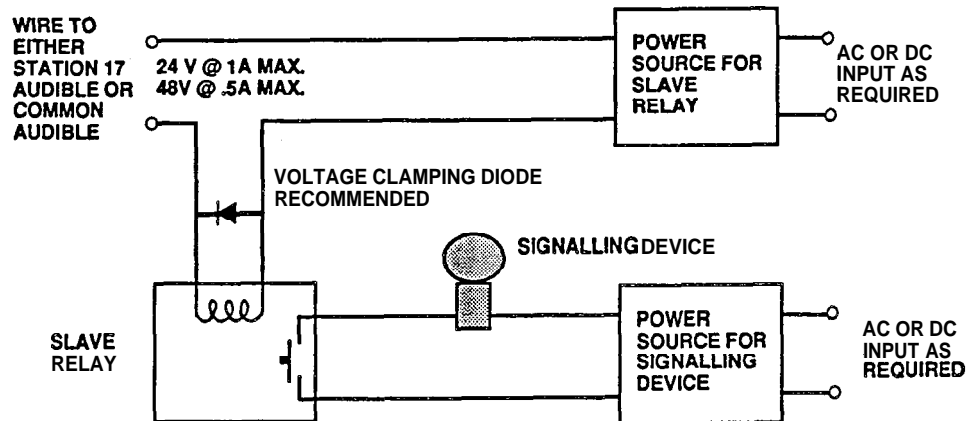


Figure 3-7. Connecting The Common Audible and Auxiliary Station Interface

Connecting The External Paging Interface At A Station PA Port

You can program any station port as a PA port and use it to couple a station voice path to an external paging amplifier. Refer to Chapter 4 for programming details.

- Connect the audio input of an external paging amplifier to the audio pair of the station port at the J-1 or J-2 connector blocks.
- Isolate the audio input connection with a 600 ohm to 600 ohm audio matching transformer. Terminate the audio input of the paging amplifier with a 600 ohm (nominal value) resistor.
- If you program station port 15 as a PA port, the system automatically reconfigures the Common

Audible contact points on J-2 as PA enable terminals. The contact closure now occurs when PA station 15 is dialed. The system disables the normal common audible function as long as station 15 is a PA station.

- If you program station port 17 as a PA port, the system automatically reconfigures the Auxiliary Station Interface (station 17 audible) as PA enable terminals. The contact closure now occurs when PA station 17 is dialed. The system disables the normal auxiliary station interface function as long as station 17 is a PA station.

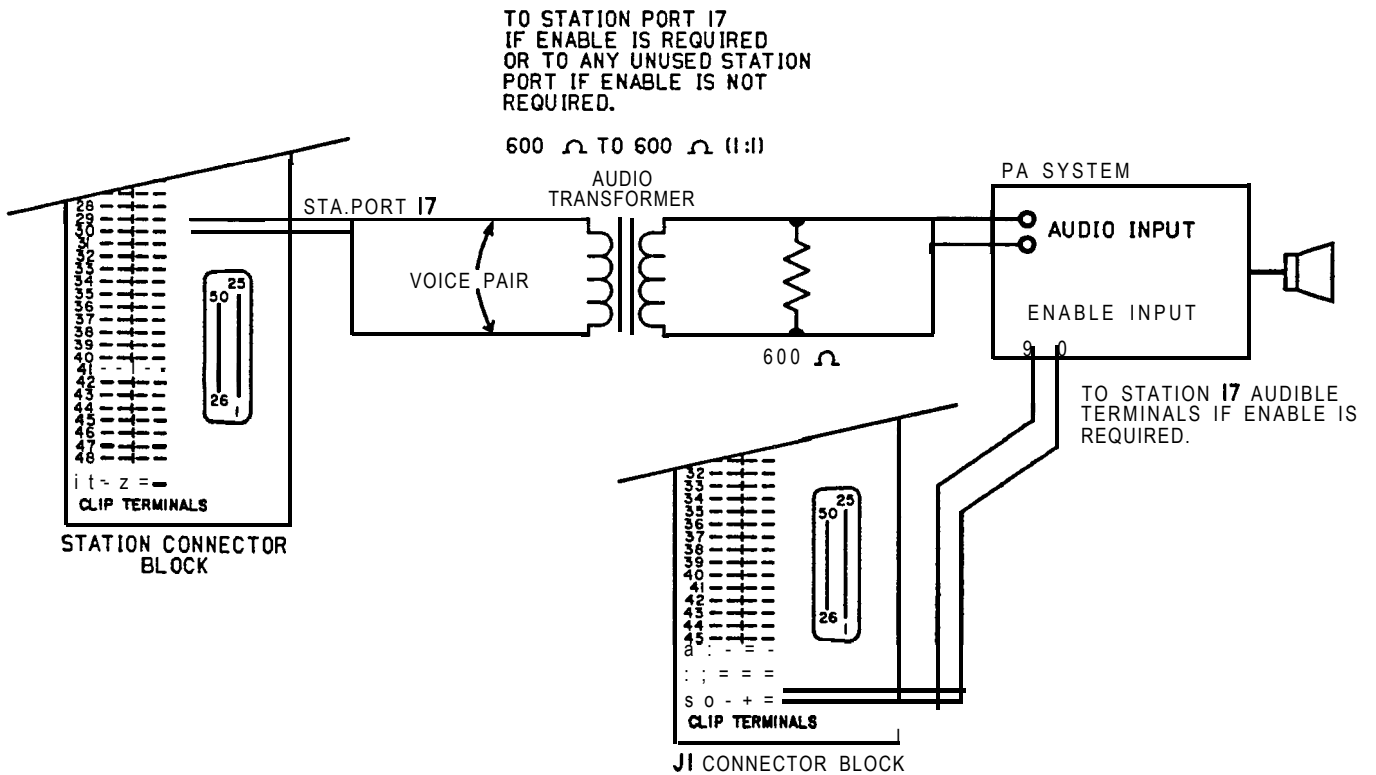


Figure 3-8. Connecting the External Paging Interface At A Station PA Port

Connecting the External Paging Interface At A Line Port

You can program a line port to be an AUXILIARY port and connect it to an external paging amplifier. Refer to Chapter 4 for programming details. Station access to this wide-area paging is via the line button for the AUXILIARY line.

- Connect the audio input of an external paging amplifier to the tip and ring leads of the AUXILIARY (line) port.

You can employ a DTMF tone select, zone-paging amplifier if you wish. If used, the user must dial the zone-select code after he or she has pressed the AUXILIARY line select button.

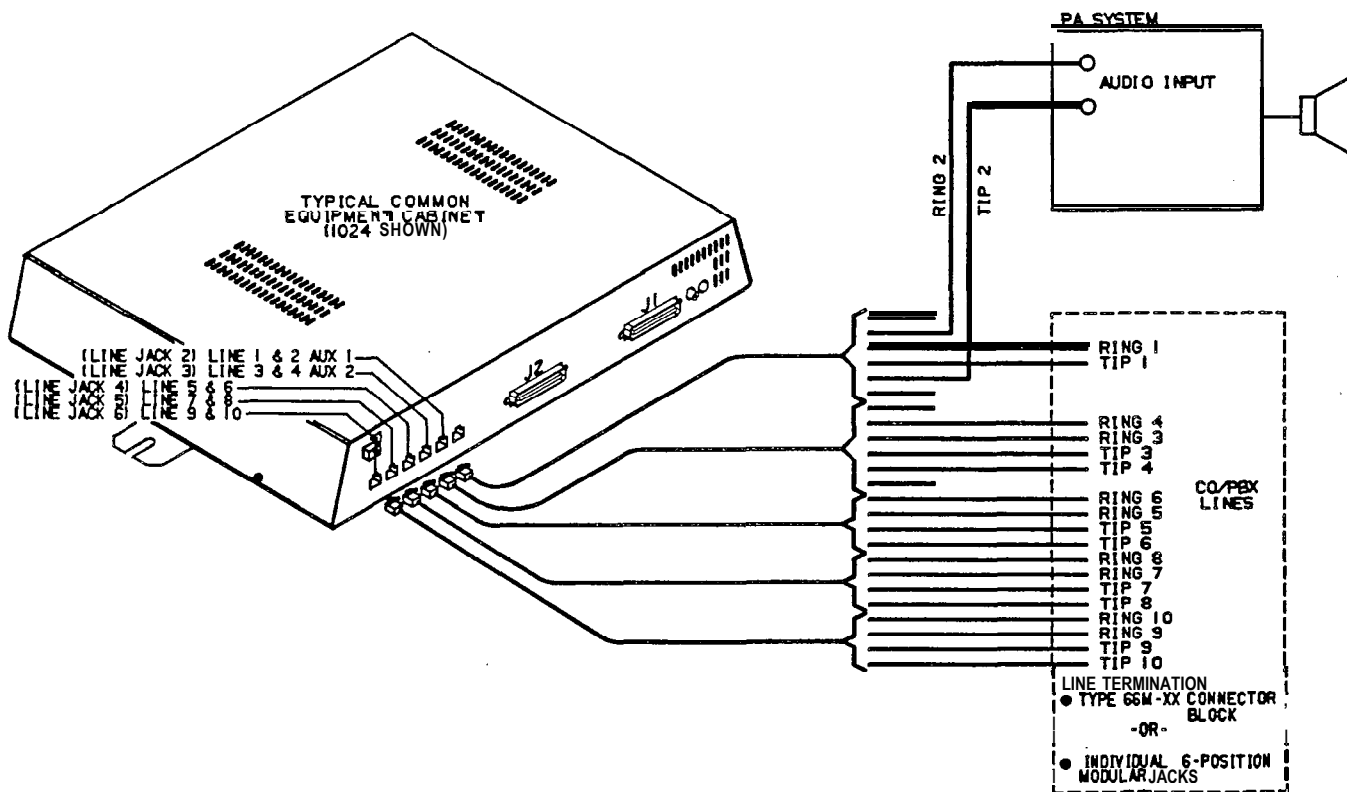


Figure 3-9. Connecting The External Paging Interface At A Line Port

Connecting Equipment At The Auxiliary Equipment Interface

You can connect a non-key system telephony or data device ahead of the common equipment if needed.

The system can detect an off-hook condition in the connected device, and turn on the line status light at the button system telephones to indicate that the line is busy.

- Connection is across tip and ring of lines 2 and 4 using the auxiliary interface connections.
- Auxiliary interface connections are provided at terminals 1 and 6 of common equipment modular jacks 2 and 3.

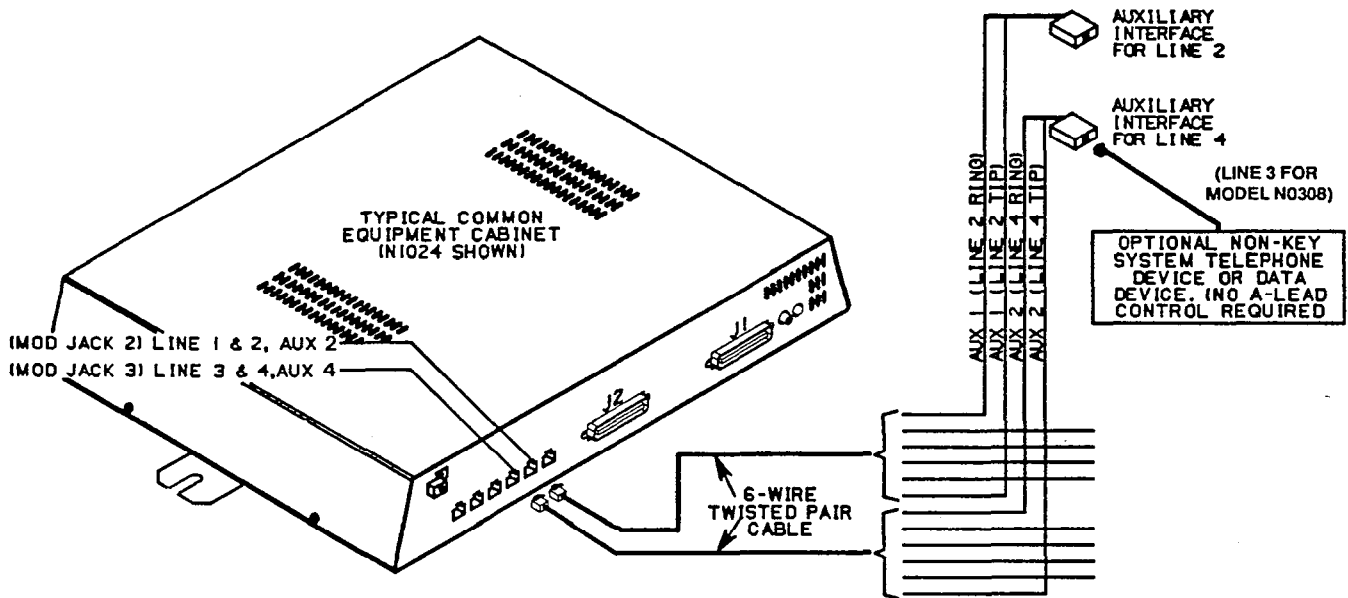


Figure 3-10. Connecting Equipment At The Auxiliary Equipment Interface

Connecting Equipment To The Music Interface

If the site requires that music be part of the system, connect a music source to the common equipment music interface jack (RCA-type phono jack) provided for this purpose. The impedance of this input is approximately 500 ohms. Level adjustment of the music source may be necessary and it may be done during system checkout.

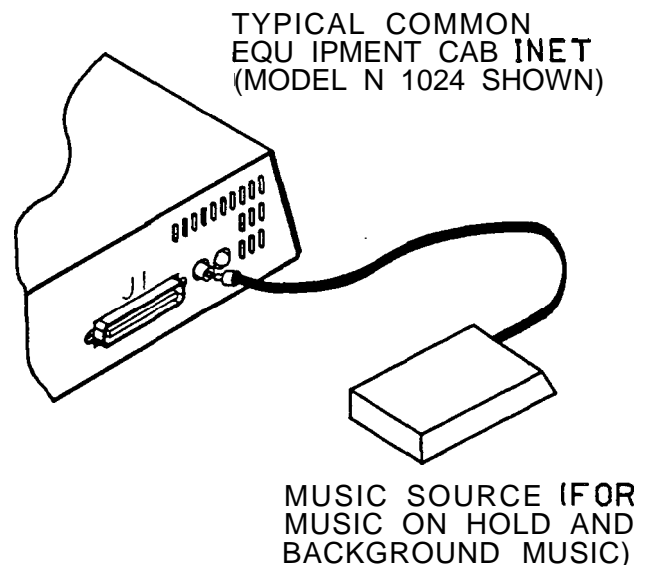


Figure 3-11. Connecting Equipment To The Music Interface

Section 2 Checking Out The System Installation And Isolating Any Failures

Checking The Installation

Resistance Check

Make the following resistance measurements at the station connector blocks under the following conditions.

- AC power cord disconnected from electrical outlet.
 - Common equipment connected to **station** connector blocks.
 - Stations wired, and wiring punched down on blocks.
 - Bridging clips removed from blocks to isolate stations from common equipment.
1. Measure the resistance of each installed station and wiring **from** the station side of the connector blocks. Resistance values will vary with cable length and station type but should be within the following limits.

MEASURED PAIR	MEASURED STATION RESISTANCE IN OHMS
VOICE PAIR	40 - 150
DATA PAIR	-

2. Measure the resistance of the common equipment and cables from the common equipment side of the station connector blocks. Resistance values should be within the following limits.

MEASURED PAIR	MEASURED COMMON EQUIPMENT RESISTANCE IN OHMS
VOICE PAIR	40 - 50
DATA PAIR	0.3 - 0.5

Voltage Check

Refer to **Table 3-3** and make the following voltage measurements at the **station** connector blocks under the following conditions:

- **Bridging** clips installed
 - AC power connected to the **common** equipment
- Measure the **voltage** across one voice line and one data line and then across the other voice line and the other data line for each even and odd station. The measured voltage must be as follows:

General Check

1. Check the red **light** emitting diode (LED) system status indicator. Be sure that it is on steady. If it is off or flashing, disconnect and reconnect the AC power plug.
2. Refer **to** the station User's Guide for operating information. Perform a general operational test of the system by exercising the system features from station port 10.

Table 3-3. Voltage Measurements

UNIT UNDER TEST	66M-xx BLOCK CONNECTION	METER LEAD POLARITY	MEASURED VOLTAGE
TYPICAL EVEN STATION (Repeat for each even sta.)	Voice 1	(+)	+34 (+/- 8) VDC
	Data 3	(-)	
TYPICAL ODD STATION (Repeat for each odd sta.)	Voice 2	(+)	+34 (+/- 8) VDC
	Data 4	(-)	
TYPICAL ODD STATION (Repeat for each odd sta.)	Voice 5	(+)	-34 (+/- 8) VDC
	Data 7	(-)	
TYPICAL ODD STATION (Repeat for each odd sta.)	Voice 6	(+)	-34 (+/- 8) VDC
	Data 8	(-)	

Variant readings can indicate a possible wiring, station, or common equipment problem.

Isolating Failures

System Status Indicator

The red LED located near the fuse holder is the system status indicator. This indicator should turn on steady when AC power or the optional external battery power is applied to the common equipment. **If** the indicator flashes after power up, it could be indicating a processor failure. Unplug and reconnect the AC power, and observe the LED indication. **If** it still shows a flashing indication, equipment replacement may be necessary. A flashing indicator when battery power is being employed is an indication of battery discharge.

Station Self Test

1. Disconnect the line cord at the station base.

*NOTE: The adjacent **odd** or even station will be disabled during **the** time that you are disconnecting and reconnecting the **station** line cord.*

2. Press and hold the MUTE button, and reconnect the line cord to the station connector. The station will automatically perform a self test routine. Release the MUTE button as soon as the test begins. The sequence of the test is as follows:
 - The indicators will light in sequence.
 - Indicators will then turn off in an orderly sequence.
 - The ringer will sound • Be sure that the ringer volume control is set to the medium or high

volume setting. On some telephone models, the ringer may sound before the indicators are turned off.

3. Replace any station that does not pass the self test.

DSS/BLF Console Self Test

1. Disconnect the console line cord plug from the line.
2. Press and hold the station 10 select button while reconnecting the line cord plug to the line.

*NOTE: The companion station will be disabled during **the time that** you are disconnecting and reconnecting the console.*

3. Release the station 10 select button, and note that the BLF indicators will each turn on in sequence beginning with the station 10 indicator. The indicators will then turn off and the console will become operational.

Failure Indications

If erratic light indications or ring signals occur at a paired station, an open data pair at either station may be the fault.

- A station with an open data line may work properly on a short **loop** but fail on a long loop. Stations are paired for overload current protection. If a fault occurs which causes more than 300 **ma. of** current to be drawn, the paired stations are disabled by circuit action.

Disconnect the disabled stations and reconnect them one at a time to isolate the faulty one.

Section 3

Understanding Installer/User Information Regarding FCC Rules And Regulations

This electronic button system complies with Federal Communications Commission (FCC) Rules, Part 68. The FCC registration label on the KSU contains the FCC registration number, the ringer equivalence number, the model number, and the serial number or production date of the system.

Notification To Telephone Company

Unless a telephone operating company provides and installs the system, the telephone operating company which provides the lines must be notified before a connection is made to them. The lines (telephone numbers) involved, the FCC registration number, and the ringer equivalence number must be provided to the telephone company. The FCC registration number and the ringer equivalence number of this equipment are provided on the label attached to the KSU. The user/installer is required to notify the telephone company when final disconnection of this equipment from the telephone company line occurs.

Compatibility With Telephone Network

When necessary, the telephone operating company provides information on the maximum number of telephones or ringers that can be connected to one line, as well as any other applicable technical information. The telephone operating company can temporarily discontinue service and make changes which could affect the operation of this equipment. They must, however, provide adequate notice, in writing, of any future equipment changes that would make the system incompatible.

Installation Requirements

Connection of the electronic key telephone system to the telephone lines must be through a universal service order code (USOC) outlet jack supplied by the telephone operating company. If the installation site does not have the proper outlet, ask the telephone company business office to install one. The correct outlet jack for this system is either a type RJ21X or type RJ14C.

Party Lines And Coin Lines

Local telephone company regulations may not permit connections to party lines and coin lines by anyone except the telephone operating company.

Troubleshooting

If a service problem occurs, first try to determine if the trouble is in the on-site system or in the telephone company equipment. Disconnect all equipment not owned by the telephone company.

If this corrects the problem, the faulty equipment must not be reconnected to the telephone line until the problem has been corrected. Any trouble that causes improper operation of the

telephone network may require the telephone company to discontinue service to the trouble site after they notify the user of the reason.

Repair Authorization

FCC regulations do not permit repair of customer owned equipment by anyone except the manufacturer, their authorized agent, or others who might be authorized by the FCC. However, routine repairs can be made according to the maintenance instructions in this publication, provided that all FCC restrictions are obeyed.

Radio Frequency Interference

The electronic button system contains incidental radio frequency generating circuitry and, if not installed and used properly, may cause interference to radio and television reception. This equipment has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules. These limits are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area may cause interference to radio and television reception; in which case the user is encouraged to take whatever measures may be required to correct the interference. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient the television or radio's receiving antenna, and/or relocate the KSU, the individual telephone stations, and the radio or TV with respect to each other. If necessary, the user should consult the manufacturer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the Government Printing Office, Washington DC. 20402. Stock No. 004-000-00345-4.

This digital apparatus does not exceed the (Class A) limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques (de la class A) prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Ringer Equivalence Number

The REN of each line is 0.48. The FCC requires the installer to determine the total REN for each line, and record it at the equipment.

Chapter 4 System Programming

Section 1 Introduction To XE System Programming

Programming Categories

System programming is divided into three categories:

- **Class Of Service Programming:** A programmer can program all available features using the class of service programming procedures. Class of service programming is usually performed by the installer when he or she first puts the system in service.
- **Administration Programming:** A programmer can program all available features except line attributes using the administration programming procedures. This procedure is usually employed by on-site administration personnel whenever system needs dictate.
- **Attendant Programming:** An attendant can program those features that may need re-programming on a daily basis using the attendant programming procedures. These features include the following items:
 - **night** transfer of ringing
 - **music** on hold
 - system speed dial numbers.

Programming Telephones

Perform all programming at station port 40 by dialing special codes and pressing special buttons as detailed in this chapter. Figure 4-1 illustrates the button locations for applicable telephone models. Figure 4-2 shows a block diagram illustration of button features.

Comdial recommends that you use a **14-line** monitor telephone (such as product code 6714X) for programming since it provides all needed program buttons and LED indicators for program status feedback.

Comdial does not recommend the **6-line** monitor telephone (product code 6706X) for programming unless all of the installed system telephones are product code 6706X telephones. If you do use this telephone for programming, you must take the following special considerations:

- Program button **B1** equals button A5 and program button B2 equals button A12 for all COS programming requirements except button mapping. When button mapping **B1** and B2 with a line assignment that is represented by A5 (line 5) or by A12 (line **12**), press **B1** or B2 twice. The first press represents the button location. The second press represent the line assignment.
- The product code 6706X telephone cannot represent program buttons A6 and A13; therefore, it should not be used for programming if other telephones in the system have designated A6 and A13 buttons that require mapping.

You can program with a product code **6700S** LCD speakerphone if you wish. **With** this telephone, the display shows the name of each class of service feature as it is being programmed. This telephone cannot represent program buttons A6 and A13; therefore, it should not be used for programming if other telephones in the system have designated A6 and A13 buttons that require mapping.

You can **always** program with an ExecuTech LCD speakerphone (product code **6600E-xx**). With this telephone, the display shows the name of each class of service feature as it is being programmed and it provides all required programming buttons.

Programming can also be performed with ExecuTech multiline telephones (such as models **6614E, 6614T, 6620E** or **6620T**).

Programming overlays for all applicable telephone models are included at the end of this chapter.



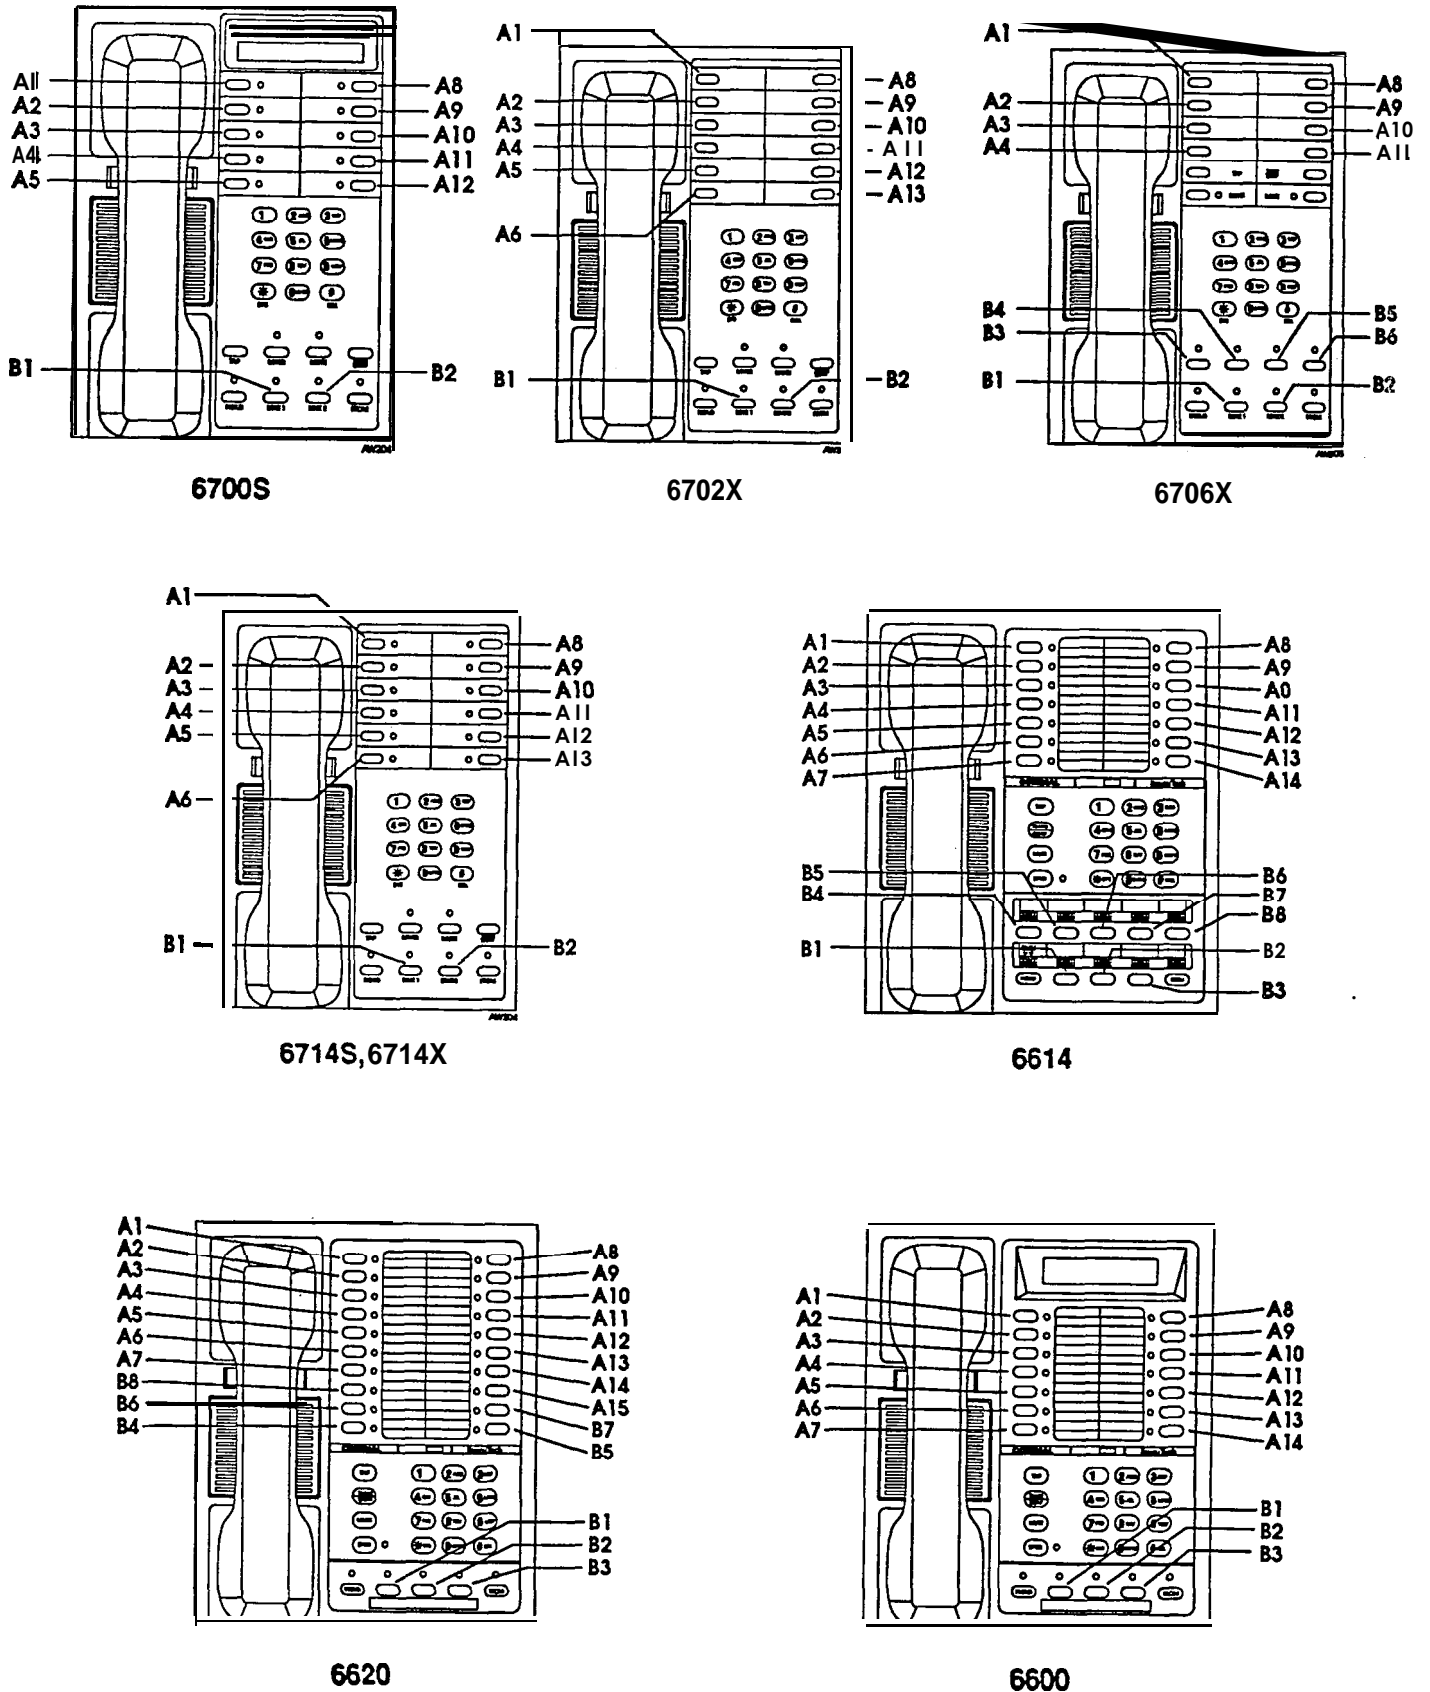


Figure 4-1. Program Button Locations

ITCM *# 746 *
BASE LEVEL

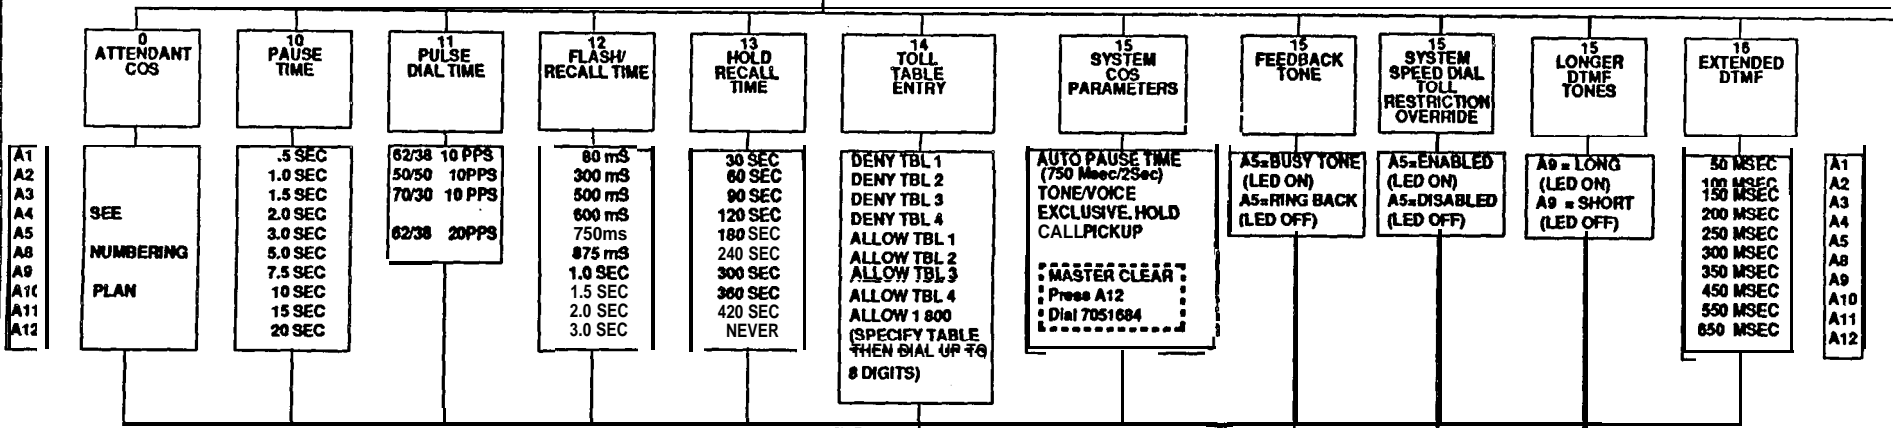

*** RETURN TO
BASE LEVEL**

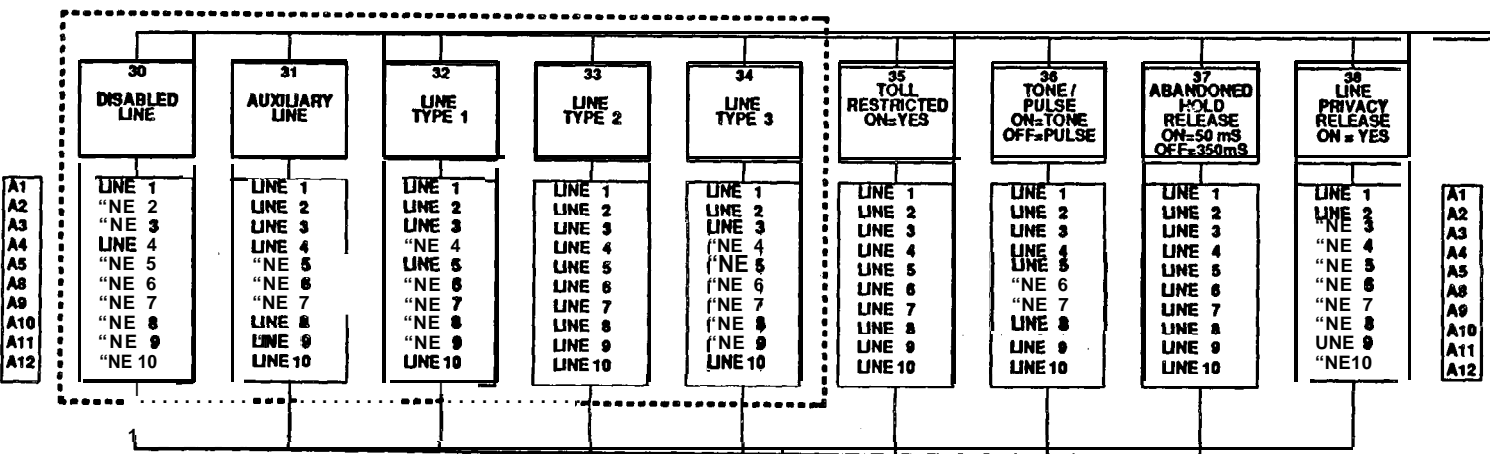

*** RETURN TO
BASE LEVEL**

To Fig. 4-2b

NOTE: Items enclosed in dotted boxes are not permitted for System Administrator. (System Administrator base level entry = ITCM * #236 *).

Figure 4-2a. System Programming Block Diagram

SECTION 2 CLASS OF SERVICE PROGRAMMING

Class of **service** programming is usually performed by the system installer. Class of service programming procedures provide the means for programming all of the system variables including the **master clear**. The installer may elect to program only the line attributes and allow the remainder of the system variables to remain set to their default values so that the system

administrator can re-program just the features that the site requires. Perform class of service programming as shown below.

System administration programming is performed by on-site personnel to change all system variables, except **master clear** and line attributes, to match site requirements.

1 Mark the desired selections in the charts to record programming needs.

2 Enter the base level programming mode.
Press: **ITCM * # 7 4 6 ***.
(Press: **ITCM * # 2 3 6 *** for System Administration programming)

TYPICAL FEATURE PROGRAMMING SEQUENCE

Enter Base Level: Press ITCM, then dial * # 7 4 6 *.

<p>Automatic Pause Insertion: When the system stores a dialed number for later redial, it automatically stores a pause whenever the user waits between digits. The wait period is programmable.</p>	<p>Dial 15. Press prog. button A1. LED ON = 2 Sec. Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A1</td></tr> <tr><td>TIME</td><td>750 Msec</td><td>2 Sec</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td>DEFAULT</td><td colspan="2">= 2 SEC.</td></tr> </table>	BUTTON	A1	A1	TIME	750 Msec	2 Sec	ENTRY			DEFAULT	= 2 SEC.	
BUTTON	A1	A1												
TIME	750 Msec	2 Sec												
ENTRY														
DEFAULT	= 2 SEC.													
<p>Tone or Voice Signalling: Intercom calls can be tone signalled or voice signalled. The first choice in signalling is programmable.</p>	<p>Dial 15. Press A2 LED ON = TONE Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A2</td><td>A2</td></tr> <tr><td>FEA</td><td>TONE</td><td>VOICE</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td>DEFAULT</td><td colspan="2">= VOICE</td></tr> </table>	BUTTON	A2	A2	FEA	TONE	VOICE	ENTRY			DEFAULT	= VOICE	
BUTTON	A2	A2												
FEA	TONE	VOICE												
ENTRY														
DEFAULT	= VOICE													
<p>Exclusive Hold: The user can set a hold condition whereby only the station placing the call on hold can retrieve it. Exclusive hold can be disabled by programming action.</p>	<p>Dial 15. Press A3. LED ON = ENABLED Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A3</td><td>A3</td></tr> <tr><td>FEA</td><td>ENABLED</td><td>DISABLED</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td>DEFAULT</td><td colspan="2">= ENABLED</td></tr> </table>	BUTTON	A3	A3	FEA	ENABLED	DISABLED	ENTRY			DEFAULT	= ENABLED	
BUTTON	A3	A3												
FEA	ENABLED	DISABLED												
ENTRY														
DEFAULT	= ENABLED													
<p>Call Pickup System: A call can be answered at one telephone when it is ringing at another telephone. Call pickup can be disabled by programming action.</p>	<p>Dial 15. Press A4. LED ON = ENABLED Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A4</td><td>A4</td></tr> <tr><td>FEA</td><td>ENABLED</td><td>DISABLED</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td>DEFAULT</td><td colspan="2">= DISABLED</td></tr> </table>	BUTTON	A4	A4	FEA	ENABLED	DISABLED	ENTRY			DEFAULT	= DISABLED	
BUTTON	A4	A4												
FEA	ENABLED	DISABLED												
ENTRY														
DEFAULT	= DISABLED													

Press # SPKR to end programming.

3 Dial a feature code to select a programming parameter.

A current program setting is indicated by a lighted LED next to the applicable programming button. When a toggle (ON/OFF) action is provided by a single button, the lighted LED indicates when the

4 Press * to return to the base level.

5 Press SPKR to end procedure.

Enter Base Level: Press **ITCM**, then dial *#746*.

Master Clear: The entire programming configuration as discussed in the following programming procedures, can be defaulted to the factory settings all at once using this master clear procedure.

CAUTION

*This programming action clears all memory entries including any previously programmed auto dial numbers, and returns the system to a **startup** default condition.*

Press **ITCM**.
Dial *#746*.
Dial **15**.
Press **A12**.
Dial 7051684.
Press * for base level
OR
Press **MNTR (SPKR)**.

Pause Time: During auto dials and speed dials it is sometimes necessary to delay the sending of digits to give switching equipment time to prepare to receive the digits. A pause can be stored to effect the delay. A pause is stored whenever the user presses the HOLD button. The pause length options are stored in seconds.

Dial **10**.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
SEC	0.5	1.0	1.5	2.0	3.0	5.0	7.5	10	15	20
ENTRY										
DEFAULT = 2.0 SEC.										

Pulse Dial Time: Either ten or twenty pulses per second, and three different make/break ratios for the pulse dialing signals (rotary dial signals) can be set to match CO requirements.

Dial **11**.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4
RATIO	62/38 @ 10 pps	50/50 @ 10 pps	70/30 @ 10 pps	62/38 @ 20 pps
ENTRY				
DEFAULT = 62/38 @ 10 PPS				

Recall/Flash: A line disconnect (recall) or a **PBX** feature select signal (flash) can be generated depending upon the programmed time.

Dial **12**.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
SEC	.080	.300	.500	.600	.750	.875	1.0	1.5	2.0	3.0
ENTRY										
DEFAULT = 2.0 SEC.										

Timed Hold Recall: After a call has been on hold for a programmed length of time, the system will recall the station that placed the call on hold. The timing is in seconds.

Dial **13**.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
SEC	30	60	90	120	180	240	300	360	420	never
ENTRY										
DEFAULT = 30 SEC.										

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial ***#746***.

Feed-Back Tone: Choose the type of feed-back tone supplied when intercom calling a station that is busy on an outside line. Either select a **busy tone** or leave the system defaulted to provide a **ring-back tone**.

Dial 15.
Press A8.
 LED ON = Busy Tone

RING-BACK	
BUSY TONE	
DEFAULT = RING-BACK	

Flexible Toll Restriction: Restricts stations from dialing a range of number combinations while allowing specific exceptions. The restrictions are specified by entries on a deny table while the exceptions are specified by entries on an allow table. In addition, a preprogrammed **1+800** allow table allows that dialing feature regardless of other **restrictions** which may be in effect. These programmed tables must be assigned on a per **station** basis before the restrictions can take effect.

Dial 14.
Select table
 - A1 = DENY ENTRY LINE 1
 - A2 = DENY ENTRY LINE 2
 - A3 = DENY ENTRY LINE 3
 - A4 = DENY ENTRY LINE 4
 - A5 = ALLOW ENTRY LINE 1
 - A8 = ALLOW ENTRY LINE 2
 - A9 = ALLOW ENTRY LINE 3
 - A10 = ALLOW ENTRY LINE 4
 - A11 = ALLOW **1+800** calls
Dial number.
 (# = match anything digit.)
 Select next table, and repeat.
 Press * for next feature.

TABLE TYPE	ENTRY LINE	ENTRY DIGITS							
		1	2	3	4	5	6	7	8
DENY	1								
	2								
	3								
	4								
ALLOW	1								
	2								
	3								
	4								
ALLOW 1+800		YES		NO					

- Maximum of 8 digits per line entry.
- **1+911** and 911 can never be **restricted**.
- Allow entries override deny entries.

TYPICAL EXAMPLE

TABLE TYPE	ENTRY LINE	ENTRY DIGITS							
		1	2	3	4	5	6	7	8
DENY	1	9	7	6					
	2	4	1	1					
	3								
	4								
ALLOW	1	1	8	0	4	9	7	8	#
	2								
	3								
	4								
DEFAULT = NONE ASSIGNED									

NOTE: The deny and allow entries are part of one toll table. Any stations which receive this table assignment will be subject to both deny and allow restrictions.
 Assign the restriction to the lines and stations per the instructions on page 4-9.

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Assign Restriction To Lines: Lines must be programmed to accept toll restriction before the restriction that is assigned to the stations will take effect.

Dial 36.
Press prog. buttons to assign restriction to lines
Press * for next feature

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = NONE ASSIGNED										

Assign Restrictions To Stations: Station dialing can be restricted with I/O toll restriction and with deny/allow toll table restriction. Either method can be assigned to restrict station dialing on a per station basis. Both methods can be assigned at the same time if that arrangement is desired. Also, 1+7-digit dialing can be allowed when needed. When 1+7-digit dialing is allowed, the I/O restriction must also be assigned.

Dial 62.
Dial port ID (10-33).
- Select I/O toll restriction.
 • Press A1

- Select 1+7-digit allow, only if needed. Note that, I/O restriction must also be selected.
 • Press A1, A2

- Select deny/allow toll table restriction (if required and programmed).
 • Press A3. Note that I/O or I/O and 1+7-digit restriction can also be selected if desired by pressing:
 ● A1,A3wA1,A2,A3
Dial # + PORT ID for next sta.
OR
Press * for next feature.

STA.	ENTRIES
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
DEFAULT = NONE ASSIGNED	

Press * SPKR to end programming.

Enter Base Level: Press ITCM, then dial *#746*

<p>System Speed Dial Toll Restriction Override: This feature provides a method for overriding toll restriction parameters when a system speed dial number is dialed. With this feature enabled, it is possible to restrict calls to certain areas with assigned toll restriction tables yet allow specific numbers in the restricted areas to be called by storing them as system speed dial numbers.</p>	<p>Dial 15. Press A5. LED ON = override enabled. Press *for next feature.</p>	<table border="1"> <tr><td colspan="3">SYSTEM SPEED DIAL</td></tr> <tr><td colspan="3">TOLL RESTRICTION</td></tr> <tr><td>ENABLED</td><td></td><td></td></tr> <tr><td>DISABLED</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = DISABLED</td></tr> </table>	SYSTEM SPEED DIAL			TOLL RESTRICTION			ENABLED			DISABLED			DEFAULT = DISABLED		
SYSTEM SPEED DIAL																	
TOLL RESTRICTION																	
ENABLED																	
DISABLED																	
DEFAULT = DISABLED																	
<p>Automatic Pause Insertion: When the system stores a dialed number for later redial, it automatically stores a pause whenever the user waits between digits. The wait period is programmable.</p>	<p>Dial 15. Press prog. button A1. LED ON = 2 Sec. Press *for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A1</td></tr> <tr><td>TIME</td><td>750 Msec</td><td>7 s e c</td></tr> <tr><td>FENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = 2 SEC.</td></tr> </table>	BUTTON	A1	A1	TIME	750 Msec	7 s e c	FENTRY			DEFAULT = 2 SEC.					
BUTTON	A1	A1															
TIME	750 Msec	7 s e c															
FENTRY																	
DEFAULT = 2 SEC.																	
<p>Tone or Voice Signalling: intercom calls can be tone signalled or voice signalled. The first choice in signalling is programmable.</p>	<p>Dial 15. Press A2 LED ON = TONE Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A2</td><td>A2</td></tr> <tr><td>FEA.</td><td>TONE</td><td>VOICE</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = VOICE</td></tr> </table>	BUTTON	A2	A2	FEA.	TONE	VOICE	ENTRY			DEFAULT = VOICE					
BUTTON	A2	A2															
FEA.	TONE	VOICE															
ENTRY																	
DEFAULT = VOICE																	
<p>Exclusive Hold: The user can set a hold condition whereby only the station placing the call on hold can retrieve it. Exclusive hold can be disabled by programming action.</p>	<p>Dial 15. Press A3. LED ON = ENABLED Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A3</td><td>A3</td></tr> <tr><td>FEA.</td><td>ENABLED</td><td>DISABLED</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = ENABLED</td></tr> </table>	BUTTON	A3	A3	FEA.	ENABLED	DISABLED	ENTRY			DEFAULT = ENABLED					
BUTTON	A3	A3															
FEA.	ENABLED	DISABLED															
ENTRY																	
DEFAULT = ENABLED																	
<p>Call Pickup System: A call can be answered at one telephone when it is ringing at another telephone. Call pickup can be disabled by programming action.</p>	<p>Dial 15. Press A4. LED ON = ENABLED Press *for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A4</td><td>A4</td></tr> <tr><td>FEA.</td><td>ENABLED</td><td>DISABLED</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = DISABLED</td></tr> </table>	BUTTON	A4	A4	FEA.	ENABLED	DISABLED	ENTRY			DEFAULT = DISABLED					
BUTTON	A4	A4															
FEA.	ENABLED	DISABLED															
ENTRY																	
DEFAULT = DISABLED																	

PROGRAMMING NOTE: All features described on this page can be programmed after dialing 15 once. Just press the program button for each feature to be programmed.

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Longer DTMF Tones: The off-time of the DTMF tone is fixed at 50 msec. and the on-time is defaulted to 50 msec. This combination provides a very short DTMF tone. The on-time is programmable to 80 msec. to allow for a longer tone when it is needed. Normally the short tone gives satisfactory **results**; however some ancillary devices may require the longer tone. If the system users experience unsatisfactory ancillary device operation, try making the DTMF tone longer using this programming procedure. Also refer to the procedure titled, *Extended DTMF*.

Dial 15.
 Press program button **A9**
 (LED On = 80 msec,
 LED Off = 50 msec.
 Press * for next feature.

DTMF DIALING TONE LENGTH	
50 MSEC. ON - 50 MSEC. OFF	
80 MSEC. ON - 50 MSEC. OFF	
DEFAULT = 50 MSEC ON/50 MSEC OFF	

Extended DTMF: The system can access answering machines, banking computers, voice mail, etc. that require DTMF tones that are longer than standard tones. This programming option enables the programmed Extended DTMF tone to automatically activate after the station has been off-hook 10 **sec.** or more. also refer to the procedure titled *Longer DTMF Tones*.

Dial 16.
 Press prog. button.
 Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
MSEC	50	100	150	200	250	300	350	450	550	650
ON-TIME DEFAULT = 50 MSEC										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
MSEC	80	160	240	320	400	480	560	720	880	1040
On-Time Reprogrammed To 80 Msec.										

Press ***SPKR** to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

<p>Line Disabled: A line can be taken out of service because of line defect or other reason.</p>	<p>Dial 30. Press prog. button. LED ON = DISABLED Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A2</td><td>A3</td><td>A4</td><td>A5</td><td>A8</td><td>A9</td><td>A10</td><td>A11</td><td>A12</td></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = NONE ASSIGNED</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = NONE ASSIGNED										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = NONE ASSIGNED																																														
<p>Auxillary Line: A line can be conditioned to serve as a port for an external paging amplifier. (See Note 1)</p>	<p>Dial 31. Press prog. button. LED ON = AUX LINE Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A2</td><td>A3</td><td>A4</td><td>A5</td><td>A8</td><td>A9</td><td>A10</td><td>A11</td><td>A12</td></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = NONE ASSIGNED</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = NONE ASSIGNED										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = NONE ASSIGNED																																														
<p>Line Type 1: A line port is assigned as type 1 when any enabled toll restriction is to be applied with the first digit dialed. Such a line type is often assigned when a CO line is connected. (See Note 1)</p>	<p>Dial 32. Press prog. button. LED ON = TYPE 1 Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A2</td><td>A3</td><td>A4</td><td>A5</td><td>A8</td><td>A9</td><td>A10</td><td>A11</td><td>A12</td></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = ALL LINES ASIGNED</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = ALL LINES ASIGNED										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = ALL LINES ASIGNED																																														
<p>Line Type 2: A line port is assigned as type 2 when any enabled toll restriction is to be applied beginning with the second digit dialed. Such a line type is often assigned when a PBX or CENTREX line with any trunk access code is connected. (See Note 1)</p>	<p>Dial 33. Press prog. button. LED ON = TYPE 2 Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A2</td><td>A3</td><td>A4</td><td>A5</td><td>A8</td><td>A9</td><td>A10</td><td>A11</td><td>A12</td></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = NONE ASIGNED</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = NONE ASIGNED										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = NONE ASIGNED																																														

NOTE 1: When a line type is unassigned (LED OFF), it enters a disabled state. It must be reassigned as a particular type to be enabled- /t cannot be enabled using the Line Disabled feature.

Press * SPKR to end programming.

Enter Bast Level: Press ITCM, then dial *#746*.

Line Type 3: A line port is assigned as type 3 when any enabled toll restriction is to be applied beginning with the second digit dialed whenever the first digit is a 9. If the first digit is not a 9, no restriction is applied. Such a line type is often assigned when a PBX or CENTREX line with a trunk access code of 9 is connected. (See Note 1 on page 4-10)

Dial 34

Press prog. button.
LED ON = TYPE 3
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = NONE ASSIGNED										

Pulse/Tone Swtchable: When rotary dial lines are installed, the user can switch from pulse (rotary dial signals) to tone (Dual Tone Multiple Frequency signals) for accessing special circuits requiring DTMF tones such as banking machines. This pulse/tone switchability must be programmed for the line. Lines are defaulted for tone signalling only.

Dial 36.

Press prog. button.
LED ON = TONE
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = TONE										

Abandoned Hold Release: When a distant party abandons a hold condition and disconnects, the central office will send a forward disconnect signal to the telephone system. The forward disconnect signal may be either 50 msec. or 350 msec. in length. Program the system to match central office time.

Dial 37.

Press prog. button.
LED ON = 50 msec.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = 50 MSEC.										

Automatic Privacy: A line can be made private or nonprivate. In the private mode, a station has exclusive use of a line during a call. Lines are private unless reprogrammed to be nonprivate.

Dial 38.

Press prog. button.
LED ON = NONPRIVATE
Press * for next feature

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = PRIVATE										

Press * SPKR to end programming.

Enter Base Level: Press ITCM, then dial * # 7 4 6 *.

Port Definition: A station port can be programmed to accept one of several different types of station equipment or to support off-hook call announce connections.

3/8 UNE TELEPHONE = 6414X, 64149
MULTILINE TELEPHONE = 6614, 6614S, 6614E, 6614T, 6620, 6620S, 6620E, 6620T, 6702X, 6706X, 6714S, 6714X
OFF-HOOK CALL ANNOUNCE = AI SOHVA - equipped telephones DB32S
OPX UNIT = OPX-1
IST = Industry-Standard Telephone
DSS/BLF CONSOLE = EB32X, DB32, DB40, DB70
ILCD SPEAKERPHONE = 6600S, 6600E
SLPS = 6701X (Single-Line Proprietary Telephone)

Dial 61.
 Dial port ID (10-33).
 Press prog. button.

- A1 = 3/8 LINE TELEPHONE
- A2 = MULTILINE TELEPHONE
- A3 = OFF-HOOK CALL ANNOUNCE
- A4 = OPX UNIT (Prime line intercom automatically enabled when OPX port is assigned)
- A4=IST
- A5 = DSS/BLF CONSOLE
- A8 = LCD SPEAKERPHONE
- A9 = SLPS

Press # + PORT ID for next station.
 OR
 Press * for next feature.

STATION																							
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33

DEFAULT = MULTILINE TELEPHONE

Flexible Ringing Assignment:
 Ringing assignments are programmable on a per line/per station basis. Delayed ringing can be program enabled for some lines and direct, or immediate, ringing can be program enabled for others.

Direct ringing
 Dial 50.
 Dial port ID (1033).
 Press AI -A5, A8-A12 (for lines I-10)
 Press # + PORT ID for next station.
 OR
 Press * for next feature.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

DEFAULT = AU LINES ASGND AT STA 10.17 & 32

Delayed ringing
 Dial 51.
 Dial port ID (10-33).
 Press AI -A5, A8-A12 (for lines I-10).
 Press # + PORT ID for next station.
 OR
 Press * for next feature.

Delayed ringing
 Dial 51.
 Dial port ID (10-33).
 Press AI -A5, A8-A12 (for lines I-10).
 Press # + PORT ID for next station.
 OR
 Press * for next feature.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

DEFAULT = NO LINES ASGND

Press * SPKR to end programming.

4-15

		STATION																							
		10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
<p>Night Transfer (of ringing): The day, or normal, ringing of incoming lines can be transferred to a particular station or stations by the attendant for off-hour or special purpose answering. Stations are assigned to receive night transfer by programming action.</p>	<p>Dial 56. Dial port ID (10-33). Press A1-A5, A8-A12 (for lines 1-10). Press # + PORT ID for next sta. OR Press * for next feature.</p>																								
		<p>DEFAULT = ALL LINES ASGND AT STA 10, 17 & 32</p>																							
<p>Access Denied: Access to particular lines can be denied at individual stations.</p>	<p>Dial 52. Dial port ID (10-33). Press A1-A5, A8-A12 (for lines 1-10). LED ON = DENIED Press # + PORT ID for next sta. OR Press * for next feature.</p>																								
		<p>DEFAULT = DISABLED</p>																							
<p>Originating Denied: The ability to originate calls on certain lines can be denied at individual stations.</p>	<p>Dial 53. Dial port ID (10-33). Press A1-A5, A8-A12 (for lines 1-10). LED ON = DENIED Press # + PORT ID for next sta. OR Press * for next feature.</p>																								
		<p>DEFAULT = DISABLED</p>																							
<p>Privacy Release: A line can be made non-private at a particular station while remaining private at all other stations. Stations can be programmed to automatically release line privacy when on certain lines.</p>	<p>Dial 54. Dial port ID (10-33). Press A1-A5, A8-A12 (for lines 1-10). LED ON = RELEASED Press # + PORT ID for next sta. OR Press * for next feature.</p>																								
		<p>DEFAULT = NOT RELEASED</p>																							

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Idle Line Preference: Going off-hook automatically selects an idle line for use. Lines available for selection are assigned by programming.

Dial 55.
Dial port ID (10-33).
Press AI -A5, A8-A12 (for lines 1-10).
Press # + PORT ID for next sta.
OR
Press * for next feature.

STATION																							
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33

DEFAULT = DISABLED

Ring Line Preference: A ringing line will automatically be answered when a station is taken off-hook.

Dial 60.
Dial port ID (1033).
Press prog. button A8.
LED ON = AS'GND
Press # + PORT ID for next sta.
OR
Press *for next feature.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

DEFAULT = DISABLED

Prime Line: A line designated to a particular station is automatically selected for use when that station is taken off -hook.

Dial 57.
Dial port ID (10-33).
Press AI -A5, A8-A12 (for lines 1-10) or press ITCM.
Press # + PORT ID for-next sta.
OR
Press * for next feature.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

DEFAULT = DISABLED

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial ***#746***.

STATION																																		
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33											
DEFAULT = ALL CALL ASGND																																		
DEFAULT = TONE 1																																		
DEFAULT = NOT ASSIGNED																																		

All-Call and Zone Paging: Stations can receive voice announcements through the telephone speaker, or through an external paging speaker connected to a PA port, and transmit them with the telephone handset. Announcements can be to certain areas of the system or to all stations in the system.

Dial 58.
Dial port ID (10-33).
Press prog. button.
• A1 = RECEIVE ZONE 1
• A2 = RECEIVE ZONE 2
• A3 = RECEIVE ZONE 3
• A4 = RECEIVE ALL-CALL
• A5 = XMIT ZONE 1
• A8 = XMIT ZONE 2
• A9 = XMIT ZONE 3
• A10 = XMIT ALL-CALL
Press # + PORT ID for next sta.
OR
Press * for next feature.

Personal Ringing Tones: A station can be programmed to ring in one of four distinctive tones.

Dial 60.
Dial port ID (10-33).
Press prog. button.
• A1 = TONE 1
● A2=TONE2
● A3=TONE3
● A4=TONE4
Press # + PORT ID for next sta.
OR
Press *for next feature.

External Paging interface - Station IPort: A station port can be programmed to interface with an external paging amplifier (PA port).

Dial 60.
Dial port ID (10-33).
Press prog. button A5.
Press # + PORT ID for next sta.
OR
Press * for next feature.

Press * **SPKR** to end programming.

Enter Base Level: Press **ITCM**, then dial * # 7 4 6 *.

Headset Interface: A station port can be programmed to allow headset operation **provided** by a special telephone.

Dial 60.
Dial port ID (10-33).
Press prog. button **A9**.
Press # + PORT **ID** for next sta.
OR
Press * for next feature.

Secure Off-Hook Voice Announce (SOHVA) Groups: The ability of a station to receive and/or originate SOHVA or OHVA calls can be disabled through programming so that certain stations can be grouped together for SOHVA or OHVA calling between one another while other stations in the system are excluded from this group. Stations can be arranged in up to four different groups for exclusive SOHVA or OHVA calling.

Dial 63.
Dial port ID (10-33).
- Press program button to disable receive capability.
LED ON = disabled
A1 = receive group 1
A2 = receive group 2
A3 = receive group 3
A4 = receive group 4
- Press program button to disable originate capability.
LED ON = disabled
A5 = originate group 1
A8 = originate group 2
A9 = originate group 3
A10 = originate group 4
Press * for next feature.

NOTE: SOHVA and OHVA calling requires two data-paired station ports.

STATION																																									
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33																		
STA								REC GP				ORIG GP				STA								REC GP				ORIG GP													
10		11		12		13		1	2	3	4	1	2	3	4	22		23		24		25		1	2	3	4	1	2	3	4	30		31		32		33			

DEFAULT = ALL STATIONS RECEIVE AND ORIGINATE SOHVA AND OHVA

Press * **SPKR** to end programming.

Enter Base Level: Press **ITCM**, then dial * # 7 4 6 *

Non-Square System: Each programmable button at every station can be assigned individually (mapped) to select any line assigned to that station or to provide other button functions. Programmable buttons can be assigned as direct station select (DSS) buttons to provide one-key access to system stations. Programmable buttons can be assigned as idle (blanked) to provide autodial buttons for the user.

NOTE: When a line is reassigned from a defaulted button location to a different button location, the defaulted button must then be assigned to an idle condition (blanked). This action must be taken to ensure that status indications for the line will appear at the LED of the button that is now assigned to have line appearance.

4 button must be blanked even though it does not appear on the particular telephone being programmed.

1. Dial 59.
2. Dial port ID (1 0-33)
3. Press station button to be programmed.
 - **A1 - A14 and B1 - B8.**

NOTE: If programming with a model 6702X or 6714X telephone that does not include a full complement of buttons, dial a number to select the button to be programmed

1 - 8 = B1 - B8

9 = A7

0 = A14

4. Press prog. button to assign line
 - **A1 - A5 = Lines 1 - 5.**
 - **A8 - A12 = Lines 6 - 10**
 - OR-
 - Dial 10 - 33
 - for DSS Sta 10 - 33
 - OR-
 - Press TAP for **idle** (blank) buttons for user **autodial** purposes
5. Press # + PORT ID for next station

-OR-

Press * for next feature.

EXAMPLE: To re-assign line 7 from **B7** default to **A8** location at station port 15 containing model 6706X telephone,

1. Dial 15 (for station port 15)
2. Press **A8** (to select button **A8**)
3. Press **A9** (to re-assign line 7)
4. Dial **7** (to select **B7** location even though not present on model 6706X telephone).
5. Press TAP (to move line 7 status LED for button **A8**)

BUTTON	B1	B2	B3	B4	B5	B6	B7	B8	A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14
STA 10																						
STA 11																						
STA 12																						
STA 13																						
STA 14																						
STA 15																						
STA 16																						
STA 17																						
STA 18																						
STA 19																						
STA 20																						
STA 21																						
STA 22																						
STA 23																						
STA 24																						
STA 25																						
STA 26																						
STA 27																						
STA 28																						
STA 29																						
STA 30																						
STA 31																						
STA 32																						
STA 33																						

DEFAULT SETTINGS

B1 = LINE 1
B2 = LINE 2
B3 = LINE 3
B4 = LINE 4
B5 = LINE 5

B6 = LINE 6
B7 = LINE 7
B8 = LINE 8
A7 = LINE 9
A14 = LINE 10

Press * SPKR to end programming.

Section 3 Attendant Programming

Attendant programming can be performed from station 10 at any time during system operation.

NIGHT TRANSFER (of ringing)

The day, or normal, ringing of incoming lines can be transferred to a particular station or stations by the attendant for off-hour or special purpose answering.

1. Press **ITCM * #** .
2. Dial 03.
3. Press prog. button AI to toggle feature on or off .
The light next to program key AI will turn on when night transfer is active and ITCM light will flash.
4. Press * for next feature or press MNTR (SPKR) to end.

MUSIC ON HOLD

Music is provided to outside lines that are placed on hold if an external music source is connected to the system. Music on hold can be disabled by attendant action.

1. Press **ITCM * #**.
2. Dial 04.
3. Press prog. button AI to toggle feature on or off .
The light next to the program key AI will turn on when music on hold is active.
4. Press * for next feature or press **MNTR (SPKR)** to end.

SYSTEM SPEED DIALING

A special system-wide list of numbers can be programmed for automatic dialing by all users.

1. Press **ITCM * #**.
2. Dial 02.
3. Dial location (01-30). **Listen** for tone bursts.
4. Press line button for preselect (if desired).

NOTE: When no line is preselected and the system speed dial is used, the system will automatically pick the prime line assigned to the station (if enabled) or pick the most previously used line at that station.

5. Dial number (up to 15 digits).
6. Press **TRANS/CONF** button for next location and repeat procedure.
-OR-
Press SPKR to end.
-OR-
7. Press **TRANS/CONF** button, then press * for next feature.
6. Press * for next feature or press MNTR (SPKR) to end.

LOC	NUMBER	LOC	NUMBER	LOC	NUMBER
01		11		21	
02		12		22	
03		13		23	
04		14		24	
05		15		25	
06		16		26	
07		17		27	
08		18		28	
09		19		29	
10		20		30	



SYSTEM CLOCK

If the system has been modified to provide LCD speakerphone support, the system clock can be programmed to maintain current date and time information. The display will not show the date and time until this feature is programmed as follows:

1. Press **ITCM * #** .
2. Dial 01.
3. Dial two digits (W-99) for year.
4. Dial two digits (**01-12**) for month.
5. Dial two digits (**01-31**) for day.
6. Dial two digits (**00-23**) for hour.
7. Dial two digits (W-59) for minute.
8. Dial one digit (**1-7**) for day of **week**
-- Sun. = 1, Sat. = 7.
9. Press * for next feature or press **MNTR (SPKR)** to end.

STATION 10 - PROGRAMMING OVERLAY



- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

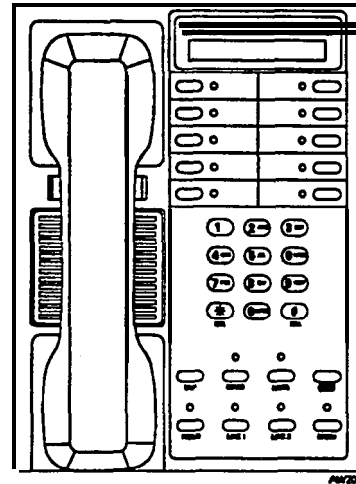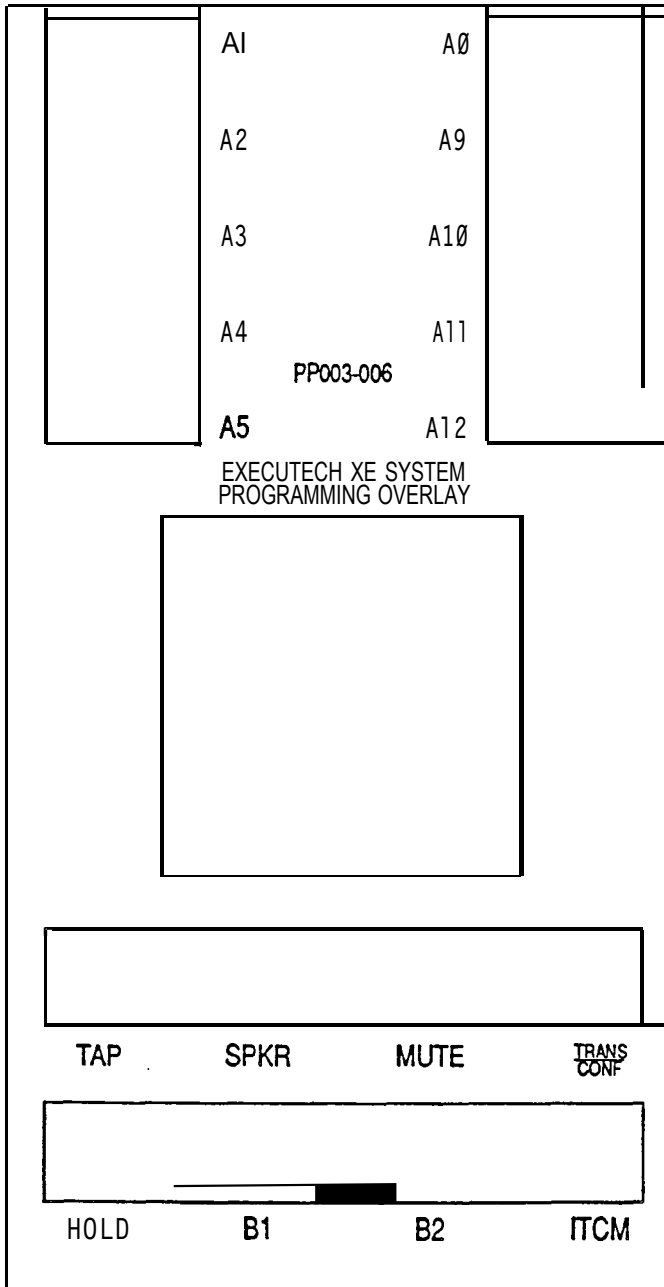

**BUTTONS A6 AND A13
CANNOT BE MAPPED
WITH THIS TELEPHONE**

STATION 10 - PROGRAMMING OVERLAY

- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

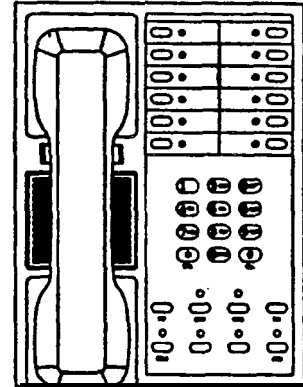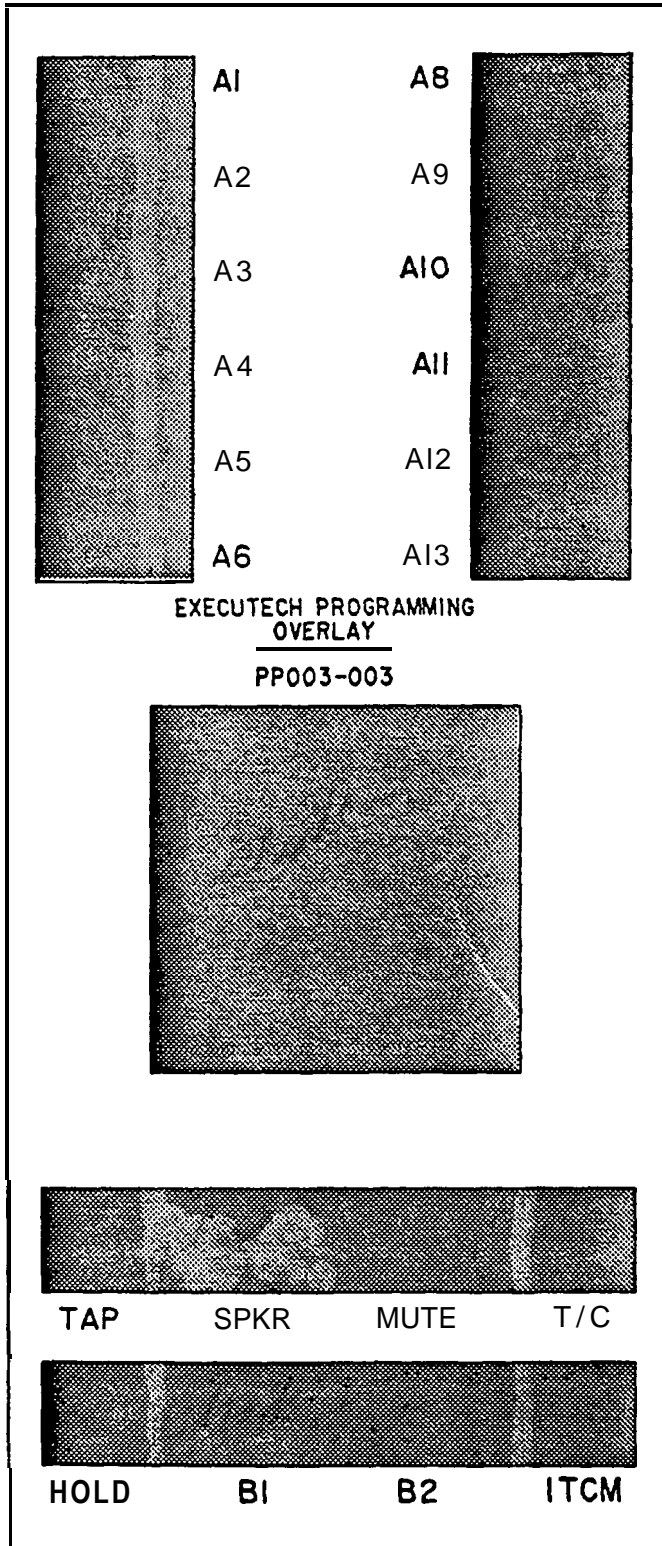

STATION 10 - PROGRAMMING OVERLAY


- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

	A1 A2 A3 A4 TAP SPKR	A8 A9 A10 A11 T/C MUTE	
--	---	---	--

EXECUTECH XE SYSTEM
 PROGRAMMING OVERLAY
PP003-002

B3	B4	B5	B6



HOLD A5 (OTHER COS) A12 (OTHER COS) **ITCM**
 B1 (KEY MAPPING) B2 (KEY MAPPING)

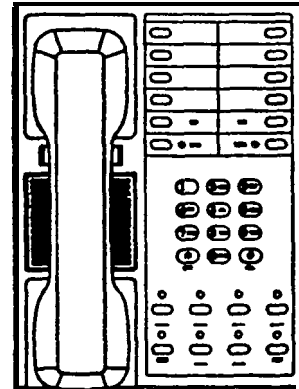

PERFORMING CLASS OF SERVICE PROGRAMMING WITH A MODEL 6706X TELEPHONE IS NOT RECOMMENDED UNLESS ALL TELEPHONES INSTALLED IN THE SYSTEM ARE MODEL 6706X TELEPHONES.

STATION IO - PROGRAMMING OVERLAY

- . Cut out along border.
- . Cut out shaded openings where necessary.
- . Fit over station faceplate.

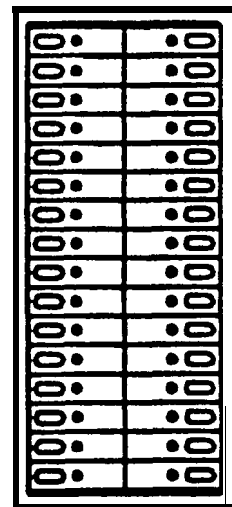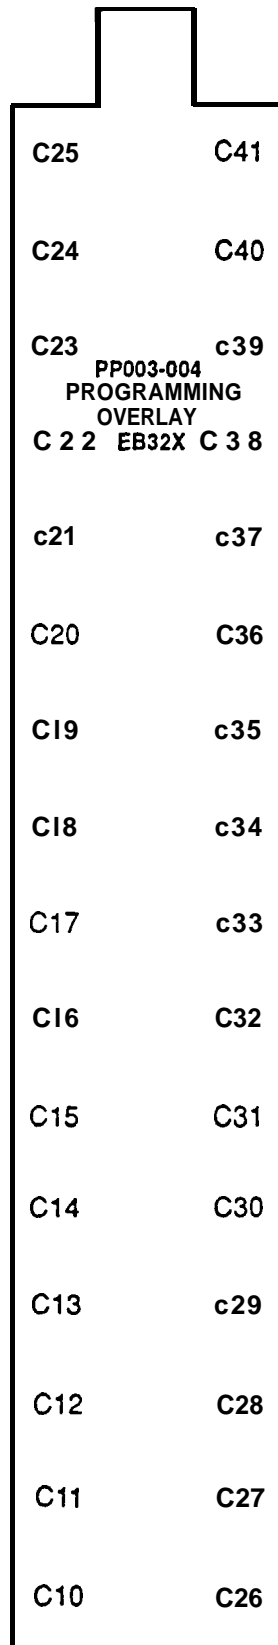


**32-BUTTON ADJUNCT
FEATURE MODULE
EB32X**

STATION 10 - PROGRAMMING OVERLAY

- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

703804-456
 PROGRAMMING
 OVERLAY
 DB32S


C25	C41
C 2 4	C40
C 2 3	C 3 9
c 2 2	C38
C21 c	3 7
C20	C 3 6
C 1 9	c 3 5
C 1 8	C 3 4
C17	c 3 3
C16	C 3 2
C 1 5	C31
C 1 4	C30
C 1 3	c 2 9
C 1 2	C 2 8
C11	C27
C10	C 2 6

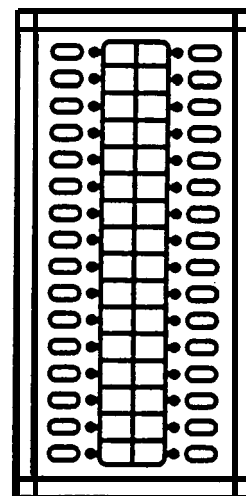

32-BUTTON ADJUNCT
 FEATURE MODULE
 DB32S


STATION 10 - PROGRAMMING OVERLAY

- . Cut out along border.
- . Cut out shaded openings where necessary.
- . Fit over station faceplate.

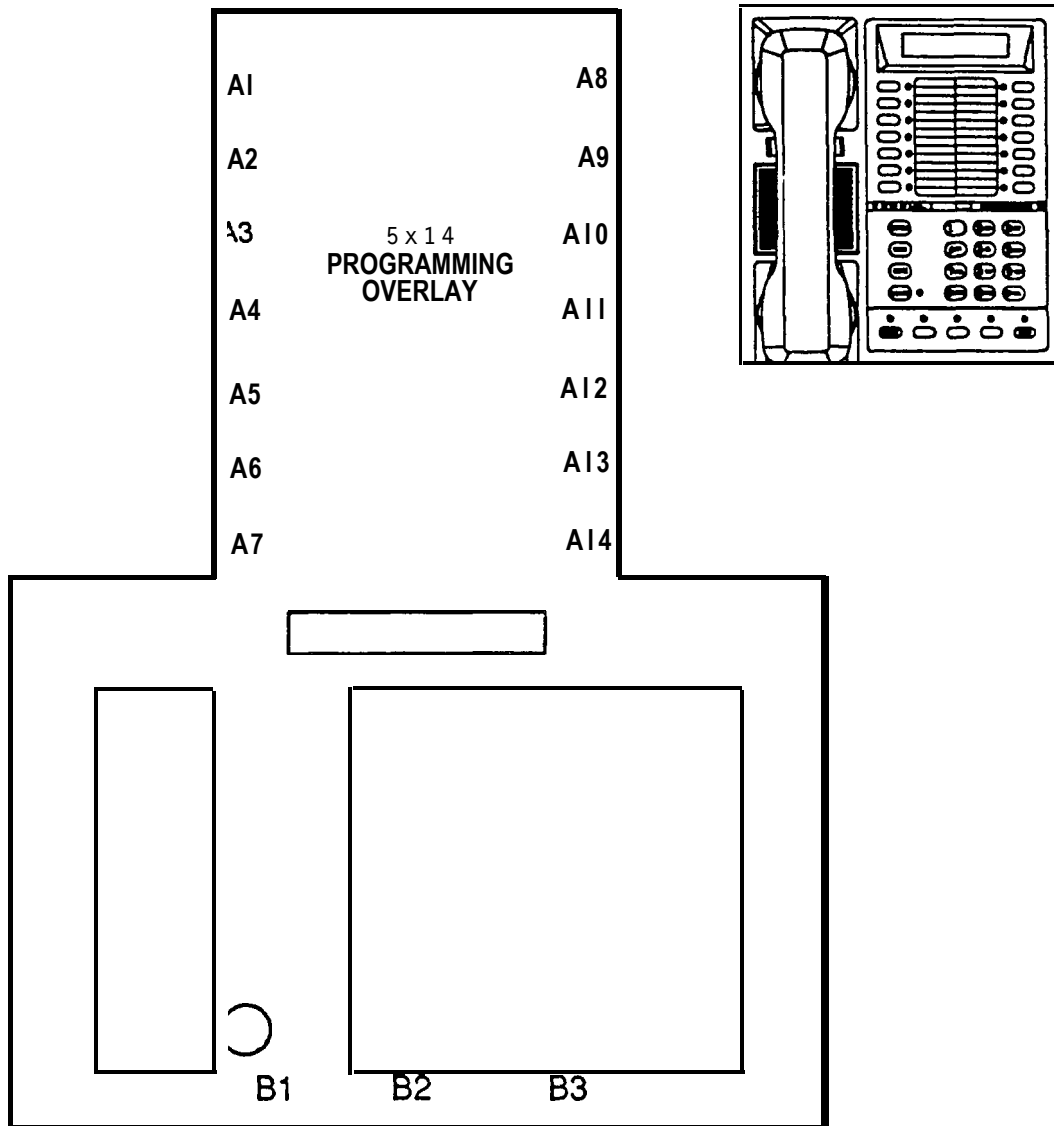


STATION 10 - PROGRAMMING OVERLAY

- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

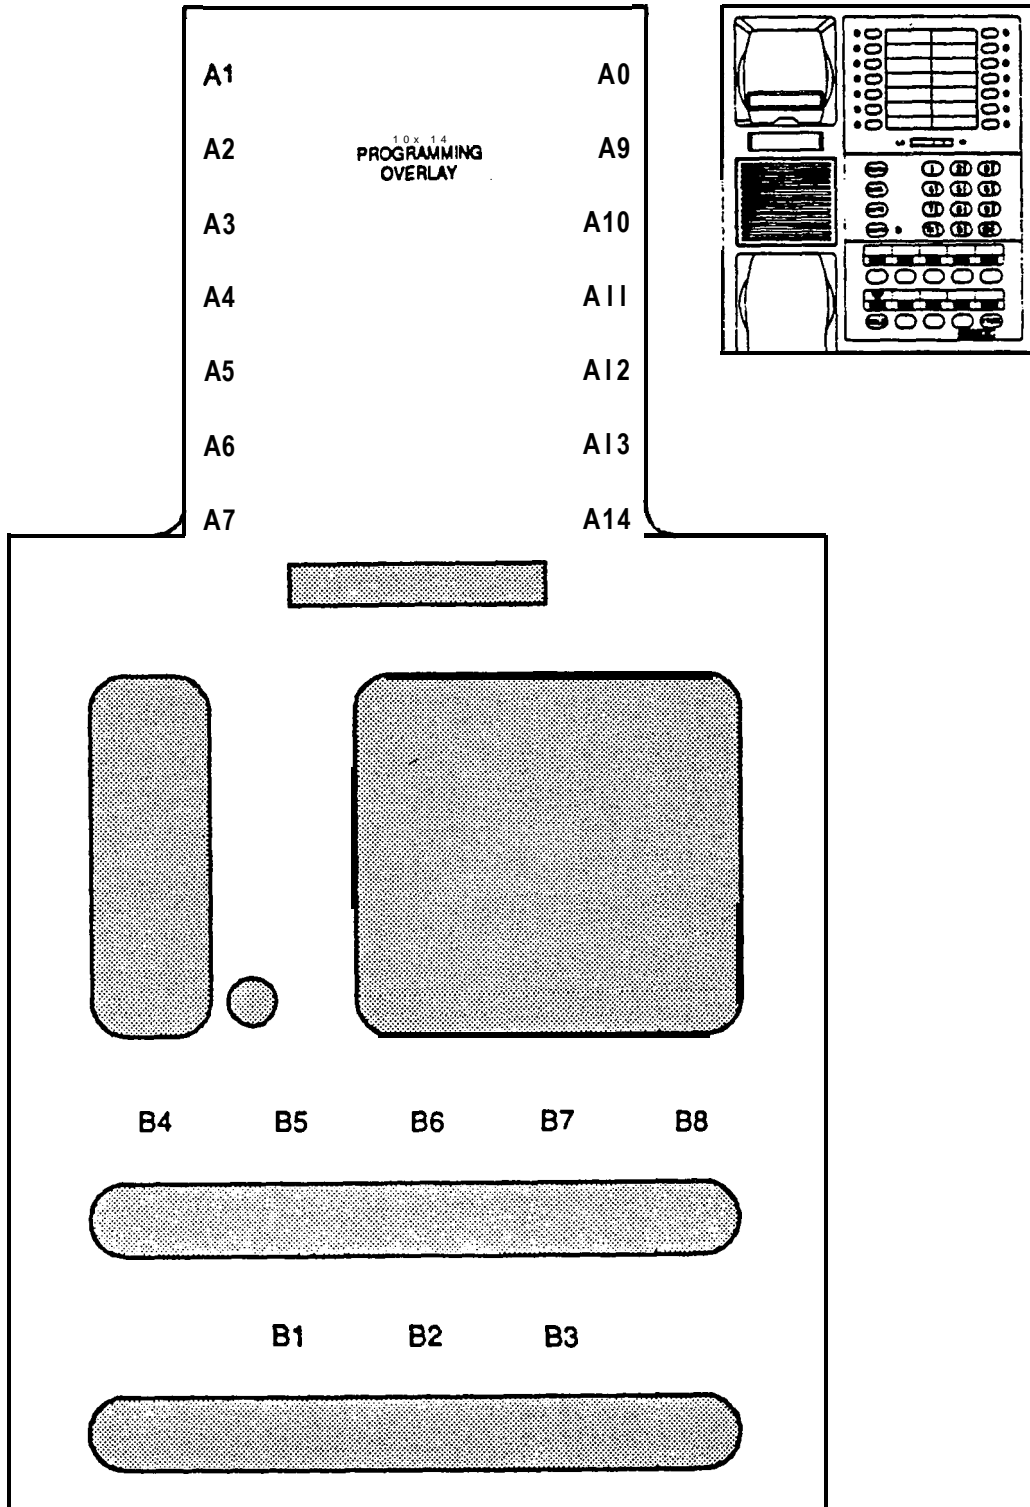


STATION 10 - PROGRAMMING OVERLAY

- . Cut out along border.
- . Cut out shaded openings where necessary.
- . Fit over station faceplate.

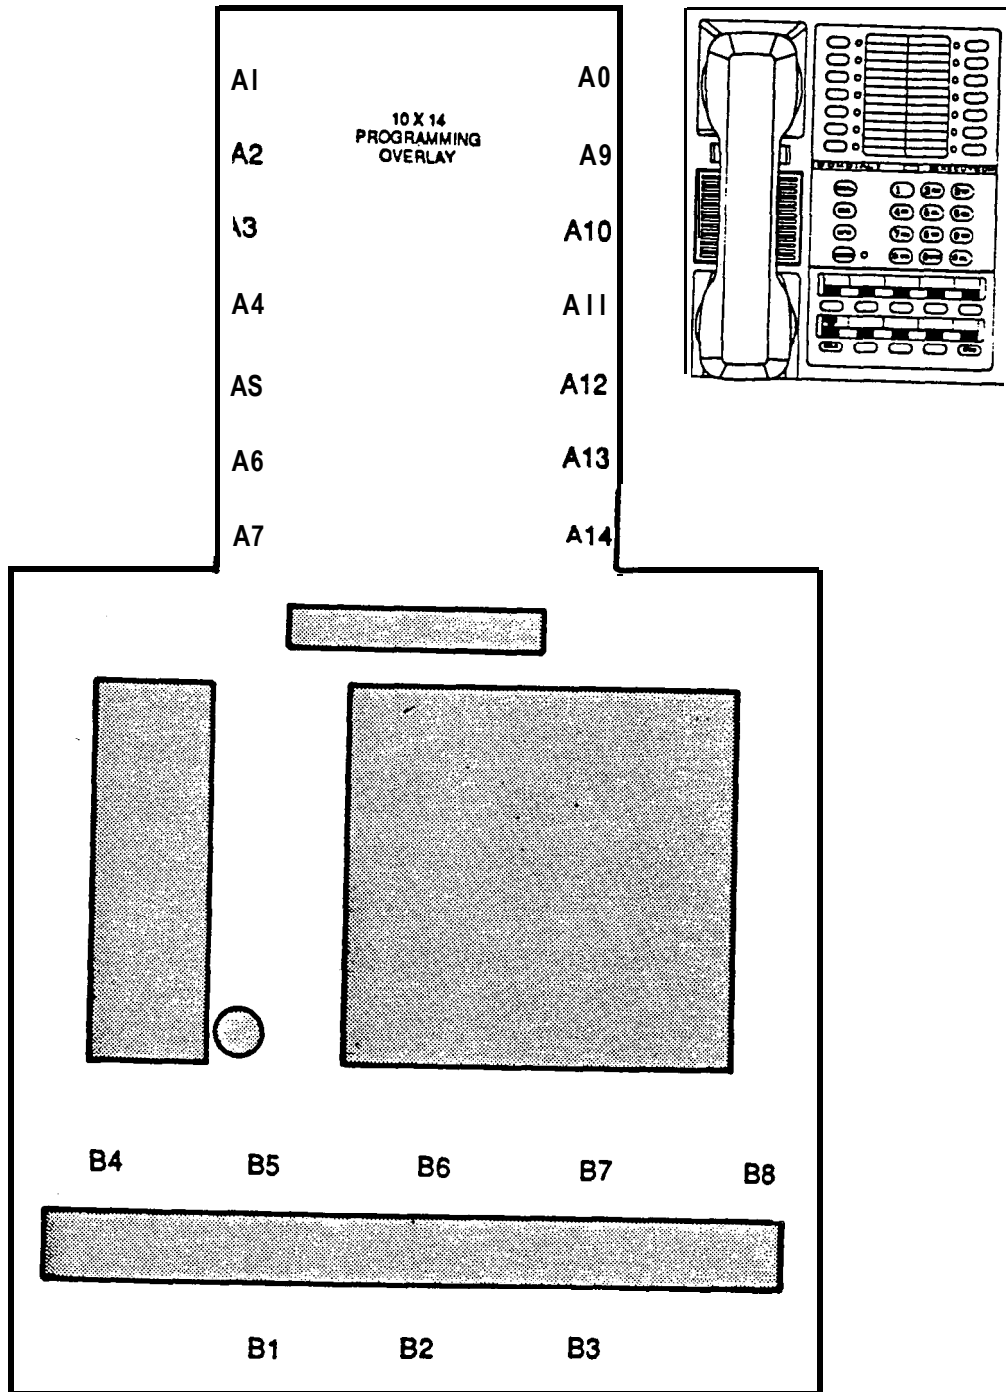

STATION 10 - PROGRAMMING OVERLAY


- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

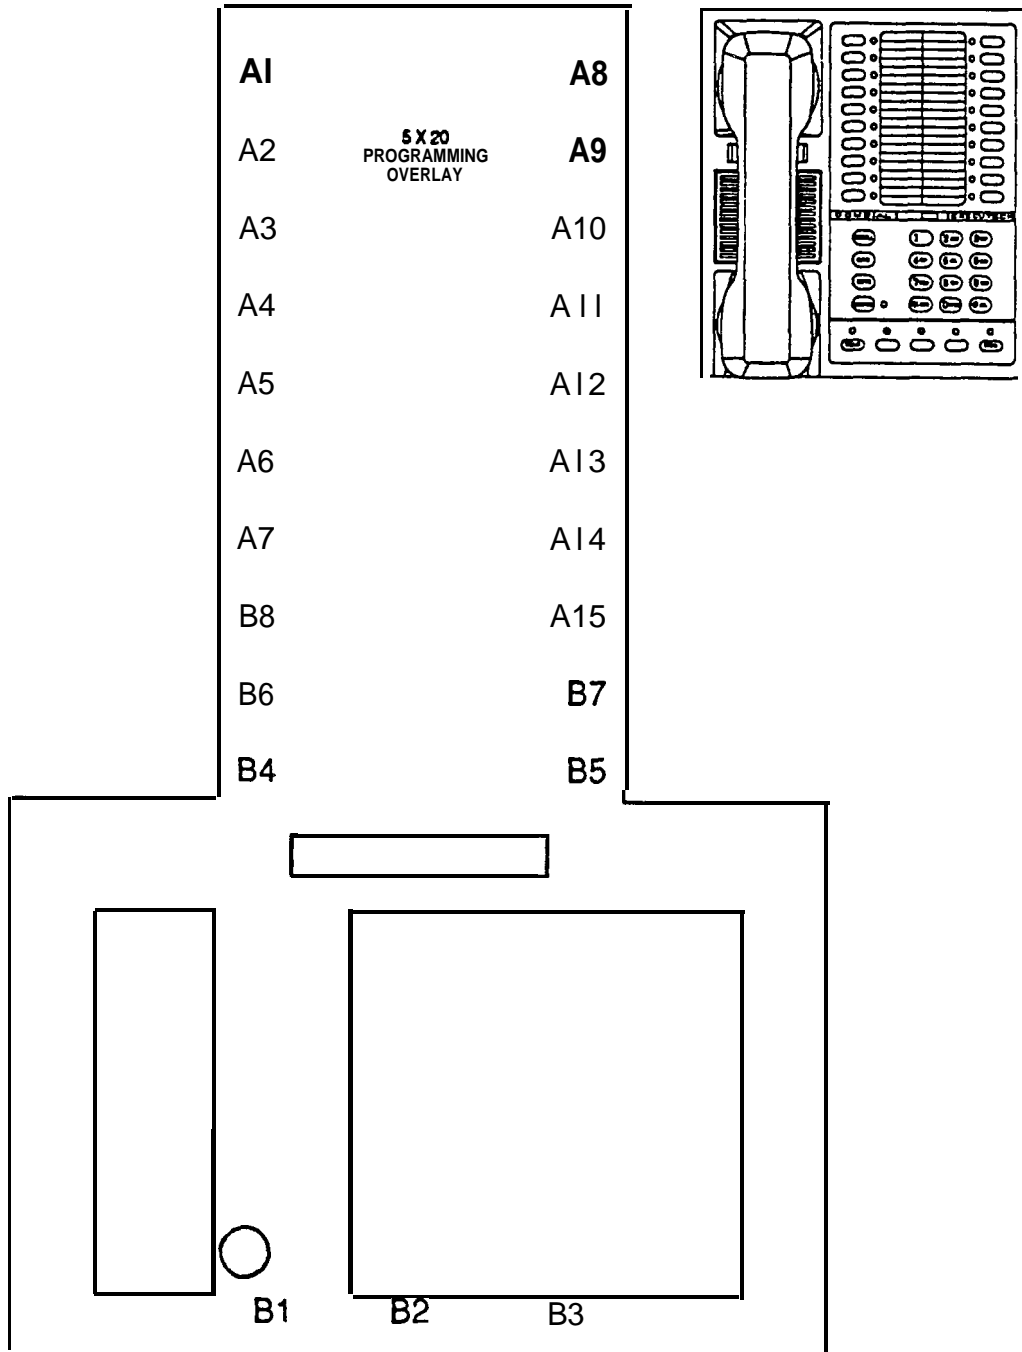

STATION 10 - PROGRAMMING OVERLAY

- Cut out along border.
- Cut out shaded openings where necessary.
- Fit over station faceplate.

A1		A8
A2	2 X 22 PROGRAMMING OVERLAY	A9
A3		A10
A4		A11
A5		A12
A6		A13
A7		A14
B7		B8
B5		B6
B3		B4
B1		B2

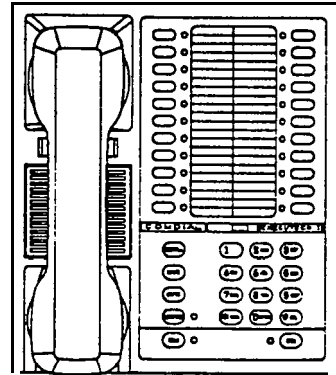

Chapter 5 System Operating Procedures

Section 1 Operating Multiline Telephones

Answering Calls

Answering Outside Calls

Calls appear at buttons that have actual line assignments. To answer a call:

- press line button of ringing line (line button with flashing light),
- lift handset.

NOTE: If a prime line is assigned and is ringing, or if the telephone can answer any ringing line (ringing line preference enabled), do not press the line button of the ringing line.

Answering Intercom Calls

To answer a **voice** call,

- speak toward the telephone,
- **lift** handset if privacy is desired.

NOTE: Voice calling can be blocked. See the discussion titled, Voice Announce Blocking for details.

To answer a tone call,

- lift handset to talk.

Call Pickup Answering

Direct

To answer a call that is ringing at another telephone,

- lift handset,
- press **ITCM**,
- **dial * 4**,
- dial extension number of ringing telephone.

System-wide

To answer a call that is ringing at any **station in** system,

- lift handset,
- press **ITCM**.

- Dial **# 4**.

Answering Handsfree (Handsfree Answerback - HFAB)

while a station is busy on a call, an off-hook **voice** announcement may be received either as a non-secure off-hook voice announcement (OHVA) or as a secure off-hook **voice** announcement (SOHVA). An OHVA announcement is sounded through the loudspeaker of a paired **32-button** console (model **DB32S-xx** adjunct feature module). A SOHVA announcement is sounded through the handset receiver of certain model multiline telephones.

Neither OHVA nor SOHVA calls will be received at stations that have the voice announce blocking feature enabled (see page 5-5).

To respond to an OHVA announcement,

- hear **ring** burst,
- hear alerting tone (several quick tone bursts) and announcement sounded from loudspeaker in adjunct feature module,
- speak toward microphone opening in front edge of the adjunct feature module housing to reply.

NOTE The distant party cannot be prevented from overhearing the announcement; however, the user can press and hold the MUTE button to prevent the distant party from hearing the response.

To respond to a SOHVA announcement,

- hear ring burst,
- hear tone alert and announcement in handset receiver (distant party cannot hear announcement),
- press and hold MUTE button, and reply by speaking into handset transmitter (distant party cannot hear response).

Making Calls

Making Outside Line Calls

To make an **outside call**:

- press line button to select line,

NOTE: Selecting a line is not necessary if:

- A priority line has **been assigned to a telephone (prime line feature enabled).**
- **The telephone automatically picks an idle line for use when the handset is lifted (idle line preference feature enabled).**

- listen for dial tone,
- dial number,

When party answers,

- lift handset.

To end call,

- hang up handset.

Making Intercom Calls

Intercom calls may be manually dialed or automatically dialed using a pre-programmed Direct Station Selection (DSS) button.

To make a **voice announce call** to an intercom station,

- lift handset,
- press ITCM,
- dial extension number (to call system operator, dial 0),
- speak to called party.

NOTE: Also refer to the section titled *Blocking Voice Announce Calls* for instructions for blocking this method of intercom calling at a station.

To make a **voice announce call** to a DSS number,

- lift handset,
- press programmable button that is programmed for desired station,
- speak to called party.

NOTE: The outside line is automatically placed on hold when a DSS button is pressed or when the ITCM button is pressed prior to manually dialing an intercom extension number.

To make a **tone call** to an Intercom station,

- lift handset,
- press ITCM,
- dial extension number,
- press ITCM again. Called telephone will ring.

NOTE: Some systems may be programmed to tone signal as the first option. Pressing ITCM a second time is not necessary in this case

To make a tone call to a DSS number,

- lift handset,
- press programmable button that is programmed for desired station,
- press ITCM. Called telephone will ring.

NOTE: The lights (LEDs) adjacent to programmable buttons indicate status of DSS telephones: **DARK** indicates idle telephone, **STEADY-ON** indicates telephone in use. **FLASHING** indicates station is ringing.

To make an **OHVA or SOHVA voice announcement** to another station that is busy on a call,

- lift handset,
- make intercom call to desired station,
- hear warning tone (several quick tone bursts), and make announcement,
- wait on line for reply.

NOTE: The distant party may receive the announcement as an off-hook voice announcement (OHVA) or as a secure off-hook voice announcement (SOHVA). The method in which the announcement is received is not controlled by the caller. Rather, it is dependent upon the type of equipment being used at the called station, how that equipment is wired, and class of service programming. A multiline telephone and DB32S-xx console (adjunct feature module) combination can receive an OHVA call but cannot receive a SOHVA one. Certain multiline telephones can receive calls in a SOHVA manner without the companion console but cannot receive calls in an OHVA manner. Neither OHVA nor SOHVA calls can be made to stations that have the voice announce blocking feature enabled (see page 5-5).

Using The Speed Dial

To dial station speed dial numbers,

- Press keypad digit 0 - 9 for desired personal speed dial number.

-OR-

If on line listening to dial tone,

- Press HOLD and then press desired keypad digit 0 - 9.

To dial system **speed** dial numbers,

- press *****,
- press keypad digits **01 - 30** for desired system speed dial number.

-OR-

If on **line listening to dial tone**,

- press **HOLD *** and then press desired keypad digits **01 - 30**.

Using Automatic Dialing

To **automatically dial** numbers,

- press desired programmable button.

If **desired programmable button is also programmed for DSS (one-button Intercom) calling**,

- **press HOLD** and then press desired programmable button.

*NOTE: Some telephone models provide an **A 16** button as **part** of the A-field buttons. This **A 16** button provides an automatic redial function as a fixed feature. Operation of this fixed automatic redial button is the same as that given for the programmed automatic redial button.*

Using The Automatic Redial

To **activate automatic** redial,

- press programmable button pre-programmed for that purpose. The stored number will be dialed **once** a minute for ten minutes.

If **called number is busy**,

- press automatic redial programmable button to immediately start the redial cycle,

If **call is answered**,

- take control by lifting handset. If control is not taken, call will drop.

To **cancel automatic redial**,

- press automatic redial button, lift and replace handset, or press any station button.

NOTE: Any user-originated station activity during automatic redial will cancel the feature.

Using The Last Number Redial

The last number previously dialed can be automatically redialed with one-button or two-button action.

- dial #. (If on-line listening to dial tone, press **HOLD** then dial **#**),
- listen for ringing or busy tone:
 - Ringing tone: When party answers, lift handset.
 - Busy tone: Press **MNTR (SPKR)** to disconnect.

Using The Auto-Save

The last manually dialed number can be automatically saved for later redial. As many numbers may be saved as there are blank programmable **buttons** available: however, the automatic saving of a number where one is already saved will result in the over-writing of the original saved number.

To **auto-save a manually dialed number**,

- lift handset or press **MNTR (SPKR)**,
- press line select button (if idle line preference is not enabled) to select line,
- dial number **from keypad**.

If **you wish to save number**,

- press desired programmable button to auto-save number,
- hang up.

To **dial an auto-save number**,

- press line select button (if **idle** line preference is not enabled) to select line,
- **press auto-save** button. Number is automatically dialed.

Using Extended DTMF

The length of the DTMF tone can be extended from the standard length to a pre-programmed longer length.

To **extend tone length**,

- take station off-hook (lift handset),
- press line button to select line if not automatically selected by going off-hook,
- wait 10 seconds, and dial number. (System will then generate long DTMF tones when dialing.)

-OR-

- immediately press **HOLD**, then press line button of selected line to set the system to generate long DTMF tones without waiting for delay conversion.

To **alternate between long length and standard length DTMF tones during a call**,

- **press HOLD**, then press line button for selected line.

Holding Calls

Setting A Manual Hold

To place call on **hold while on line**,

- Press **HOLD**.

To retrieve held call,

- press line button with flashing light,
- OR-
- press **TAP** if station does not have line appearance.

Setting An Exclusive Hold

(Only your telephone can retrieve held call.)

- Press **HOLD** twice.

Using The Hold Recall Feature

After a preprogrammed length of time, a call placed on hold will automatically ring back to the telephone that **placed it on hold. If** the call is on exclusive **hold**, it will revert to manual hold after the hold recall time **period**. The call can then be retrieved by anyone with that line appearance.

Transferring Outside Calls

Making A Screened Transfer

To transfer an outside call to another station in the system,

- answer outside call (do not press HOLD),
- press **TRANS/CONF** (outside call is placed on hold automatically),
- dial extension number of party to be transferred to (or press DSS button for one-button intercom calling),
- when intercom party answers, announce call and line number,
- hang up handset.

If the called party is busy or does not answer,

- press **TAP** or flashing line button to retrieve call.

Making An Unscreened Transfer

To transfer an outside call to another station in the system,

- answer outside call (do not press HOLD),
- press **TRANS/CONF** (outside call is placed on hold automatically),
- dial extension number of party to be transferred to (or press DSS button for one-button intercom calling),
- hang up handset.

*NOTE: If the station to which an unscreened transfer is made is busy, the transferred call **will camp-on** at the station. The **call** will automatically ring the station when it becomes **idle**. If a transferred call is not answered **after** a preprogrammed **time**, it will ring back to the transferring station.*

To answer recall of transferred call,

- Press **TAP** button.

Making Conferencing Calls

Conference transmission levels are not compensated and are dependent upon the quality of the external lines.

Making A Multiline Conference Call (2 external parties, 1 internal party)

To set up a multiline conference,

- establish first outside call (do not press HOLD),
- press **TRANS/CONF**. (outside call is placed on hold automatically),
- establish second **outside** call (do not press HOLD),
- press **TRANS/CONF**. Conference is established.

To drop one conferee and remain active in conference with other conferee,

- press HOLD Both lines placed on hold.

- press line button of party to be dropped,
- press and release hookswitch,
- press line key of party to be retained,
- resume conversation.

Making An Add-On Conference Call (1 external party, 2 internal parties)

- establish outside call,
- press **TRANS/CONF** (outside call placed on hold automatically),
- dial extension number of intercom party.
- wait for answer,
- press **TRANS/CONF** (a three-way connection is established).

Using The Message Waiting Light

The message waiting light at any telephone can be turned from another telephone to alert the user that a message awaits pickup.

To turn on MW light,

- press **ITCM**,
- dial * 3,
- dial extension number of station to be alerted. (The MW light of called station will flash.)

To turn off MW light,

- press **ITCM**,
- dial # 3.

- Dial extension number of station that was alerted. (The MW light of called station will turn off.)

To turn off MW light while delivering message,

- press HOLD.

To receive message when your MW light is on,

- observe flashing MW light,
- lift handset,
- press **ITCM HOLD**. Connection to message depositor is automatic.

Blocking Voice Announce Intercom Calls

To block voice calls,

- press **ITCM**,
- dial * 2.,
- hang up.

To un-block voice calls,

- press **ITCM**,
- dial # 2.,
- hang up.

Monitoring A Line

To monitor a line while on a call,

- press **MNTR (SPKR)**,
- hang up handset. Monitor **light** will turn on.

*NOTE: If a distant party places the call on **hold**, the station user can monitor in a handsfree manner until the party returns, and then lift the station handset to resume the call.*

To cancel,

- lift handset to resume **conversation**,
- OR-
- press **MNTR (SPKR)** to disconnect. **Monitor** light will turn off.

Signalling With Recall Or Flash

Flash

PBX, **CENTREX** and custom calling services may require this feature.

If a system has been configured for flash,

- press **TAP** to generate a timed flash signal.

Recall

This feature provides disconnect and dial tone recall.

If a system has been configured for recall,

- press **TAP** to disconnect current call and receive a new dial tone for another **call**.

*NOTE: A system can be configured for either flash or recall but not **for both**.*

Making Page Calls

Paging Through An External Amplifier

(Requires external paging unit)

- press line button dedicated to paging,
- dial zone number if required.

Making All-Call And Zone Pages Through The Station Speakers

To page,

- lift handset,
- press **ITCM**,
- dial zone number - (4 for zone **1**, **5** for zone **2**, **6** for zone 3, or 7 for all-call),
- make announcement.
- hang up handset or wait on line for an answer.

Engaging The Do Not Disturb Condition

To silence a station ringer and appear busy to Intercom calls,

- press **MNTR (SPKR)**. (Associated light will turn on).

*NOTE: The calling party **will** hear two quick tone bursts every three seconds. The feature cannot be overridden by the calling party.*

To cancel,

- press **MNTR (SPKR)** again. (Associated light will turn off.)

Muting Your Telephone And Inhibiting Handsfree Answering

The MUTE button is in a non-latching **mode** when the station handset is lifted and in a latching mode when the station is operated in a handsfree manner.

To prevent **distant party** from hearing while **handset** is lifted,

- press and **hold MUTE**. Speaker light will flash.

To resume two-way conversation,

- release MUTE. Speaker light will **turn** off.

To inhibit handsfree answer of intercom calls,

- press and latch **MUTE**. Speaker light will flutter.

To enable handsfree answer of Intercom calls,

- press and release MUTE. Speaker light will **turn** off.

Switching Between Pulse And Tone Dialing

If the local telephone **service** is pulse (rotary) but tone **generation** is **required** during the call, convert to tone **while dialing** as follows:

- press # at point in dialing sequence where conversion to tone is required. (System will switch back to pulse dialing when call is ended.)

NOTE: Pulse/Tone switching can be stored at a programmable button by pressing # during number storage.

Choosing Personal Ringing Tones

A station user can select one of four different ringing tones for use at a station.

- press **ITCM * 8**,
- dial 4,
- dial **1, 2, 3**, or 4 (selects tones **1, 2, 3**, or 4).

TONE	FREQUENCY PAIR	WARBLE RATE
TONE 1	509/610 Hz	10 Hz
TONE 2	763/1016 Hz	10 Hz
TONE 3	509/610 Hz	19 Hz
TONE 4	763/1016 Hz	19 Hz

Turning On Background Music

Music must be supplied by the system before it can be turned on at a telephone. Background music, when supplied, automatically turns off during calls.

To turn **music** on,

- press **ITCM**,
- dial * **1**. (Speaker **light will** turn on.)

- adjust loudness of **music** with call monitor speaker volume control.

To turn **music** off,

- press **ITCM**,
- dial # **1**. (Speaker **light will** turn off.)

Operating A Speakerphone (ExecuTech Model 6600S-xx and 6600E-xx Telephones)

The optional speakerphone can exercise the previously described features in a handsfree manner. Handsfree calling and call answering is as described below.

To place a call,

- press line button or **ITCM**,
- dial number or press programmable button,
- when party answers, speak toward the telephone.

To answer a call,

- press a line button

- speak toward the telephone.

To end a call,

- press **SPKR**.

To switch from speakerphone to handset,

- **lift** handset.

To switch from handset to speakerphone,

- press **SPKR**,
- hang up handset.

Programming A Station

CAUTION

*The Federal Communications Commission (FCC) requires that when users program emergency numbers and/or when they make **test** calls to emergency numbers that they fake the following steps:*

- *Remain on the line and briefly explain to the dispatcher the reason for the call.*
- *Perform such **activities** in the off-peak hours; such as early morning or late evenings*

Programming The Autodial

Autodial numbers can be stored at any programmable button locations that do not have a line assigned to them. They can also be programmed as a secondary function at every **DSS/BLF** memory location. Console buttons that are fixed for **DSS/BLF** operation also provide **autodial** locations at a second level of storage. Plus any available buttons between the system station capacity through a maximum of 32 are available as **autodial** locations at the first level of storage.

Typical **autodial** numbers are: frequently dialed telephone numbers or extension numbers, or frequently used host system or key system feature codes. When programming an **autodial** number, first decide over which circuit the call must be made. Then, determine the digits that normally have to be manually dialed to reach the called party or feature. This circuit selection and digit sequence can be stored as an **autodial** for later one or two-button access. If line pre-selection is not programmed, the system will automatically pick the prime line assigned to the telephone (if enabled), or pick the last used line at that station and place the call over that selection.

To program autodial numbers,

- press **ITCM ** 1**,
- press desired programmable button and listen for fast tone bursts,
- press specific line button or **ITCM** button to store line or intercom **preselection** if desired (optional),
- dial the number sequence to be stored. (up to 15 digits can be stored and valid digits include 0 - 9, #, and *).
 - To store a pause if required, press **HOLD**.
 - To store a hookflash if required, press **TAP**.

To store another number,

- press **TRANS/CONF**,
- press next programmable button,
- make line or intercom preselection if desired (optional),
- dial number for storage,
- repeat this procedure until all desired numbers are stored.

To store autodial number at DSS programmed button,

- press **TRANS/CONF**.
- press desired DSS button (see page 5-9 for DSS button programming),
- make line or intercom preselection if desired (optional),
- dial number for storage,
- repeat this procedure until all desired numbers are stored.

To end autodial programming,

- press **MNTR (SPKR)**.

Programming The Station Speed Dial

Station speed dial numbers can be stored by the station user for later redial. The storage locations are keypad digits 0 through 9 on the station. Before attempting to program, decide on the following **items**: (1) the number or feature to be stored, (2) which storage location will be used (0 - **9**), (3) the circuit that the call will go over (individual line or Intercom).

To program numbers,

- press **ITCM**2**,
- dial a memory location (0 through **9**),
- press specific line button or **ITCM** button to store line or intercom preselection if desired (optional),
- dial the number sequence to be stored. (up to 15 digits can be stored and valid digits include 0 - 9, #, and *).
 - To store a pause **if** required, press HOLD.
 - To store a hookflash **if** required, press TAP.

Example: Store a telephone number under location 0. The sample number is **1(804)555-2222**. Program it as follows:

ITCM, *, *, 2, 0, Line Button, 1, 8, 0, 4, 5, 5, 2, 2, 2, 2.

To store another number,

- press TRANSICONF,
- press next speed dial **location**,
- make line pre-selectbn if desired,
- dial number for storage,
- repeat this procedure until all desired numbers are stored.

To end **station speed dial** programming,

- press MNTR (SPKR).

Programming The Direct Station Selection/Busy Lamp Field (DSS/BLF)

One-button intercom calling with visual indication of telephone status can be programmed at telephone buttons not assigned to lines. The **DSS/BLF** console buttons are fixed by the system for **DSS/BLF** operation beginning with station 10 and ending with the maximum station number in the system.

To program DSS,

- press **ITCM**3**,
- press button to be programmed as DSS button,
- dial extension number,
- repeat last two steps for all desired extension numbers.

To end DSS **programming**,

- press **MNTR(SPKR)**.

NOTE: An autodial number can also be programmed as a secondary function at every DSS/BLF memory location. See Automatic Dialing instructions for programming details.

Programming The Automatic Redial Button

The system will **allow** the last previously dialed number to be automatically and repeatedly redialed for approximately ten minutes. A button **must** be programmed to provide this feature.

To program a programmable button for use as an **automatic redial** button,

- press **ITCM**1**,
- press desired programmable button,
- press **#**,
- press MNTR (SPKR).

Section 2 Operating The Attendant Station

Setting The System Clock

If the system has been modified to provide LCD speakerphone support, the system clock can be programmed to maintain current date and time information in the display. The clock information is not display&d until the feature is programmed.

To set the clock,

- press **ITCM**,
- dial * # 0 1,
- dial two digits (W-99) for year,
- dial two digits (01-12) for month,
- dial two digits (01-31) for day,
- dial two digits (**00-23**) for hour,
- dial two digits (**00-59**) for minute,
- dial one digit (1-7) for day of week (**Sun.=1, Sat.=7**),
- press **MNTR (SPKR)** to end.

Programming The System Speed Dial

A special system-wide list of numbers can be programmed for automatic dialing by all users.

To program the system speed dial numbers,

- press **ITCM**,
 - dial * # 0 2,
 - dial 01 - **30** to chose storage location. Listen for tone bursts,
 - press specific line button or **ITCM button** to store line or intercom preselection if desired (optional),
- NOTE: When no line is preselected and the system speed dial is used, the system will automatically pick the prime line assigned to the station (if enabled) or pick the most previously used line at that station.**
- dial the number to be stored (15 digits maximum),
 - press **HOLD** to store pause (ii required),
 - press **TAP** to store flash (if required),
 - press **TRANS/CONF** to save number,
 - repeat steps 3 - 7 to store next number,
 - press **MNTR (SPKR)** to end.

Engaging The Night Transfer (of ringing)

The day, or normal, ringing of incoming lines can be transferred to a particular station or stations (chosen through class of service programming) for off -hour or special-purpose answering. Additionally, stations can be arranged through class of service programming, to be able to answer any ringing outside line.

To enable or disable the feature,


- press **ITCM**,
 - dial * # 0 3,
 - press **AI** (top, left-hand programmable button) to toggle feature on or off (associated light will turn on when **night** transfer is active and turn off when it is inactive),
 - press **MNTR (SPKR)** to end.
- NOTE: When this feature is on, the ITCM light will flash.**

Controlling The Music On Hold


Music that is provided to outside lines while they are on hold can be disabled and enabled by attendant action.

To turn the **music** on or **off**,

- press **ITCM**,
- dial * # 0 4,
- press **AI** (top, left-hand programmable button) to toggle feature on and off (associated light will turn on when music on **hold** is provided and turn off when it is disabled),
- press **MNTR (SPKR)** to end.

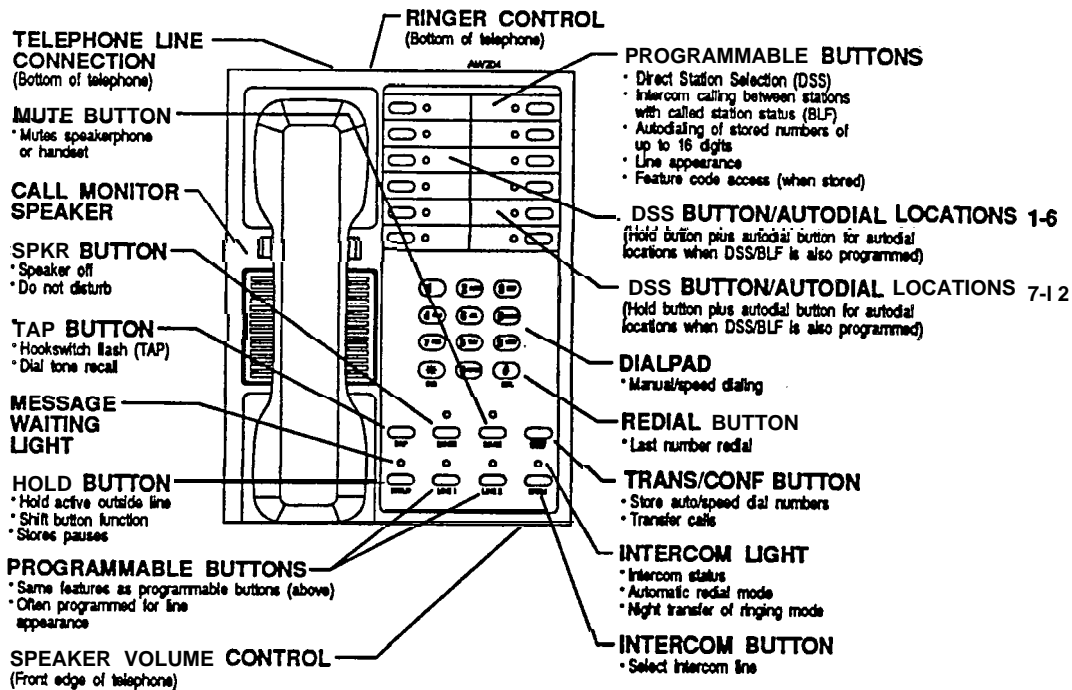

Typical Telephone - Model 6714X-xx shown.

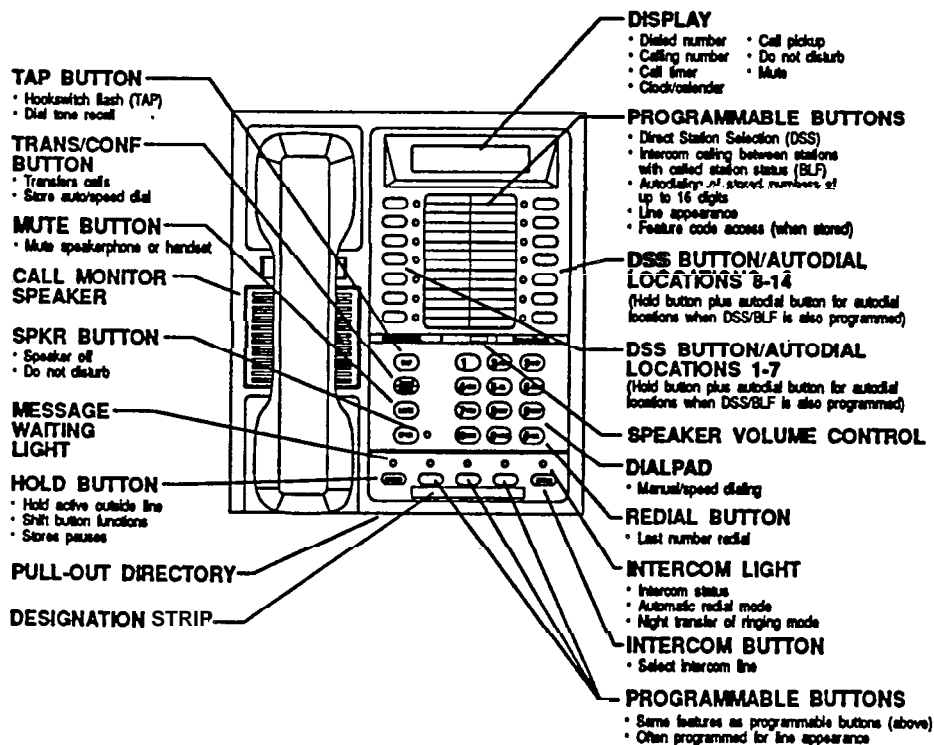

Typical telephone - Model 6600E-xx shown.

Figure 5-1. Controls and Indicators.

Section 3 Operating Single-line Telephones

The XE system supports two different types of single-line telephones. It supports a single-line proprietary telephone at every station port except port 10, and it supports an industry-standard telephone on station ports 26 and 28. The same system features are available to both of these telephone types; however, the method that the user must use to exercise the features differs slightly on the different telephone types.

In most installations, you will program the system to provide an intercom dial tone when the user **lifts** the handset on his or her single-line telephone. This arrangement is known as "prime Intercom". You may, however, program the system to provide outside line dial tone instead. This arrangement is known as "prime line automatic" and "idle line preference". The instructions included herein are written for telephones with "prime intercom". This means that the user can dial intercom numbers and system feature codes as soon as he or she lifts the handset. If you have programmed the system to provide outside line dial tone, the user must obtain Intercom dial tone before he or she can dial the various feature codes.

On single-line proprietary telephones, the user obtains intercom dial tone by pressing the TAP button. On

industry-standard telephones the user obtains intercom dial tone by pressing and releasing the hookswitch. This TAP button of hookswitch actuation is commonly known as performing a flash operation. When the user performs a flash operation at his or her single-line telephone, the system causes intercom dial tone to sound. If the user first dials some digits before flashing to obtain intercom dial tone, the system places the outside line on hold; however, if the user flashes to obtain intercom dial tone as soon as he or she lifts the telephone's handset without first dialing any digits, the system drops the outside line.

NOTE: The system will not recognize a hookswitch flash from a single-line proprietary telephone. The user must press the TAP button on this telephone for any system feature requiring a flash for access. In contrast, on an industry-standard telephone, flashing the hookswitch is the standard means of signalling. However, some industry-standard telephones provide a TAP button. If one is available, the user must press it instead of flashing the hookswitch when he or she needs to access a system feature.

Answering Calls Ringing At Your Telephone

To answer a call that is **ringing** at your telephone,

- hear ringing and lift handset to talk.

Answering Calls Ringing **At** Another Telephone (Call Pickup Answering)

To answer a call that is **ringing** at a **specific** telephone,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),

- dial * 4,
- dial **extension** number of ringing telephone.

To answer a call that is **ringing** at any telephone **in system**,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),
- dial # 4.

Making Calls

Making Outside Line Calls

To make an outside call, prime line and idle line preference must be in effect. If so, make the call as described below:

- lift handset and listen for outside dial tone,
- Dial number.

To end call,

- hang up handset.

Making Intercom Calls

To make an Intercom call with prime Intercom In effect,

- lift handset and listen for intercom dial tone,
- dial extension number. (To call system operator, dial 0.)
- speak to called party.

To make an intercom call with prime line and Idle line preference In effect,

- lift handset and listen for outside dial tone,
- FLASH for intercom dial tone,
- dial extension number.

Using The Speed Dial

To dial station speed dial numbers,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),
- FLASH for feature access - dial tone will stop,
- Press keypad digit 0 - 9 for desired personal speed dial number.

To dial system speed dial numbers,

- Press *.
- Press keypad dig-its 01 - 30 for desired system speed dial number.

Using The Last Number Redial

To automatically redial the last number previously dialed,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),
- FLASH for the feature - dial tone will stop,
- Dial # to redial the last dialed number.

Using Extended DTMF

(Only Available To Single-Line Proprietary Telephones)

When the prime line and idle line preference are In effect, the length of the DTMF tone can be extended from the standard length to a pre-programmed longer length.

To extend tone length,

- lift handset,
- wait **10 seconds, and dial number (system will then generate long DTMF tones when dialing),**
OR-
- immediately press HOLD then press TAP to set the system to generate long DTMF tones without waiting for delay **conversion.**

To alternate between long length and standard length DTMF tones during a call,

- Press HOLD then press TAP for line.

Holding Calls

Setting A Manual Hold At A Single-Line Proprietary Telephone

To place call on hold,

- press HOLD,
- hang up handset (call goes on hold and recalls after short programmed delay).

To retrieve held call,

- lift handset (if call has recalled),
-OR-
- lift handset, press TAP (if call has not recalled).

Setting A Manual Hold At An Industry-Standard Telephone

- press FLASH.
- leave handset off hook (call goes on hold, intercom tone times out, and station appears busy to other system stations, call does not enter hold recall mode),
-OR-
- hang handset up. (call goes into hold recall mode, and telephone immediately sounds hold recall ring)

To retrieve held call If off hook,

- press FLASH.

To retrieve held call If on hook,

- lift handset

Transferring Outside Calls

Making A Screened Transfer

To transfer an outside call to another station in **the system**,

- answer outside call,
- FLASH (outside call is placed on hold and intercom dial tone sounds),
- dial extension **number** of party to be transferred to
- when **intercom** party answers announce **call** and line number,
- hang up handset.

If the called party is busy or does not answer,

- FLASH to retrieve the call.

Making An Unscreened Transfer

To transfer an outside call to another station in **the system**,

- answer outside call,
- FLASH (outside call is placed on hold and intercom dial tone sounds),
- dial extension number of party to be transferred to,
- hang up handset.

NOTE: *If the station to which an unscreened transfer is made is busy, the transferred call will **camp-on** at the station. The call will **automatically** ring the station when it becomes idle. If a transferred call is not answered after a preprogrammed **time**, it will ring back to the transferring station.*

To answer recall of transferred call,

- lift handset.

Making Conference Calls

Conference transmission levels are not compensated and are dependent upon the quality of the external lines.

Making An Add-on Conference Call

(1 external party, 2 **Internal parties**)

To set up an add-on conference when prime time and idle line preference are in effect,

- establish outside call,
- FLASH (outside call placed on hold and intercom dial tone sounds).
- dial extension number of intercom party,
- wait for answer,
- FLASH (a three-way connection is established).

Using The Message Waiting Light

The message waiting light at any telephone can be turned from another telephone to alert the user that a message awaits pickup.

To turn on MW light,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),
- dial * 3,
- dial extension number of station to be alerted. (The MW light of called station will blink on and off.)

To turn off MW light,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),
- dial # 3,

- dial extension number of station that was alerted. (The MW light of called station will turn off.)

To turn off MW light while delivering a message (*single-line proprietary telephones only*),

- press HOLD.

To receive message when your MW light is on (*single-line proprietary telephones only*),

- observe the blinking MW light,
- lift handset and listen for intercom dial tone (Or FLASH for intercom dial tone if on outside line),
- press **HOLD**, (Connection to user who deposited the message is automatically completed.)

Making Page Calls (Single-Line Proprietary Telephones Only)

To make an all-call or zone page through the station loudspeakers,

- lift handset and listen for intercom dial tone (or FLASH for intercom dial tone if on outside line),

- dial paging number - (4 for zone 1, 5 for zone 2, 6 for zone 3, or 7 for all-call),
- make announcement,
- hang up handset.

Switching Between Pulse And Tone Dialing (Single-Line Proprietary Telephones Only)

If the local telephone service is pulse (rotary) but tone generation is required during the call, convert to tone while dialing as follows:

- press # at point in dialing sequence where conversion to tone is required. (System will switch back to pulse dialing when call is ended.)

NOTE: **The** user can store Pulse/Tone switching at a speed dial location by pressing # during number storage.

Programming The Station Speed Dial

A station user can store station speed dial numbers for later redial at keypad digits 0 through 9. Before attempting to program, user should decide on the following items: (1) the number or feature code dialing sequence to be stored, (2) which storage location will be used (0 - 9).

CAUTION

The Federal Communications Commission (FCC) requires that when users program emergency numbers and/or when they make test calls to emergency numbers that they take the following steps:

Remain on the line and briefly explain to the dispatcher the reason for the call.

Perform such activities in the off-peak hours; such as early morning or late evenings.

To program speed dial numbers,

- lift handset and listen for Intercom dial tone (or FLASH for intercom dial tone if on outside line),
- dial * * 2,
- dial a storage location (0 through 9).
- dial the number sequence to be stored. (Up to 15 digits can be stored with valid digits including 0 - 9, #, and *.)
 - To store a pause if required, press HOLD at the required point in the number storage.
 - To store a FLASH if required, perform a FLASH at the required point in the number storage sequence.

Example: Storing a telephone number under location 0. The sample number is 1(804)555-2222. Program it as follows:
*, *, 2, 0, 1, 8, 0, 4, 5, 5, 5, 2, 2, 2, 2.

- hang up handset to end number storage,
- repeat the entire procedure until all desired numbers are stored.

Section 4 Understanding The System Operating Characteristics

Using The Feature Dialing Code Numbering Plan

FEATURE DESCRIPTION	DIALING CODES	
All Call Page		ITCM 7
Attendant Calling		ITCM 10 or 0
Automatic Redial (Multiline telephones only)		PROGRAMMED BUTTON To program: ITCM, * * 1, BUTTON, #, MNTR (SPKR)
Background Music (Multiline telephones only)	On	ITCM * 1
	Off	ITCM # 1
Call Pickup	Directed	ITCM * 4 + Ext. No.
	System	ITCM # 4
Do Not Disturb (Multiline telephones only)	Set	MNTR (SPKR)
	Cancel	MNTR (SPKR)
Handsfree Answer Inhibit (Multiline telephones only)	Set	MUTE
	Cancel	MUTE
Message Waiting	Set	ITCM * 3 + Ext No.
	Cancel From Idle	ITCM # 3 + Ext. No.
	Cancel On Line	HOLD
	Retrieve Message	ITCM HOLD
Music On Hold (Station 10 only)	On	ITCM * # 04 A1
	Off	ITCM * # 04 A1
Night Transfer (Station 10 only)	On	ITCM * # 03 A1
	Off	ITCM * # 03 A1
Personal Ringing Tones (Multiline telephones only)	Set Tone 1	ITCM * * 41
	Set Tone 2	ITCM * * 42
	Set Tone 3	ITCM * * 43
	Set Tone 4	ITCM * * 44
Pulse/Tone Switching		# during dialing.
Redial (Last number dialed)		# (HOLD # when on line)
Speed Dial	Station	1 - 0 (HOLD 1 - 0 when on line)
	System	* 01 - * 30 (HOLD * 01 - * 30 when on line)
Voice Announce Block (Multiline telephones only)	On	ITCM * 2
	Off	ITCM # 2
Zone Page	Zone 1	ITCM 4
	Zone 2	ITCM 5
	Zone 3	ITCM 6

Setting The Ringer Volume Control

Each station has a ringer volume control. Depending upon the model, the ringer control is located on the front edge, rear edge, or bottom of the telephone.




Adjust the control lever to OFF, LOW or HIGH volume as desired.

Understanding The Status Indicators And Tone Sequences




The following pages describe the light and ring patterns associated with system operation.

NOTE: *The values shown are typical. They are provided for illustration purposes only.*





System Ringing Patterns

CO/PBX Line Ring	Host system ring cadence	RING CADENCE DEPENDENT UPON HOST SYSTEM
Intercom Tone Signalling	Two 140 msec. tone bursts sounded every four seconds	
Voice Signalling alert	One 210 msec. tone burst	
Timed hold recall at station that put call on hold	Three 140 msec. tone bursts sounded at the end of each timeout period	







**Intercom Call Progress Tones
(As Heard Through Handset Receiver Or Over Monitor Speaker)**

<p>Dial Tone</p> <p>Base Level Tone</p>	<p>Continuous on</p>	
<p>Called station ring-back</p> <p>Called station busy on outside line</p>	<p>560 msec. tone burst sounded twice every 4 sec.</p>	
<p>Base level program entry</p> <p>Programming confirmation</p> <p>System speed dial entry confirmation</p> <p>Memory dial intercom, line, group and/or recall selection confirmed</p> <p>All-call page selection confirmed</p> <p>PA station port selection confirmed</p>	<p>70 msec. tone burst sounded once</p>	




5-20
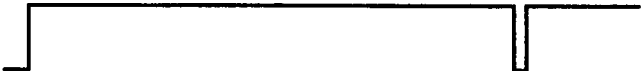
<p>Error tone - incorrect entry</p>	<p>560 msec. tone burst sounded three times</p>	
<p>Busy tone - intercom</p>	<p>560 msec. tone bursts</p>	
<p>Called station in do-not-disturb mode Fasy busy tone</p>	<p>140 msec.tone burst sounded twice every sec.</p>	
<p>System is awaiting memory dial number or key mapping entry after location is specified</p>	<p>70 msec. tone bursts sounded continuously</p>	

Line Select Lights-Multiline Telephones


Idle	Steady off	
Ringing	Continuous flash (560 msec. on - 560 msec. off)	
In use-your station	Steady on with wink off (2.3 sec. on - 70 msec. off)	
In use-other station	Steady on	
On hold-your station	Winking with repeative off periods (winking rate - 560 msec. off)	
On hold-other station	Continuous winking (490 msec. on - 70 msec. off)	

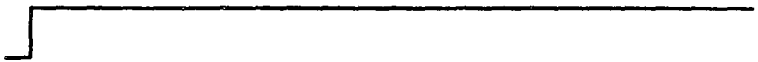Line Select Lights - continued , . .

Exclusive hold	Steady on	
Held call timeout your station	Flutter with repetitive off periods (flutter rate - 560 msec. off)	
Held call timeout other station	Continuous flutter (70 msec. on - 70 msec. off)	


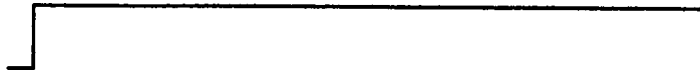
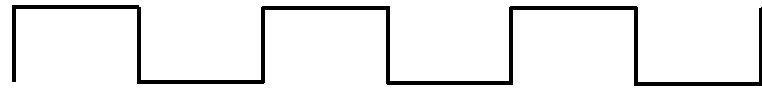


5-22

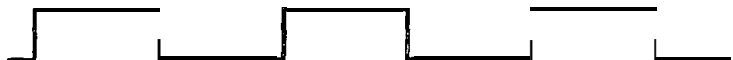Message Waiting Light-Multiline Telephones




Message Waiting	Continuous flash (560 msec. on - 560 msec. off)	
-----------------	---	---

Intercom **Light-Multiline** Telephone




5-23

In use-your station .	Steady on with wink off (2.3 sec. on - 70 msec. off)	
All links busy	Steady on	
Auto redial active	Continuous flutter (70 msec. on - 70 msec. off)	
Vight mode - Station 10	Flutter with repeative off periods (flutter rate - 560 msec. off)	
Ringing	Continuous flash (560 msec. on - 560 msec. off)	

BLF Lights-Multiline Telephones





<p>DSS station idle</p>	<p>Steady off</p>	
<p>DSS station busy on intercom calling you</p>	<p>Continuous flash (560 msec. on - 560 msec. off)</p>	
<p>DSS station busy on outside line or intercom line</p> <p>DSS station in do not disturb mode.</p>	<p>Steady on</p>	

Speaker **Light-Multiline** Telephones

<p>On line and speaker on (mike also on if speakerphone) Do not disturb mode Background music on</p>	<p>Steady on</p>	
<p>Mute -OR- Handsfree answer inhibit</p>	<p>Continuous flutter (70 msec. on - 70 msec. off)</p>	
<p>Do not disturb plus Mute -OR- Active line plus Mute</p>	<p>Flutter with repetitive on periods (flutter rate - 560 msec. on)</p>	

c7-c

Message Waiting Light (Single-Line **Proprietary** Telephone)

<p>On Hold - at your telephone</p> <p>Held call timeout - at your telephone</p>	<p>Continuous winking (490 msec. on - 70 msec. off)</p>	
<p>Ringing</p>	<p>Continuous flash (560 msec. on - 560 msec. off)</p>	
<p>Message Waiting</p>	<p>Continuous flutter (70 msec. on - 70 msec off)</p>	
<p>All Links Busy</p>	<p>Steady on</p>	

Chapter 6 Maintenance

Technical Assistance And Repair Service

Technical Assistance

Should you experience difficulty with installation, checkout, or programming, and have made an attempt to isolate the problem using information provided herein; or should you encounter problems at a later date which cannot be resolved by referring to this manual, call the Comdial Technical Service staff. They can be reached at 1-800-366-8224 between the hours of **8:00 AM** and **8:00 PM Eastern time**, Monday through Friday.

When calling for technical **assistance**, you should be at the job site and you should have in your possession, as a minimum, an accurate volt-ohm meter and a copy of this manual.

Repair Service

If your common equipment cabinet or an individual station needs repair, it may be returned to Comdial. Comdial will, at their option, either repair the defective equipment or replace **it** with a remanufactured **unit**. This repair will be done for a fixed charge. For information on this charge, please call or **write** to the address given below.

Comdial

P.O. Box 7266
Charlottesville, VA 22906
Attention: Repair Department
Telephone: 1-800-366-8224 or (804) **978-2400**

When **returning** equipment for repair, pack **it** carefully to prevent damage. Any damages during shipment will be the responsibility of the purchaser. The equipment should be shipped freight or postage prepaid. The shipping address is:

Comdial
1180 Seminole Trail
Charlottesville, VA 22901
Attention: Repair Department

Fuse Location

The system is protected against short **circuit** damage by a 1 amp slow-blow fuse located on the left side of the **common** equipment cabinet. Always replace the fuse with one of the same value and type, otherwise, equipment damage could **result**.

Wiring

Refer to Chapter 2, **Section 3, Checkout and Failure Isolation**, for instructions for testing the system wiring and components for possible failure.

Publication Index

A	
Abandoned Hold Release	4-13
AC Power Connection	3-4
Access Denied	2-1, 4-15
Add-On Conference	2-1
All-Call and Zone Paging	2-1, 4-17, 5-6
All Intercom Links Busy Indication	2-1
Answering Calls Ringing At Another Telephone	5-12
Answering Calls Ringing At Your Telephone	512
Answering Calls	5-1
Answering Handsfree (Handsfree Answerback)	5-1
Answering Intercom Calls	5-1
Answering Outside Calls	5-1
Assign Restriction To Lines	4-9
Assign Restrictions To Stations	4-9
Attendant Programming	4-20
Auto-Save Feature	2-1
Autodial	2-1, 5-8, 5-10, 5-15
Automatic Abandoned Hold Release	2-1
Automatic Hold Transfer To Intercom (Answer Hokf)	2-1
Automatic Pause Insertion	2-1, 4-10
Automatic Privacy	2-2, 4-13
Automatic Redial	2-2
Auxiliary Equipment Interface	2-2, 3-17
Auxiliary line	4-12
Auxiliary Station Ringer Interface	2-2, 3-14
B	
Background Music	2-2
Basic Key Service (1A2)	2-2
Battery Back-Up (Chassis, Cable, And Batteries)	2-2, 3-4
Battery Back-Up Interface	2-2
Block Diagram, System Programming	4-4, 4-5
Blocking Voice Announce Intercom Calls	5-5
Button Mapping	4-19
C	
Call Announce With Handsfree Answerback	2-2
Call Pickup Answering	5-1
Call Pickup - Directed	2-2
Call Pickup - System	2-3, 4-10
Call Transfer - Screened	2-3, 5-4, 5-14
Call Transfer - Unscreened	2-3, 5-5, 5-14
Calling Station Identification	2-3
Categories , Programming	4-1
Checking Gut The System Installation And Isolating Any Failures	3-18
Checking The Installation	3-18
Choosing Personal Ringing Tones	2-7, 5-7
Class Of Service Programming	2-3, 4-6
Common Audible Ringer Interface	2-3
Common Equipment Description	1-5
Common Equipment Mounting	3-3
Compatibility With Telephone Network	3-20
Conferencing, Multiline	2-6
Connecting A Power Failure Telephone	3-13
Connecting A Secure Off-Hook Voice Announce Telephone	3-12
Connecting Equipment At The Auxiliary Equipment Interface	3-17
Connecting Equipment To The Music Interface	3-17
Connecting Industry-Standard Telephones	3-8
Connecting Multiline Telephones	3-8
Connecting Single-Line Proprietary Telephones	3-8
Connecting Telephones To The System	3-8
Connecting The Common Audible and Auxiliary Station	3-14
Connecting The External Paging Interface At A Line Port	3-16
Connecting The External Paging Interface At A Station PA Port	3-15
Connecting The Lines	3-7
Connecting The Optional DSS/BLF Console	3-8
Connecting The Outside Lines To The System	3-6
Connecting The Power And System Grounding	3-4, 3-5
Connecting The Telephones	3-11
Connections, Line	
Connections, Station	3-10
Controlling The Music On Hold	5-10
Controls and Indicators	5-11
D	
Default Functional Program	2-3
Delayed Ringing	2-3
Description Of System Features	2-1
Description Of The Optional DSS/BLF Console	1-6
Description Of XE System Supported Telephones	1-6
Dial 0 For System Attendant	2-3
Direct Station Selection Intercom	2-3
Distinctive Ringing	2-3
Do Not Disturb	2-4, 5-6
DSS/BLF Console (Optional)	1-6, 2-4
DSS/BLF Console Self Test	3-19
E	
End To End Signalling On Intercom	2-4
End To End Signalling on Lines	2-4
Engaging The Do Not Disturb Condition	2-4, 5-6
Engaging The Night Transfer (Of Ringing)	2-7, 5-10
Exclusive Hold	2-4, 4-10
Extended DTMF	2-4, 4-11
External Paging Interface	2-4, 3-15, 4-17
F	
Failure Indications	3-19
Failures, Isolating	3-19
Failures	3-18
FCC Rules And Regulations	3-20
Feed-Back Tone	4-8
Flash	5-6
Flexible Line Assignment	2-4
Flexible Ringing Asdgnment	2-4, 4-14
Flexible Toll Restriction	2-11, 4-8
Fuse Location	6-1
G	
General Check	3-18
General Information About the XE System	1-4
General Information	1-1
H	
Handsfree Answer Inhibit	2-5
Headset Interface	2-5, 4-18
Hearing Aid Compatible Handset	2-5

Holding Calls 5-4, 5-13

I

I Hold And I Use Indications 2-5

Idle Line Preference 2-5, 4-16

Industry-Standard Telephone 2-5, 4-14

Installation Notice 3-1

Installation Requirements 3-20

Installation 3-1

Installer Information 1-1

Intercom Call Progress Tones 2-5

Intercom Line Lockout 2-5

Intercom Line Timeout 2-5

Introduction To XE System Programming 4-1

Isolating Failures 3-19

L

Last Number Redial 2-5

LCD Support 2-6

Line Connections 3-6

Line Disabled 4-12

Line Preselection 2-6

Line Type 2-6, 4-12

Longer DTMF Tones 4-11

M

Maintenance 6-1

Making A Multiline Conference Call 5-5

Making A Screened Transfer 5-4, 5-14

Making All-Call And Zone Pages Through The Station Speakers 5-6

Making An Add-on Conference Call 5-5, 5-14

Making An Unscreened Transfer 5-4, 5-14

Making Calls 5-2, 5-13

Making Conference Calls 5-5, 5-14

Making Intercom Calls 5-2, 5-13

Making OHVA/OHVA Calls 5-2

Making Outside Line Calls 5-2, 5-13

Making Page Calls 5-6, 5-15

Making Tone Signalled Intercom Calls 5-2

Making Voice Announce Calls 5-2

Manual Hold 2-6

Manual Scope 1-1

Master Clear 4-7

Memory Retention Without Batteries 2-6

Message Waiting 2-6, 5-5, 5-14

Modular Wiring And Jacks 4-Conductor Wire System 2-6

Momentary Buttons With LED Indicators 2-6

Monitoring A Line

Mounting Considerations 3-1

Mounting Procedure 3-2

Mounting The Common Equipment 3-3

Mounting The System Equipment 3-1

Multiline Conferencing 2-6

Music Interface 2-6

Music-On-Hold System-W& Enable/Disable 2-6, 4-20

Mute 2-7

Muting Your Telephone And Inhibiting Handsfree Answering 5-7

N

Night Transfer (Of Ringing) 2-7, 4-15, 4-20, 5-10

Non-Square System 4-19

Notification To Telephone Company 3-20

O

Off-Hook Voice Announce With Handsfree Answerback 2-7

On-Hook Dialing 2-7

Operating A Speakerphone 5-8

Operating Multiline Telephones 5-1

Operating Single-Line Telephones 512

Operating The Attendant Station 5-10

OPX Support 2-7

Originating Denied 2-7, 4-15

Outline Dimensions - Common Equipment 1-5

Outline Dimensions, Station 1-7

P

PA Port 3-15

Paging Through An External Amplifier 5-6

Pairing The Stations

Party Lines And Coin Lines 3-20

Pause Time 4-7

PBX/CENTREX/Central Office Compatible 2-7

Personalized Ringing Tone 2-7, 4-17

Port Definition 4-14

Power Failure Transfer 2-8

Power On, Visual Indication 2-8

Prime Line Automatic 2-8

Prime Line 4-16

Privacy Release 2-8, 4-15

Program Button Locations 4-3

Programmable Buttons 2-8, 4-19, 5-9

Programmable DSS/BLF 2-8, 5-Q

Programming A Station 5-8

Programming Categories 4-1

Programming Telephones 4-2

Programming the Attendant Station 4-20

Programming The Autodial 2-1, 5-8, 5-10, 5-15

Programming The Automatic Redial Button 2-8, 5-9

Programming The DSS/BLF 2-8, 5-9

Programming The Station Speed Dii 2-10, 5-9, 5-10, 5-15

Providing Off-Hook Voice Announce With Handsfree Answerback 2-9

Pull Out Directory 2

Pulse Dial Time 7

Pulse/Tone Switchable 2-8, 4-13, 5-7, 5-15

R

Radio Frequency Interference 3-20

Recall/Flash 2-10, 4-7, 5-6

Recall

Related Publications 1-1

Repair Authorization 3-20

Repair Service 6-1

Resistance Check 3-18

Ringer Equivalence Number 3-

Ring Line Preference 2-8, 4-16

S

Secure Off-Hook Voice Announce Groups 2-9, 4-18

Seam Off-Hook Voice Announce 2-8

Self Diagnostics 2-9

Self Test, DSS/BLF Console 3-19

Self Test, Station 3-19

Setting A Manual Hold 5-4, 5-14

Setting An Exclusive Hold

Setting The Ringer Volume Control 5-13

Setting The System Clock 4-20, 5-10

Signalling With Recall Or Flash 2-10, 4-7, 5-6

Single-Digit Station Dialing 2-9

Single-line Proprietary Telephone Support 2-Q

Speakerphone (Optional) 2-9

Specifications For The XE System 1-2

Speed Dial, Using 5-3, 5-13

Square/Non-Square System (Button Mapping) 2-10, 4-19

Station-By-Station Privacy 2-10

Station Connections 3-10

Station Images 1-8, 1-g

Station Outline Dimensions 1-7

Station Self Test 3-19

Station speed Dial 2-10, 5-9, 5-10, 5-15

subdued Ringing 2-10

Switching Between Pulse And **Tone Dialing** 2-8, 4-13, 5-7, 5-15

System Clock 4-20, 5-10

System Description 1-1

System Grounding 3-4

System Operating Procedures 5-1

System Programming Block Diagram 4-4, 4-5

System Programming 4-1

System Speed Dial Toll Restriction Override 4-10

System Speed Dial 2-10, 4-20, 5-3, 5-10, 5-13

System Status Indicator 3-19

T

Tap (**Flash/Recall**) 2-10, 4-7, 5-6

Technical Assistance And Repair Service 6-1

Technical Assistance 6-1

Technical **Documentation For The XE System** 1-1

Tenant **Service** 2-10

Timed Hold Recall 2-10, 4-7

Toll **Restriction, Flexible** 4-8

Toll Restriction - Flexible 2-11, 4-8

Tone **Or Voice Signalling (Intercom)** 2-11, 4-10

Transferring Outside Calls 2-3, 5-4, 5-14

Troubleshooting 3-20

Turning On Background Music 5-7

U

Understanding The Status Indicators And Tone Sequences 5-13

Understanding The System Operating Characteristics 5-16

User Information 1-1

Using Automatic Dialing 5-3

Using **Extended DTMF** 5-3, 5-13

Using The Auto-Save 5-3

Using The Automatic Redial 5-3

Using The Feature Dialing **Code Numbering Plan** 5-16

Using The Hold Recall Feature 5-4, 5-14

Using The Last Number Redial 5-3, 5-13

Using The Message Waiting Light 2-6, 5-5, 5-14

Using The Speed Dial 5-3, 5-13

V

Voice Announce Blocking 2-11

Voltage Check 3-18

Voltage Measurements 3-18

W

Wiring 6-1

X

XE System Configuration 1-4

Z

Zone Paging 2-11, 5-6

CLASS OF SERVICE PROGRAMMING CHART FOR ExecuTech XE KEY SYSTEM

The ExecuTech XE key systems are preprogrammed to a user-oriented set of operational parameters or class of service known as the default values. In many cases, this default class of service will provide operating conditions that are completely acceptable to the end-user's needs. This means that the system is completely operational as soon as it is installed and power is applied.

On occasions where the default settings do not fit the end-user's needs, the system can be re-programmed to change the class of service to meet local requirements. This programming chart is used to first plan the required changes and then to implement them.

To program a system,

- Enter base level: **ITCM** * # 7 4 6 *
- (Optional step) Master Clear: Dial 65, press **A12**, dial 7 0 5 **16** 8 4.







CAUTION

This step clears all memory entries, including any previously programmed autodial numbers, and returns system to start-up default.

- Mark the desired selections in the charts below to record programming needs.
- Dial feature code.

MOTE: Current program setting is indicated by lighted LEDs next to applicable programming key. When a toggle action is provided by a single key, the lighted LED indicates that the feature is active.

- Press A-field key to choose new programming.
 - Press * to return to base level for next feature.
- OR-
- Press * SPKR to end programming.

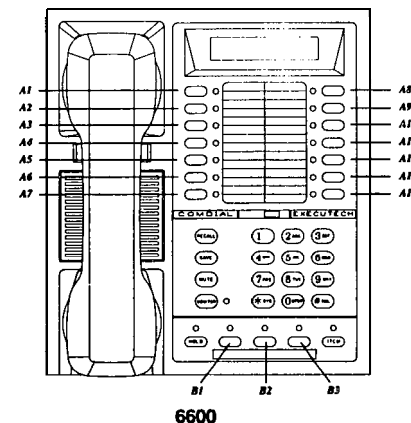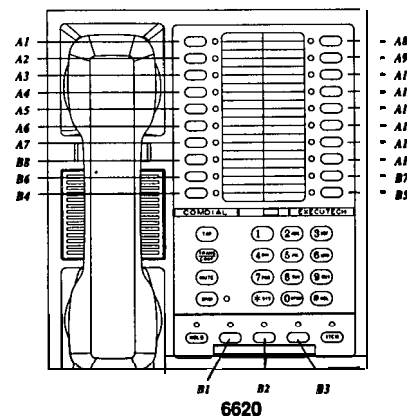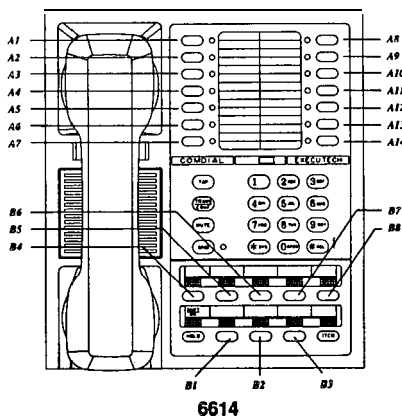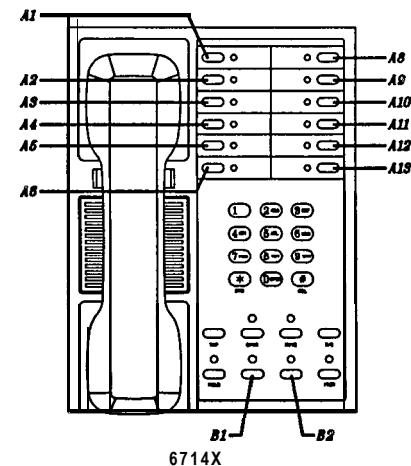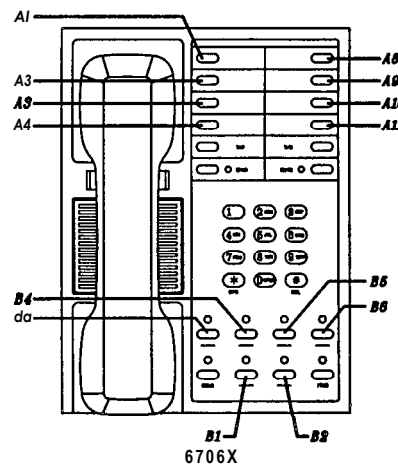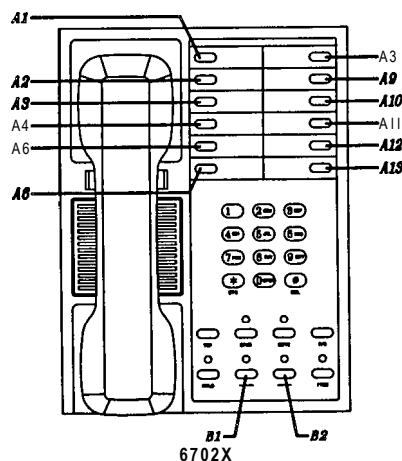

Enter Base Level: Press **ITCM**, then dial * # 7 4 6 *.

Master Clear: The entire programming configuration as discussed in the following programming procedures, can be defaulted to the factory settings all at once using this master clear procedure.

CAUTION

This programming action clears all memory entries including any previously programmed autodial numbers, and returns the system to a startup default condition.

Press **ITCM**.
Dial * # 7 4 6 *.
Dial 15.
Press **A12**.
Dial **7051684**.
Press * for base level
OR
Press **MNTR (SPKR)**.

Pause Time: During auto dials and speed dials it is sometimes necessary to delay the sending of digits to give switching equipment time to prepare to receive the digits. A pause can be stored to effect the delay. A pause is stored whenever the user presses the **HOLD** button. The pause length options are stored in seconds.

Dial 10.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
SEC	0.5	1.0	1.5	2.0	3.0	5.0	7.5	10	15	20
ENTRY										
DEFAULT = 2.0 SEC.										

Pulse Dial Time: Either ten or twenty pulses per second, and three different make/break ratios for the pulse dialing signals (rotary dial signals) can be set to match CO requirements.

Dial 11.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4
RATIO	62/38 @ 10 pps	50/50 @ 10 pps	70/30 @ 10 pps	62/38 @ 20 pps
ENTRY				
DEFAULT = 62/38 @ 10 PPS				

Recall/Flash: A line disconnect (recall) or a PBX feature select signal (flash) can be generated depending upon the programmed time.

Dial 12.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
SEC	.080	.300	.500	.600	.750	.875	1.0	1.5	2.0	3.0
ENTRY										
DEFAULT = 2.0 SEC.										

Timed Hold Recall: After a call has been on hold for a programmed length of time, the system will recall the station that placed the call on hold. The timing is in seconds.

Dial 13.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
SEC	30	60	90	120	180	240	300	360	420	never
ENTRY										
DEFAULT = 30 SEC.										

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Flexible Toll Restriction: Restricts stations from dialing a range of number combinations while allowing specific exceptions. The restrictions are specified by entries on a deny table while the exceptions are specified by entries on an allow table. In addition, a preprogrammed 1+800 allow table allows that dialing feature regardless of other restrictions which may be in effect. These programmed tables must be assigned on a per station basis before the restrictions can take effect.

- Maximum of 8 digits per line entry.
- 1+911 and 911 can never be restricted.
- Allow entries override deny entries.

NOTE: The deny and allow entries are part of one toll fable. Any stations which receive this fable assignment will be subject to both deny and allow restrictions.

Assign the restriction to the lines and stations per the instructions on page 4-8.

Dial 14.

Select table

- A1 = DENY ENTRY LINE 1
- A2 = DENY ENTRY LINE 2
- A3 = DENY ENTRY LINE 3
- A4 = DENY ENTRY LINE 4
- A5 = ALLOW ENTRY LINE 1
- A8 = ALLOW ENTRY LINE 2
- A9 = ALLOW ENTRY LINE 3
- A10 = ALLOW ENTRY LINE 4
- A11 = ALLOW 1+800 calls

Dial number.

(# = match anything digit.)

Select next table, and repeat.

Press * for next feature.

TABLE TYPE	ENTRY LINE	ENTRY DIGITS							
		1	2	3	4	5	6	7	8
DENY	1								
	2								
	3								
	4								
ALLOW	1								
	2								
	3								
	4								
ALLOW 1+800		YES				NO			

TYPICAL EXAMPLE

TABLE TYPE	ENTRY LINE	ENTRY DIGITS							
		1	2	3	4	5	6	7	8
DENY	1	9	7	6					
	2	4	1	1					
	3								
	4								
ALLOW	1	1	8	0	4	9	7	8	#
	2								
	3								
	4								
DEFAULT = NONE ASSIGNED									

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial ***#746***.

<p>Assign restriction to lines: Lines must be programmed to accept toll restriction before the restriction that is assigned to the stations will take effect.</p>	<p>Dial 35. Press prog. buttons to assign restriction to lines Press * for next feature</p>	<table border="1"> <tr> <th>BUTTON</th> <th>A1</th> <th>A2</th> <th>A3</th> <th>A4</th> <th>A5</th> <th>A8</th> <th>A9</th> <th>A10</th> <th>A11</th> <th>A12</th> </tr> <tr> <td>LINE</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> <td>8</td> <td>9</td> <td>10</td> </tr> <tr> <td>ENTRY</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td colspan="11">DEFAULT = NONE ASSIGNED</td> </tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = NONE ASSIGNED																		
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																												
LINE	1	2	3	4	5	6	7	8	9	10																																												
ENTRY																																																						
DEFAULT = NONE ASSIGNED																																																						
<p>Assign restrictions to stations: Station dialing can be restricted with I/O toll restriction and with deny/allow toll table restriction. Either one or both methods can be assigned to restrict station dialing on a per station basis. Also, 1+7-digit dialing can be allowed if I/O restriction is assigned.</p>	<p>Dial 62. Dial port ID (1033). Select I/O toll restriction. <ul style="list-style-type: none"> • A1 = I/O RESTRICTION • A2 = ALLOW 1+7-DIGIT (if I/O is also restricted) AND/OR Select deny/allow toll table restriction (if required and programmed). <ul style="list-style-type: none"> • Press A3. • Dial # + PORT ID for next sta. OR Press * for next feature.</p>	<table border="1"> <thead> <tr> <th>STA.</th> <th>ENTRIES</th> </tr> </thead> <tbody> <tr><td>10</td><td></td></tr> <tr><td>11</td><td></td></tr> <tr><td>12</td><td></td></tr> <tr><td>13</td><td></td></tr> <tr><td>14</td><td></td></tr> <tr><td>15</td><td></td></tr> <tr><td>16</td><td></td></tr> <tr><td>17</td><td></td></tr> <tr><td>18</td><td></td></tr> <tr><td>19</td><td></td></tr> <tr><td>20</td><td></td></tr> <tr><td>21</td><td></td></tr> <tr><td>22</td><td></td></tr> <tr><td>23</td><td></td></tr> <tr><td>24</td><td></td></tr> <tr><td>25</td><td></td></tr> <tr><td>26</td><td></td></tr> <tr><td>27</td><td></td></tr> <tr><td>28</td><td></td></tr> <tr><td>29</td><td></td></tr> <tr><td>30</td><td></td></tr> <tr><td>31</td><td></td></tr> <tr><td>32</td><td></td></tr> <tr><td>33</td><td></td></tr> <tr> <td colspan="2">DEFAULT = NONE ASSIGNED</td> </tr> </tbody> </table>	STA.	ENTRIES	10		11		12		13		14		15		16		17		18		19		20		21		22		23		24		25		26		27		28		29		30		31		32		33		DEFAULT = NONE ASSIGNED	
STA.	ENTRIES																																																					
10																																																						
11																																																						
12																																																						
13																																																						
14																																																						
15																																																						
16																																																						
17																																																						
18																																																						
19																																																						
20																																																						
21																																																						
22																																																						
23																																																						
24																																																						
25																																																						
26																																																						
27																																																						
28																																																						
29																																																						
30																																																						
31																																																						
32																																																						
33																																																						
DEFAULT = NONE ASSIGNED																																																						

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial ***#746***.

<p>System Speed Dial Toll Restriction Override: This feature provides a method for overriding toll restriction parameters when a system speed dial number is dialed. With this feature enabled, it is possible to restrict calls to certain areas with assigned toll restriction tables yet allow specific numbers in the restricted areas to be called by storing them as system speed dial numbers.</p>	<p>Dial 15. Press A5. LED ON = override enabled. Press * for next feature.</p>	<table border="1"> <tr><td colspan="3">SYSTEM SPEED DIAL</td></tr> <tr><td colspan="3">TOLL RESTRICTION</td></tr> <tr><td>ENABLED</td><td></td><td></td></tr> <tr><td>DISABLED</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = DISABLED</td></tr> </table>	SYSTEM SPEED DIAL			TOLL RESTRICTION			ENABLED			DISABLED			DEFAULT = DISABLED		
SYSTEM SPEED DIAL																	
TOLL RESTRICTION																	
ENABLED																	
DISABLED																	
DEFAULT = DISABLED																	
<p>Automatic Pause insertion: When the system stores a dialed number for later redial, it automatically stores a pause whenever the user waits between digits. The wait period is programmable.</p>	<p>Dial 15. Press prog. button A1. LED ON = 2 Sec. Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A1</td><td>A1</td></tr> <tr><td>TIME</td><td>750 Msec</td><td>2 Sec</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = 2 SEC.</td></tr> </table>	BUTTON	A1	A1	TIME	750 Msec	2 Sec	ENTRY			DEFAULT = 2 SEC.					
BUTTON	A1	A1															
TIME	750 Msec	2 Sec															
ENTRY																	
DEFAULT = 2 SEC.																	
<p>Tone or Voice Signaling: intercom calls can be tone signalled or voice signalled. The first choice in signaling is programmable.</p>	<p>Dial 15. Press A2 LED ON = TONE Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A2</td><td>A2</td></tr> <tr><td>FEA.</td><td>TONE</td><td>VOICE</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = VOICE</td></tr> </table>	BUTTON	A2	A2	FEA.	TONE	VOICE	ENTRY			DEFAULT = VOICE					
BUTTON	A2	A2															
FEA.	TONE	VOICE															
ENTRY																	
DEFAULT = VOICE																	
<p>Exclusive Hold: The user can set a hold condition whereby only the station placing the call on hold can retrieve it. Exclusive hold can be disabled by programming action.</p>	<p>Dial 15. Press A3. LED ON = ENABLED Press 8 for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A3</td><td>A3</td></tr> <tr><td>FEA.</td><td>ENABLED</td><td>DISABLED</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = ENABLED</td></tr> </table>	BUTTON	A3	A3	FEA.	ENABLED	DISABLED	ENTRY			DEFAULT = ENABLED					
BUTTON	A3	A3															
FEA.	ENABLED	DISABLED															
ENTRY																	
DEFAULT = ENABLED																	
<p>Call Pickup System: A call can be answered at one telephone when it is ringing at another telephone. Call pickup can be disabled by programming action.</p>	<p>Dial 15. Press A4. LED ON = ENABLED Press * for next feature.</p>	<table border="1"> <tr><td>BUTTON</td><td>A4</td><td>A4</td></tr> <tr><td>FEA.</td><td>ENABLED</td><td>DISABLED</td></tr> <tr><td>ENTRY</td><td></td><td></td></tr> <tr><td colspan="3">DEFAULT = DISABLED</td></tr> </table>	BUTTON	A4	A4	FEA.	ENABLED	DISABLED	ENTRY			DEFAULT = DISABLED					
BUTTON	A4	A4															
FEA.	ENABLED	DISABLED															
ENTRY																	
DEFAULT = DISABLED																	

PROGRAMMING NOTE: All features described on *this* page can be programmed after dialing 15 once. Just press the program **button** for each feature to be programmed.

Press * **SPKR** to end programming.

Enter Base Level: Press ITCM, then dial *#746*.

Extended DTMF: The system can access answering machines, banking computers, voice mail, etc. that require DTMF tones that are longer than standard tones. This programming option enables the programmed DTMF tone to automatically activate after the station has been off-hook 10 sec. or more

Dial 16.
Press prog. button.
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
MSEC	80	160	240	320	400	480	560	720	880	1040
DEFAULT = 80 MSEC.										

Line Disabled: A line can be taken out of service because of line defect or other reason.

Dial 30.
Press prog. button.
LED ON = DISABLED
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = NONE ASSIGNED										

Auxiliary Line: A line can be conditioned to serve as a port for an external paging amplifier. (See Note 1)

Dial 31.
Press prog. button.
LED ON = AUX LINE
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = NONE ASSIGNED										

Line Type 1: A line port is assigned as type 1 when any enabled toll restriction is to be applied with the first digit dialed. Such a line type is often assigned when a CO line is connected. (See Note 1)

Dial 32.
Press prog. button.
LED ON = TYPE 1
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = ALL LINES ASSIGNED										

Line Type 2: A line port is assigned as type 2 when any enabled toll restriction is to be applied beginning with the second digit dialed. Such a line type is often assigned when a PBX or CENTREX line with any trunk access code is connected. (See Note 1)

Dial 33.
Press prog. button.
LED ON = TYPE 2
Press * for next feature.

BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12
LINE	1	2	3	4	5	6	7	8	9	10
ENTRY										
DEFAULT = NONE ASSIGNED										

NOTE 1: When a line type is unassigned (LED OFF), it enters a disabled state. It must be reassigned as a particular type be enabled. It cannot be enabled using the Line Disabled feature.

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial * # 7 4 6 *.

<p>Line Type 3: A line port is assigned as type 3 when any enabled toll restriction is to be applied beginning with the second digit dialed whenever the first digit is a 9. If the first digit is not a 9, no restriction is applied. Such a line type is often assigned when a PBX or CENTREX line with a trunk access code of 9 is connected. (See Note 1 on page 4-10)</p>	<p>Dial 34 Press prog. button. LED ON = TYPE 3 Press * for next feature.</p>	<table border="1"> <tr><th>BUTTON</th><th>A1</th><th>A2</th><th>A3</th><th>A4</th><th>A5</th><th>A8</th><th>A9</th><th>A10</th><th>A11</th><th>A12</th></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = NONE ASSIGNED</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = NONE ASSIGNED										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = NONE ASSIGNED																																														
<p>Pulse/Tone Switchable: When rotary dial lines are installed, the user can switch from pulse (rotary dial signals) to tone (Dual Tone Multiple Frequency signals) for accessing special circuits requiring DTMF tones such as banking machines. This pulse/tone switchability must be programmed for the line. Lines are defaulted for tone signalling only.</p>	<p>Dial 36. Press prog. button. LED ON = TONE Press * for next feature.</p>	<table border="1"> <tr><th>BUTTON</th><th>A1</th><th>A2</th><th>A3</th><th>A4</th><th>A5</th><th>A8</th><th>A9</th><th>A10</th><th>A11</th><th>A12</th></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = TONE</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = TONE										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = TONE																																														
<p>Abandoned Hold Release: When a distant party abandons a hold condition and disconnects, the central office will send a forward disconnect signal to the telephone system. The forward disconnect signal may be either 50 msec. or 350 msec. in length. Program the system to match central office time.</p>	<p>Dial 37. Press prog. button. LED ON = 50 msec. Press * for next feature.</p>	<table border="1"> <tr><th>BUTTON</th><th>A1</th><th>A2</th><th>A3</th><th>A4</th><th>A5</th><th>A8</th><th>A9</th><th>A10</th><th>A11</th><th>A12</th></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = 50 MSEC.</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = 50 MSEC.										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = 50 MSEC.																																														
<p>Automatic Privacy: A line can be made private or nonprivate. In the private mode, a station has exclusive use of a line during a call. Lines are private unless reprogrammed to be nonprivate.</p>	<p>Dial 38. Press prog. button. LED ON = NONPRIVATE Press * for next feature</p>	<table border="1"> <tr><th>BUTTON</th><th>A1</th><th>A2</th><th>A3</th><th>A4</th><th>A5</th><th>A8</th><th>A9</th><th>A10</th><th>A11</th><th>A12</th></tr> <tr><td>LINE</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr> <tr><td>ENTRY</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td colspan="11">DEFAULT = PRIVATE</td></tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = PRIVATE										
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																				
LINE	1	2	3	4	5	6	7	8	9	10																																				
ENTRY																																														
DEFAULT = PRIVATE																																														

Press * SPKR to end programming.

Enter Base Level: Press ITCM, then dial *#746*.

STATION																																																						
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33																															
<p>Port Definition: A station port can be programmed to accept one of several different types of station equipment or to support off-hook call announce connections. 3/8 LINE TELEPHONE = 6414X, 6414S MULTILINE TELEPHONE = 6614, 6614S, 6614E, 6614T, 6620, 6620S, 6620E, 6620T, 6702X, 6706X, 6714X OFF-HOOK CALL ANNOUNCE = All SOHVA - equipped telephones (See page 1-3)DB32S OPX UNIT = OPX-1 DSS/BLF CONSOLE = EB32X, DB32, DB40, DB70 LCD SPEAKERPHONE = 6600S, 6600E</p>																																	<p>Dial 61. Dial port ID (10-33). Press prog. button. . . = 3/8 LINE TELEPHONE . A2 = MULTILINE TELEPHONE . A3 = OFF-HOOK CALL ANNOUNCE . A4 = OPX UNIT (Prime line intercom automatically enabled when OPX port is assigned) . ** = DSS/BLF CONSOLE . A8 = LCD SPEAKERPHONE Press # + PORT ID for next sta. OR Press *for next feature.</p>											<p>DEFAULT = MULTILINE TELEPHONE</p>										
<p>Flexible Ringing Assignment: Ringing assignments are programmable on a per line/per station basis. Delayed ringing can be program enabled for some lines and direct, or immediate, ringing can be program enabled for others.</p>																																	<p>Direct ringing Dial 50. Dial port ID (10-33). Press A1-A5, A8-A12 (for lines 1-10) Press # + PORT ID for next sta. OR Press *for next feature.</p>											<p>DEFAULT = ALL LINES ASGND AT STA 10, 17 & 32</p>										
<p>Delayed ringing Dial 51. Dial port ID (10-33). Press A1-A5, A8-A12 (for lines 1-10). Press # + PORT ID for next sta. OR Press * for next feature.</p>																																	<p>DEFAULT = NO LINES ASGND</p>																					

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

STATION

10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Night Transfer (of ringing): The day, or normal, ringing of incoming lines can be transferred to a particular station or stations by the attendant for off-hour or special purpose answering. Stations are assigned to receive night transfer by programming action.

Dial 56.
Dial port ID (10-33).
Press **AI -A5, A8-A12** (for lines 1-10).
Press # + PORT ID for next sta.
OR.
Press * for next feature.

DEFAULT ALL LINES ASGND AT STA 10, 17 & 32

Access Denied: Access to particular lines can be denied at individual stations.

Dial 52.
Dial port ID (10-33).
Press **AI -A5, A8-A12** (for lines 1-10).
LED ON = DENIED
Press # + PORT ID for next sta.
OR
Press * for next feature.

DEFAULT = DISABLED

Originating Denied: The ability to originate calls on certain lines can be denied at individual stations.

Dial 53.
Dial port ID (1033).
Press **AI -A5, A8-A12** (for lines 1-10).
LED ON = DENIED
Press # + PORT ID for next sta.
OR
Press * for next feature.

DEFAULT = DISABLED

Privacy Release: A line can be made non-private at a particular station while remaining private at all other stations. Stations can be programmed to automatically release line privacy when on certain lines.

Dial 54.
Dial port ID (1033).
Press **AI -A5, A8-A12** (for lines 1-10).
LED ON = RELEASED
Press # + PORT ID for next sta.
OR
Press * for next feature.

DEFAULT = NOT RELEASED

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Idle Line Preference: Going off-hook automatically selects an idle line for use. Lines available for selection are assigned by programming.

Dial 55.
Dial port ID (10-33).
Press **A1-A5, A8-A12** (for lines I-10).
Press # + PORT ID for next sta.
OR
Press * for next feature.

Ringing Line Preference: A ringing line will automatically be answered when a station is taken off-hook.

Dial 60.
Dial port ID (10-33).
Press prog. button **A8**.
LED ON = AS'GND
Press # + PORT ID for next sta.
OR
Press * for next feature.

Prime Line: A line designated to a particular station is automatically selected for use when that station is taken off -hook.

Dial 57.
Dial port ID (10-33).
Press **A1-A5, A8-A12** (for lines I-10) or press **ITCM**.
Press # + PORT ID for next sta.
OR
Press * for next feature.

STATION																							
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
DEFAULT = DISABLED																							
DEFAULT = DISABLED																							
DEFAULT = DISABLED																							

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

All-Call and Zone Paging: Stations can receive voice announcements through the telephone speaker, or through an external paging speaker connected to a PA port, and transmit them with the telephone handset. Announcements can be to certain areas of the system or to all stations in the system.

Dial 58.
Dial port ID (1033).
Press prog. button.
 • A1 = RECEIVE ZONE 1
 • A2 = RECEIVE ZONE 2
 • A3 = RECEIVE ZONE 3
 • A4 = RECEIVE ALL-CALL
 • A5 = XMIT ZONE 1
 • A8 = XMIT ZONE 2
 • A9 = XMIT ZONE 3
 • *00 = XMIT ALL-CALL
 Press # + PORT ID for next sta.
OR
 Press * for next feature.

STATION

10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	

DEFAULT = ALL CALL ASGND

--

Personal Ringing Tones: A station can be programmed to ring in one of four distinctive tones.

Dial 60.
Dial port ID (10-33).
Press prog. button.
 ● A1=TONE1
 ● A2=TONE2
 ● A3=TONE3
 ● A4=TONE4
 Press # + PORT ID for next sta.
OR
 Press * for next feature.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

DEFAULT = TONE 1

--

External Paging interface - Station Port: A station port can be programmed to interface with an external paging amplifier (PA port).

Dial 60.
Dial port ID (10-33).
Press prog. button A5.
Press # + PORT ID for next sta.
OR
 Press * for next feature.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

DEFAULT = NOT ASSIGNED

--

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Headset Interface: A station port can be programmed to allow headset operation provided by a special telephone.

Dial 60.
Dial port ID (10-33).
Press prog. button **A9**.
Press # + PORT ID for next sta.
OR
Press * for next feature.

Secure Off-Hook Voice Announce (SOHVA) Groups: The ability of a station to receive and/or originate SOHVA or OHVA calls can be disabled through programming so that certain stations can be grouped together for SOHVA or OHVA calling between one another while other stations in the system are excluded from this group. Stations can be arranged in up to four different groups for exclusive SOHVA or OHVA calling.

NOTE: SOHVA and OHVA calling requires two data-paired station ports.

Dial 63.
Dial port ID (10-33).
- Press program button to disable receive capability.
LED ON = disabled
A1 = receive group 1
A2 = receive group 2
A3 = receive group 3
A4 = receive group 4
- Press program button to disable originate capability.
LED ON = disabled
A5 = originate group 1
A8 = originate group 2
A9 = originate group 3
A10 = originate group 4
Press * for next feature.

STATION

10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

STA	REC GP				ORIG GP			
	1	2	3	4	1	2	3	4
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								

STA	REC GP				ORIG GP			
	1	2	3	4	1	2	3	4
22								
23								
24								
25								
26								
27								
28								
29								
30								
31								
32								
33								

DEFAULT = ALL STATIONS RECEIVE AND ORIGINATE SOHVA AND OHVA

Press * SPKR to end programming.

Enter Base Level: Press **ITCM**, then dial *#746*.

Non-Square System: Each programmable button at every station can be assigned individually (mapped) to select any line assigned to that station or to provide other button functions. Programmable buttons can be assigned as direct station select (DSS) buttons to provide one-key access to system stations. Programmable buttons can be assigned as idle (blanked) to provide autodial buttons for the user.

NOTE: When a line is reassigned from a defaulted button location to a different button location, the defaulted button must then be assigned to an idle condition (blanked). This action must be taken to ensure that status indications for the line will appear at the LED of the button that is now assigned to have line appearance.

A button must be blanked even though it does not appear on the particular telephone being programmed.

1. Dial 59.
2. Dial port ID (10-33)
3. Press station button to be programmed.
 - A1 - A14 and B1 - B8.

NOTE: If programming with a model 6702X or 6714X telephone that does not include a full complement of buttons, dial a number to select the button to be programmed

- 1 - 8 = B1 - B8
- 9 = A7
- 0 = A14

4. Press prog. button to assign line

- A1 - A5 = Lines 1 - 5.
- A8 - A12 = Lines 6 - 10
- OR-
- Dial 10 - 33 for DSS Sta 10 - 33

-OR-
Press TAP for idle (blank) buttons for user autodial purposes

5. Press # + PORT ID for next station

-OR-

Press * for next feature.

EXAMPLE: To re-assign line 7 from B7 default to A8 location at station port 15 containing model 6706X telephone,

1. Dial 15 (for station port 15)
2. Press A8 (to select button A8)
3. Press A9 (to re-assign line 7)
4. Dial 7 (to select B7 location even though not present on model 6706X telephone).
5. Press TAP (to move line 7 status LED for button A8)

BUTTON	B1	B2	B3	B4	B5	B6	B7	B8	A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	
STA 10																							
STA 11																							
STA 12																							
STA 13																							
STA 14																							
STA 15																							
STA 16																							
STA 17																							
STA 18																							
STA 19																							
STA 20																							
STA 21																							
STA 22																							
STA 23																							
STA 24																							
STA 25																							
STA 26																							
STA 27																							
STA 28																							
STA 29																							
STA 30																							
STA 31																							
STA 32																							
STA 33																							

DEFAULT SETTINGS

- | | |
|---------------|---------------|
| B: 0 = LINE 1 | B6 = LINE 6 |
| B: 2 = LINE 2 | B7 = LINE 7 |
| B: 3 = LINE 3 | B8 = LINE 8 |
| B: 4 = LINE 4 | A7 = LINE 9 |
| B: 5 = LINE 5 | A14 = LINE 10 |

Press * SPKR to end programming.

COMDIAL

TECHNICAL ADVISORY BULLETIN

Date: June 1995

Issue: TAB001-XEL

Expansion of XE Toll Restriction Tables

This bulletin explains the increase in the number of toll restriction tables on the XE 308/616, XE 820/1024, and XE 820/1024 -IST systems. The number of toll restriction tables is increasing from two to eight because of the new North American Dialing plan. The total number of entries now possible is sixty-four.

The following sections in the *ExecuTech XE Key System* manual are affected:

- Section 2- 11, *Toll Restriction - Flexible*.
- Sections 4-34-4 and 4-84-9.

The availability of this enhancement is detailed in the chart below.

Product Code	Hardware Revision	Software Revision
NO308		13.A and later
N0616		13.A and later
NO820		13.A and later
N1024		13.A and later
K0308		13.A and later
K0616		13.A and later
K0820		13.A and later
K1024		13.A and later
N0820-IST		3.A and later
N1024-IST		3.A and later

This TAB contains information as separate pages that you can insert in the following manuals:

- (IMI 66-097) ExecuTech XE Key System.
- (IMI66-064) ExecuTech XE Key System.

oftw

Toll Restriction - Flexible

Flexible toll restriction can be programmed to prohibit some or all stations from calling a wide range of number combinations while allowing specific exceptions. Toll restrictions are specified by up to eight entries on a deny table; any exceptions are specified by up to eight entries on an allow table. There are a total of eight tables, making the possible number of entries sixty-four. Allow entries will always override deny entries. Up to eight digits are permitted for each entry. You may include a “match anything” digit (# symbol) as part of an entry to represent any digit from 1 to 0. This “match anything” digit is used to deny or allow a range of numbers with a single entry. The first table is an allow table with default settings that permit the dialing of phone numbers beginning with 1800, 1911, and 911. The second table is a deny table with default settings that prevent the dialing of phone numbers beginning with 976,411, 1, and 0.

When toll restriction is enabled for a line, you must assign each station using that line the desired toll restriction table. You must use either system or administration programming to specify lines that are toll-restricted and to assign toll restriction tables to each station.

Tone Or Voice Signalling (Intercom)

Intercom calls can be tone signalled or voice signalled as desired. The tone signalled intercom call must be answered by lifting the handset. The voice signalled intercom call can be responded to in a handsfree


manner. The class of service programming determines which signalling method is employed as the primary method when an intercom call is made. The alternate method is available through user action at the station. Intercom call progress is marked by special tone signals. The system or administration programming determines which type of intercom signalling is first option signalling for the system. Also refer to the discussions titled *Intercom Call Progress Tones* and *Voice Announce Blocking*.

Voice Announce Blocking

This feature allows the user to block voice announced intercom signalling by dialing a special code. This feature, when enabled, also blocks the reception of a SOHVA call.

Zone Paging (Through Station Speakers)

Zone paging allows groups of stations to receive announcements through the station speakers. The programming can enable zone paging in up to three different zones. A station can be programmed to only receive announcements or programmed to originate announcements as well. Each station can be programmed to be in any or all zones for both receiving and originating announcements. The ability of each station to originate and/or receive a page, and the arrangement of the paging into different zones are controlled by system or administration programming. Also, refer to the discussion titled *All-Call Paging (via Station Speakers)*.

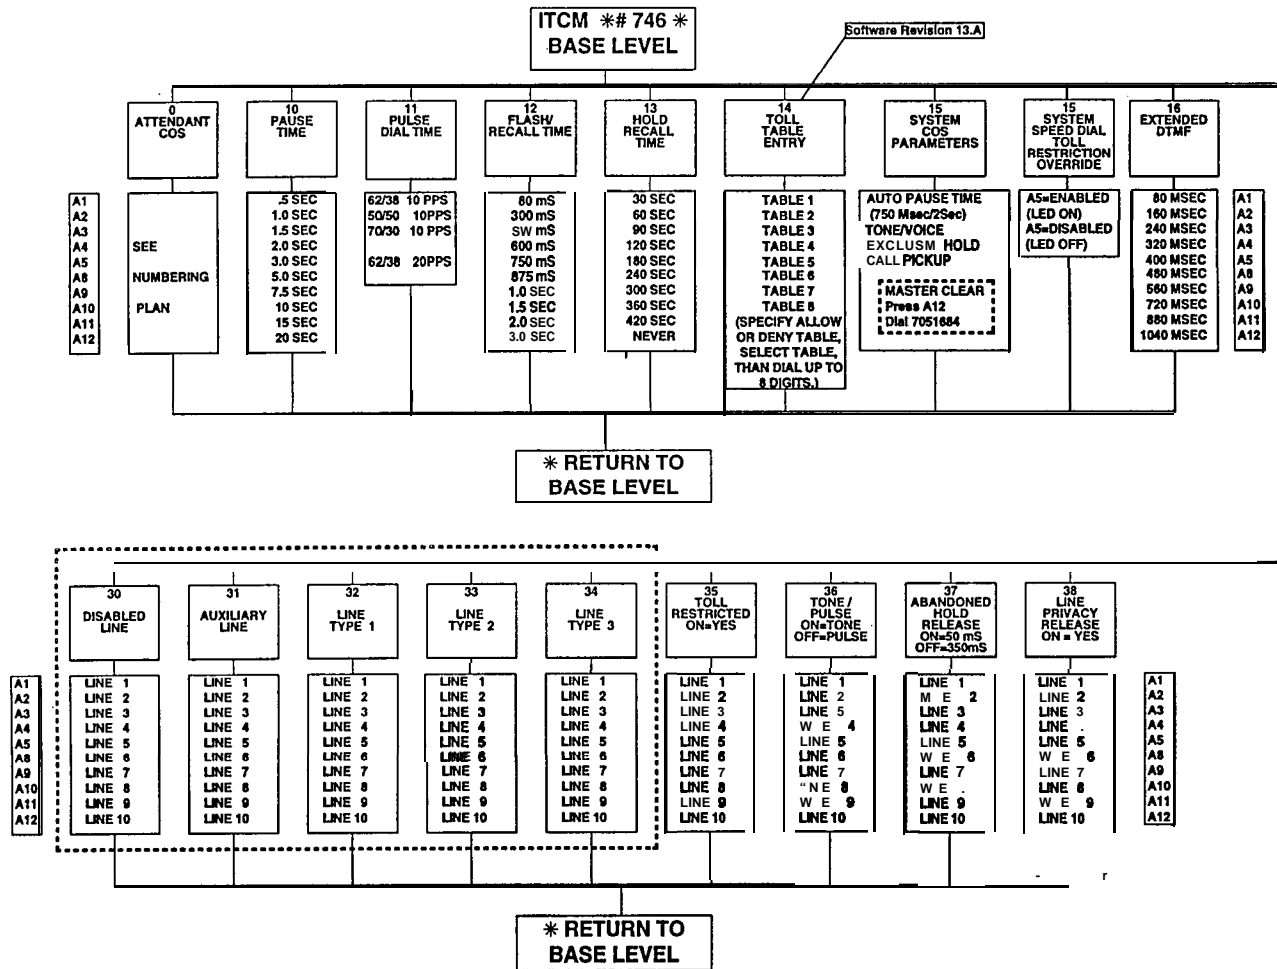

To Fig. 4-2b

NOTE: Items enclosed in dotted boxes are not permitted for System Administrator (ITCM *#236 * for base level).

Figure 4-2a. System Programming Block Diagram

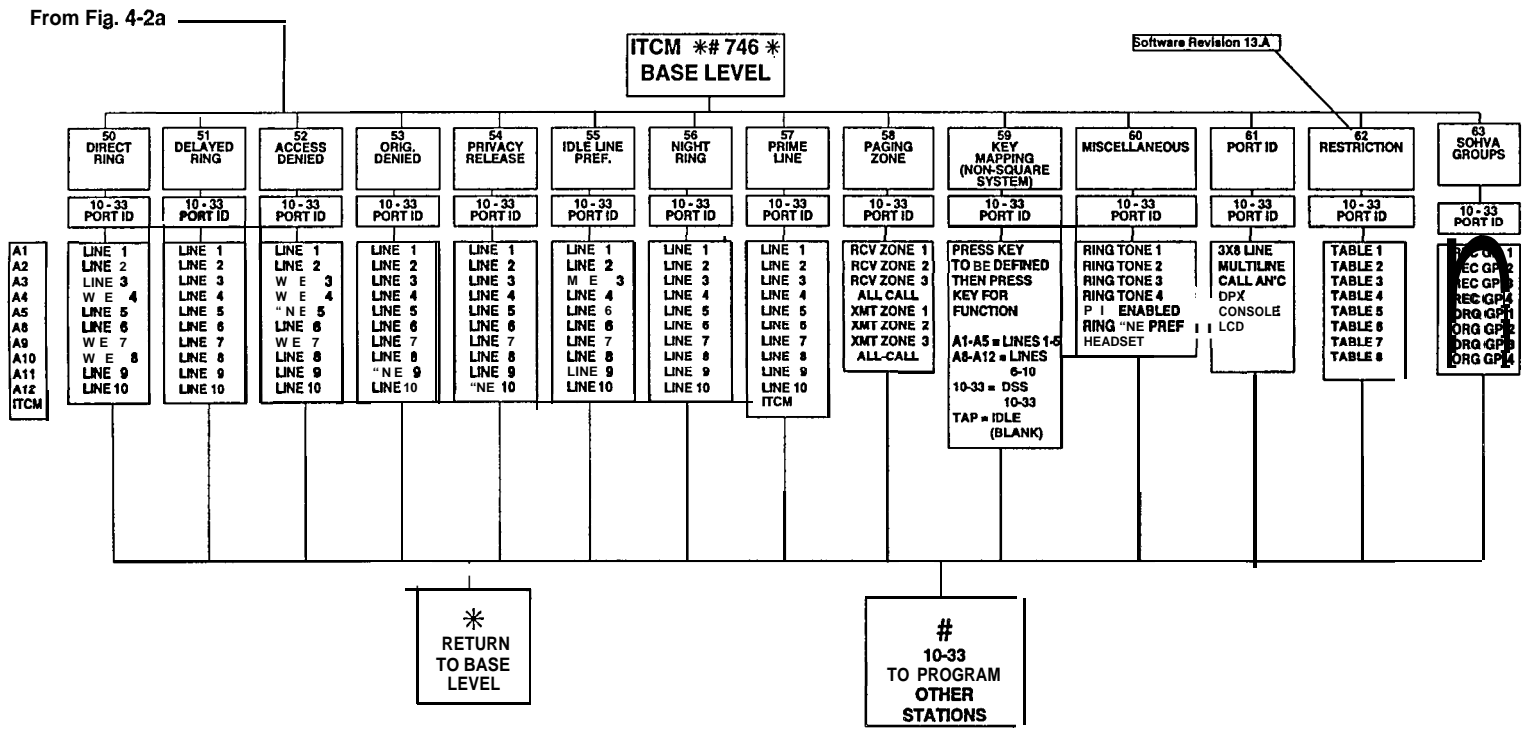


Figure 4-2b. System Programming Block Diagram

Enter Base Level: Press **ITCM**, then dial * # 7 4 6 *.

Feed-Back Tone: Choose the type of feed-back tone supplied when intercom calling a station that is busy on an outside line. Either select a busy tone or leave the system defaulted to provide a ring-back tone.

Dial 15.
Press **A8**.
LED ON = Busy Tone

RING-BACK	
BUSY TONE	
DEFAULT = RING-BACK	

Flexible Toll Restriction: Restricts stations from dialing a range of number combinations while allowing specific exceptions. The restrictions are specified by entries on a deny table while the exceptions are specified by entries on an allow table. These programmed tables must be assigned on a per station basis before the restrictions can take effect.
-Maximum of 8 digits per entry.
-Allow entries override deny entries.
-Default settings for allow and deny entries are listed in the tables on page 4-8A.

Dial 14.
Select table, **A1-A5, A8-A10**
- **A1** = ENTRY 1
- **A2** = ENTRY 2
- **A3** = ENTRY 3
- **A4** = ENTRY 4
- **A5** = ENTRY 5
- **A8** = ENTRY 8
- **A9** = ENTRY 7
- **A10** = ENTRY 8
- **A11** = Establish allow table
- **A12** = Establish deny table
Dial number.
(# = match anything digit.)
Select next table, and repeat.
Press * for next feature.

Software Revision 13.A

Note: You can not specify deny and allow entries on the same table. You must assign separate tables for allow and deny entries,

Assign the restriction to the lines and stations per the instructions on page 4-9.

TYPICAL EXAMPLE

Toll Restriction Table								
Type:	Allow				Deny X			
Entry	Entry Numbers (8 Maximum)							
	1	2	3	4	5	6	7	8
1	9	7	6					
2	4	1	1					
3								
4								
5								
6								
7								
8								

Press * SPKR to end programming.

Toll Restriction Table 1									
Type:	Allow	X	Deny						
Entry	Entry Numbers (8 Maximum)								
	1	2	3	4	5	6	7	8	
1	1	8	0	0					
2	1	9	1	1					
3	9	1	1						
4									
5									
6									
7									
8									

Toll Restriction Table 2									
Type:	Allow	Deny	X						
Entry	Entry Numbers (8 Maximum)								
	1	2	3	4	5	6	7	8	
1	9	7	6						
2	4	1	1						
3	1								
4	0								
5									
6									
7									

Toll Restriction Table 3								
Type:	Allow	Deny						
Entry	Entry Numbers (6 Maximum)							
	1	2	3	4	5	6	7	8
1								6
2								
3								
4								
5								
6								
7								
8								

Toll Restriction Table 4								
Type:	Allow	Deny						
Entry	Entry Numbers (6 Maximum)							
	1	2	3	4	5	6	7	8
1								
2								
3								
4								
5								
6								
7								
8								

Toll Restriction Table 5								
Type:	Allow	Deny						
Entry	Entry Numbers (8 Maximum)							
	1	2	3	4	5	6	7	8
1								
2								
3								
4								
5								
6								
7								
8								

Toll Restriction Table 6								
Type:	Allow	Deny						
Entry	Entry Numbers (8 Maximum)							
	1	2	3	4	5	6	7	8
1								
2								
3								
4								
5								
6								
7								
8								

Toll Restriction Table 7								
Type:	Allow	Deny						
Entry	Entry Numbers (8 Maximum)							
	1	2	3	4	5	6	7	8
1								
2								
3								
4								
5								
6								
7								

Toll Restriction Table 6								
Type:	Allow	Deny						
Entry	Entry Numbers (6 Maximum)							
	1	2	3	4	5	6	7	8
1								
2								
3								
4								
5								
6								
7								
8								

Er Base Level: PressITCM then dial #● #746*.

<p>Assign Restriction To Lines: Lines must be programmed to accept toll restriction before the restriction that is assigned to the stations will take effect.</p>	<p>Dial 35. Press prog. buttons to assign restriction to lines Press * for next feature</p>	<table border="1"> <tr> <th>BUTTON</th> <th>A1</th> <th>A2</th> <th>A3</th> <th>A4</th> <th>A5</th> <th>A8</th> <th>A9</th> <th>A10</th> <th>A11</th> <th>A12</th> </tr> <tr> <td>LINE</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> <td>8</td> <td>9</td> <td>10</td> </tr> <tr> <td>ENTRY</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td colspan="11">DEFAULT = NONE ASSIGNED</td> </tr> </table>	BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12	LINE	1	2	3	4	5	6	7	8	9	10	ENTRY											DEFAULT = NONE ASSIGNED																		
BUTTON	A1	A2	A3	A4	A5	A8	A9	A10	A11	A12																																												
LINE	1	2	3	4	5	6	7	8	9	10																																												
ENTRY																																																						
DEFAULT = NONE ASSIGNED																																																						
<p>Assign Restrictions To Stations: You can assign any of the toll restriction tables 1-8 on a per-station basis.</p> <p style="text-align: center;">Software Revision 1 3.A</p>	<p>Dial 62. Dial station number (10-33). (LEDs will turn on for toll tables assigned to that station.) Press A1-A5, A8-A10 to assign or remove a toll table assignment. Dial # + PORT ID for next station OR Press S for next feature.</p> <p style="text-align: center;">Software Revision 1 3.A</p>	<table border="1"> <thead> <tr> <th>STATION</th> <th>TOLL TABLES</th> </tr> </thead> <tbody> <tr><td>10</td><td></td></tr> <tr><td>11</td><td></td></tr> <tr><td>12</td><td></td></tr> <tr><td>13</td><td></td></tr> <tr><td>14</td><td></td></tr> <tr><td>15</td><td></td></tr> <tr><td>16</td><td></td></tr> <tr><td>17</td><td></td></tr> <tr><td>18</td><td></td></tr> <tr><td>19</td><td></td></tr> <tr><td>20</td><td></td></tr> <tr><td>21</td><td></td></tr> <tr><td>22</td><td></td></tr> <tr><td>23</td><td></td></tr> <tr><td>24</td><td></td></tr> <tr><td>25</td><td></td></tr> <tr><td>26</td><td></td></tr> <tr><td>27</td><td></td></tr> <tr><td>28</td><td></td></tr> <tr><td>29</td><td></td></tr> <tr><td>30</td><td></td></tr> <tr><td>31</td><td></td></tr> <tr><td>32</td><td></td></tr> <tr><td>33</td><td></td></tr> <tr> <td colspan="2">DEFAULT = NONE</td> </tr> </tbody> </table>	STATION	TOLL TABLES	10		11		12		13		14		15		16		17		18		19		20		21		22		23		24		25		26		27		28		29		30		31		32		33		DEFAULT = NONE	
STATION	TOLL TABLES																																																					
10																																																						
11																																																						
12																																																						
13																																																						
14																																																						
15																																																						
16																																																						
17																																																						
18																																																						
19																																																						
20																																																						
21																																																						
22																																																						
23																																																						
24																																																						
25																																																						
26																																																						
27																																																						
28																																																						
29																																																						
30																																																						
31																																																						
32																																																						
33																																																						
DEFAULT = NONE																																																						



TECHNICAL ADVISORY BULLETIN

Date: November 1990

Issue: TAB 055

Telephone User Guide Compatibility

In an attempt to simplify our in-box literature requirements, the following changes will be implemented. There will be three station user guides provided with each ExecuTech telephone. These guides will support the ExecuTech 2000, ExecuTech II, **XE/XL** and the **InnTouch** systems. Additionally, we will be supplying two system user **guides** and two attendants **guides** with the common equipment cabinet. This new approach will eliminate some of the confusion as to which user guide is used with which telephone. The chart shown on the reverse side will assist you in selecting the correct literature for your installation.

Telephones	ExecuTech 2000 (E34PT, E60PT, E80PT)		ExecuTech II (1432B, 2232C, 22XX) (See Note A)		XE / XL (N0308, N0616, N1024) (K0308, K0816, K0820, K1024)		InnTouch (KH32X, KH64X, KH96X, KH128) (See Note A)		CentraTech (22C32, 22C64, 22C96) (See Note A)	
	GCA 70-114 ATTENDANT GUIDE		GCA 70-136 ATTENDANT GUIDE		GCA 70-110 ATTENDANT GUIDE		GCA 70-136 ATTENDANT GUIDE		GCA 70-177 ATTENDANT GUIDE	
	STATION USER GUIDE	SYSTEM USER GUIDE	STATION USER GUIDE	SYSTEM USER GUIDE	STATION USER GUIDE	SYSTEM USER GUIDE	STATION USER GUIDE	SYSTEM USER GUIDE	STATION USER GUIDE	SYSTEM USER GUIDE
1. 6414-xx (See Note B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	N/A	GCA 70-175	GCA 70-134	N/A	GCA 70-169
2. 6414S-xx (See Note B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	N/A	GCA 70-175	GCA 70-134	WA	GCA 70-169
3. 6614E-xx (See Note C)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	N/A	GCA 70-175	GCA 70-134	WA	GCA 70-169
4. 6614T-xx (See Note C)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	N/A	GCA 70-175	GCA 70-134	WA	GCA 70-169
5. 6620E-xx (See Note C)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	N/A	GCA 70-175	GCA 70-134	WA	GCA 70-169
6. 6620T-xx (See Note C)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	N/A	GCA 70-175	GCA 70-134	WA	GCA 70-169
7. 6614S-xx (See Note B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
8. 6614-u (See Note B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
9. 6620-xx (See Note B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
10. 6620S-xx (SW Non B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
11. 6714X-U	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
12. 6706X-xx	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
13. 6702X-u	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	GCA 70-111	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
14. 6701X-u	GCA 70-130	WA	GCA 70-079	WA	N/A	WA	GCA 70-079	WA	WA	WA
15. 6600E-xx (See Note C)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	WA	WA	GCA 70-175	GCA m-134	WA	GCA 70-169
16. 6600S-xx (See Note B)	GCA 70-115	GCA 70-118	GCA 70-175	GCA 70-134	WA	WA	GCA 70-175	GCA 70-134	WA	GCA 70-169
17. 6709X-u	WA	WA	WA	WA	WA	WA	(See Note 2)	WA	WA	WA
18. 6709A-xx	WA	WA	WA	WA	WA	WA	(See Note 2)	WA	N/A	N/A

NOTES:

- 1) The TRANS/CONF configuration is always used on ExecuTech 2009 and XE/XL systems. It is programmable on ExecuTech II, InnTouch and CentraTech.
- 2) The operating instructions of these telephones can be found in GCA 70-106 provided with InnTouch common equipment.

- A) Assumes the common equipment is configured for TRANS/CONF (this configuration is default on the latest models).
- B) Because current default selection on the common equipment is for TRANS/CONF, label kit PXLST must be used to relabel the existing SAVE button as a TRANS/CONF button.
- C) If the RECALL/SAVE configuration is being used, a label package must be utilized (PRGST) to label the buttons on these telephones for proper operation. In addition, the following literature must be used with ExecuTech II and InnTouch:
- Station User's Guide - GCA 70-078
LCD Useh Guide - GCA 70-088
Attendant's Guide - GCA 70-066
User Guides for the RECALL/SAVE configuration may be ordered through Inside Sales. Call 1-800-347-1432.

The charted publications and revision numbers are listed below for reference. These revision numbers are current as of 11/10/90 but may change at any time as need arises. Confer with a Comdial inside sales representative at 1-800-347-1432 to verify the current revision of any publication in question.

PUBLICATION	REVISION	PUBLICATION	REVISION
GCA 70-066	03	GCA 70-115	0 4
GCA 70-078	0 1	GCA 70-118	0 4
GCA 70-079	0 6	GCA 70-130	0 1
GCA 70-088	0 1	GCA 70-134	0 5
GCA 70-108	0 4	GCA 70-136	0 1
GCA 70-110	03	GCA 70-169	0 1
GCA 70-111	0 4	GCA 70-175	0 1
GCA 70-114	04	cam-in	01



TECHNICAL ADVISORY BULLETIN

Date: May 1991

Issue: TAB049A

TELEPHONE COMPATIBILITY

The ExecuTech telephone systems are all designed to support a broad range of Comdial telephones. Compatibility of Comdial telephones with ExecuTech telephone systems is shown in Table 1 on page 2 of this TAB. Compatibility limitations and guidelines are noted on the page headed Compatibility Key for Table 1. The compatibility comparisons are based on current revision software and hardware configurations.

Every effort has been made to eliminate errors in this information; however, it is subject to change without notice and Comdial disclaims liability for any difficulties arising from the interpretation of it. Furthermore, this information does not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation, or maintenance of the equipment.

Table 1
Compatibility of Comdial Telephones With ExecuTech Telephone Systems

Code	Description	0308X 0616X 0816X 0824X	NO308 NO616 NO820 N1024	K0308 K0616 K0820 K1024	1432B	K2232 K2264 K2296 2232C	E34PT E60PT E80PT	22C32 22K64 22K96	2232A	KH64X KH96X KH128
EXECUTECH TELEPHONES										
3500-xx-CT-000S	Multi, 10 x14, Spkr	N	2	2	1	1	12	2	1	2
3500-xx-CT-900M	Multi, 10 x14, Spkr	N	2,11	2, 11	1	1	12	2	1	2
3500-xx-DT-900M	Multi, 10 x14, Spkr	N	2, 11	2.11	1	1	12	2	1	2
3502-xx-CT-000M	Multi, 10 x14, Mntr	N	2	2	1	1	12	2	1	2
3503-xx-CT-900M	3-line, Mntr	Y	2, 7, 9	2, 7, 9	1, 7, 9	1, 7, 9	7, 9, 12	2, 7, 9	1, 7, 9	2, 7, 9
3508-xx-CT-035M	8-line BLF, Mntr	Y	N	N	1	N	N	N	N	N
3508-xx-CT-900M	S-line, Mntr	Y	2, 7, 9	2, 7, 9	1, 7, 9	2, 7, 9	7, 9, 12	2, 7, 9	1, 7, 9	2, 7, 9
3508-xx-CT-935M	S-line BLF, Mntr	Y	N	N	1	N	N	N	N	N
3508-xx-CT-000M	S-line, Mntr	Y	2, 7, 9	2, 7, 9	1, 7, 9	2, 7, 9	7, 9, 12	2, 7, 9	1, 7, 9	2, 7, 9
3593-xx-CT-900M	3-line, Spkr	Y	2, 7, 9, 15	2, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15	7, 9, 12, 15	2, 3, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15
3598-xx-CT-900M	S-line, Spkr	Y	2, 7, 9, 15	2, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15	7, 9, 12, 15	2, 3, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15
3598-xx-CT-000S	S-line, Spkr	Y	2, 7, 9, 15	2, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15	3, 7, 9, 12, 15	2, 3, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15
3600-xx-CT-009M	SLPS, Hotel	N	N	N	5	5	5	5	5	5
3600-xx-CT-579M	SLPS, Bus	N	N	N	5	5	5	5	5	5
3600-xx-CT-900M	SLPS, Bus	N	N	N	4, 5	4, 5	4, 5	4, 5	4, 5	4.5
3614-xx-XX-000M	Multi, 10 x 14, Mntr	N	2	2	1	1	12	2	1	2
3614-xx-XX-000S	Multi, 10 x 14, Spkr	N	2	2	1	1	12	2	1	2
3614-xx-XX-LCDS	Multi, 10 x 14, LCD, Spkr	N	N	2	1	1	12	2	1	2
3620-xx-XX-000M	Multi, 5 x 20, Mntr	N	2	2	1	1	12	2	1	2
3620-xx-XX-000S	Multi, 5 x 20, Spkr	N	2	2	1	1	12	2	1	2
3622-xx-XX-000M	Multi, 2 x 22, Mntr	N	2	2	1	1	12	2	1	2
3622-xx-XX-000S	Multi, 2 x 22, Spkr	N	2	2	1	1	12	2	1	2
6414-xx	S-line	Y	2, 7, 9	2, 7, 9	1, 7, 9	1, 7, 9	7, 9, 12	2, 7, 9	1, 7, 9	2, 7, 9
6414L-xx	8-line BLF	Y	N	N	1	N	N	N	N	N
6414S-xx	8-line	Y	2, 7, 9, 15	2, 7, 9, 15	1, 3, 7, 9, 15	1, 3, 7, 9, 15	3, 7, 9, 12, 15	2, 3, 7, 9, 15	1, 3, 7, 9, 15	2, 3, 7, 9, 15

Code	Description	0308X NO308		K0308	14328	K2232	E34PT	22C32	2232A	KH64X
		0616X	NO616	K0616		K2264		22K64		KH96X
		0816X	NO820	K0820		K2296	E60PT	22K96		KH128
		0824X	N1024	K1024		223iC	E80PT			
6509-xx	Hotel, SLPS	N	N	N	5	5	5	5	5	5
6579-xx	SLPS	N	N	N	5	5	5	5	5	5
6600E-xx	Multi, 5 x 14, LCD, Spkr	N	N	Y	Y	Y	Y	Y	Y	Y
6600S-xx	Multi, 5 x 14, LCD, Spkr	N	N	2	2	2	2	2	2	2
6614-xx	Multi, 10 x 14, Mntr	N	2	2	2	2	2	2	2	2
6614E-xx	Multi, 10 x 14, Mntr	N	Y	Y	Y	Y	Y	Y	Y	Y
6614S-xx	Multi, 10 x 14, Spkr	N	2	2	2	2	2	2	2	2
6614T-xx	Multi, 10 x 14, Spkr	N	Y	Y	Y	Y	Y	Y	Y	Y
6620-xx	Multi, 5 x 20, Mntr	N	2	2	2	2	2	2	2	2
6620E-xx	Multi, 5 x 20, Mntr	N	Y	Y	Y	Y	Y	Y	Y	Y
6620S-xx	Multi, 5 x 20, Spkr	N	2	2	2	2	2	2	2	2
6620T-xx	Multi , 5 x 20, Spkr	N	Y	Y	Y	Y	Y	Y	Y	Y
6622-xx	Multi, 2 x 22, Mntr	N	2	2	2	2	2	2	2	2
6622S-xx	Multi, 2 x 22, Mntr	N	2	2	2	2	2	2	2	2
6701-xx	SLPS	N	N	N	5	5	5	5	5	5
6702X-xx	2-line, Mntr	N	8	8	19	19	19	19	19	7
6706X-xx	Multi, Mntr	N	Y	Y	19	19	19	19	19	7
6709A-xx	SLPS, Hotel, S/K	N	N	N	N	N	N	N	N	5
6709B-xx	SLPS, Hotel, bridged ext.	N	N	N	N	N	N	N	N	5
6709X-xx	SLPS, Hotel	N	N	N	5	5	5	5	5	5
6714X-xx	Multi, Mntr	N	Y	Y	19	19	19	19	19	7

Code	Description	0308X NO308 0616X NO616 0816X N0820 0824X N1024	K0308 K0616 K0820 K1024	1432B	K2232 K2264 K2296 2232C	E34PT E60PT E80PT	22C32 22K64 22K96	2232A	KH64X KH96X KH128
MAXPLUSTELEPHONES									
3579-xx	MaxPlus , TAP, 90 MW	N	N	N	N	N	14	N	N
3589-xx	MaxPlus , TAP, LVMW	N	N	N	N	N	6	N	N
3579S-xx	MaxPlus, Spkr , TAP, 90 MWN	N	N	N	N	N	14	N	N
3709S-xx	Spkr, 90 MW	N	N	N	N	N	10,141	N	N
3709X-xx	90 MW, Bus	N	N	N	N	N	10, 14	N	N
3719X-xx	90 MW, Hotel	N	N	N	N	N	10.14	N	N
3779H-xx	Hold, TAP , 90 MW	N	N	N	N	N	10, 14	N	N
3789H-xx	Hold, TAP, LVMW	N	N	N	N	N	6.10	N	N
3809X-xx	90 Mw, S/K	N	N	N	N	N	10.14	N	N
3810X-xx	Take II , 90 MW, S/K , Hotel	N	N	N	N	N	6, 10, 14	N	N
3879X-xx	Hold, TAP , Redial, Store, 90 Mw, S/K	N	N	N	N	N	10, 14	N	N
3889X-xx	Hold, TAP , Redial, Store, LVMW, S/K	N	N	N	N	N	6.10	N	N
3910S-xx	Take II, Spkr , 90 MW, S/K, Hotel	N	N	N	N	N	10, 14	N	N
3979S-xx	Spkr , Hold, TAP, Redial, store, 90 Mw, S/K	N	N	N	N	N	10, 14	N	N
3989S-xx	Spkr , Hold, TAP, Redial, store, LVMW, S/K	N	N	N	N	N	6.10	N	N
4709X-xx	2-line , 90 MW	N	N	N	N	N	10, 14	N	N
4719X-xx	2-line , 90 MW, Hotel	N	N	N	N	N	10, 14	N	N
4779X-xx	2-line , TAP, 90 MW	N	N	N	N	N	10, 14	N	N
4789X-xx	2-line , TAP, LVMW	N	N	N	N	N	6.10	N	N
4809X-xx	2-line , 90 MW, S/K, Hotel	N	N	N	N	N	10, 14	N	N
4879X-xx	2-line , TAP, Redial store, 90 Mw, S/K	N	N	N	N	N	10, 14	N	N

Code	Description	0308X	NO308	K0308	14323	K2232	E34PT	22C32	2232A	KH64X
		0616X	NO616	K0616		K2264	E60PT	22K64		KH96X
		0816X	NO820	K0820		K2296	E80PT	22K96		KH128
		0824X	N1024	K1024		2232C				
4889X-xx	2-line, TAP, Redial, Store, LVMW, S/K	N	N	N	N	N	N	6.10	N	N
4909S-xx	2-line, Spkr 90 MW, S/K	N	N	N	N	N	N	10.14	N	N
4979S-xx	2-line, Spkr, TAP, Redial, Store, 90 MW, S/K	N	N	N	N	N	N	10, 14	N	N
4989S-xx	2-line, Spkr, TAP, Redial store, LVMW, s/K	N	N	N	N	N	N	6,10	N	N
CONSOLES										
DB24-xx	24-btn console	Y	N	N	N	N	N	N	N	N
DB32-xx	32-btn console	Y	13	13	Y	Y	Y	Y	Y	Y
DB32S-xx	32-btn console, OHVA	5	13	13	Y	Y	Y	Y	Y	Y
DB40-xx	40-btn console	Y	13	13	Y	Y	Y	Y	Y	Y
DB70-xx	70-btn console	Y	13	13	Y	Y	Y	Y	Y	Y
EB32X-xx	32-btn console	N	13	13	Y	Y	Y	Y	Y	Y
ACCESSORIES										
DOOR1	Door Box	N	16, 17	16, 17	16.18	16, 18	16	16, 18	16.18	16, 18

5

Compatibility Key For Table 1

NOTE: *This chart assumes latest revisions of software in KSUs and phones.*

- Y — Yes, the phone is supported
- N — No, the phone is not supported.
- 1 — Beginning at a certain revision*, some buttons are supported differently at default. The RECALL is treated as a TAP, the SAVE is treated as a **TRANS/CONF**. Should the old button functions be required, system class of service programming must be changed.
- 2 — Some keys **are** supported differently: The RECALL is treated as a TAP, the SAVE is treated as a **TRANS/CONF**. A special kit may be ordered which has stickers that can be placed over existing buttons to give the correct designations.
- 3 — The phone may squeal on an **all-call**.
- 4 — Not recommended, but will work without transfer **capability**.
- 5 — Speaker will not function with voice signalled intercom.
- 6 — Can be monitored and message waiting signalled as a **Centrex** station, but it will not function as a proprietary terminal.
- 7 — Works on all stations except for station 10; therefore, cannot be used for programming.
- 8 — Works on all stations, but there is no LED feedback when used for programming.
- 9 — Supports one level of **autodial** storage.
- 10 — All telephones have data ports with port connected to line 2 on 2-line telephones. 90 volt message waiting is connected to tip and ring (of line 1 for **2-line** telephones) and low voltage message waiting is connected to the spare pair. No A-lead control capability is provided. **HoTelephones** contain a lithium battery and business telephones contain a “super cap” electronic device to provide programmed memory storage protection when line power is disconnected.
- 11 — May experience acoustic feedback when volume control is set to high volume.
- 12 — Some buttons **are** supported differently: The RECALL is treated as a TAP; the SAVE is treated as a **TRANS/CONF**. A special kit may be ordered which has stickers that can be placed over existing buttons to give the correct designations. If the phone is used for the Service Observing feature (if available), the observer will not be muted unless it is in the **handsfree** mode or the MUTE button is held down when off-hook on **the** handset.
- 13 — The Console buttons are fixed for **DSS/BLF** operation beginning with station 10 and ending with the maximum station number in the system. These buttons also provide **autodial** locations at a second level of storage (accessed with the **SHIFT** button function). Additionally, any buttons, from beyond system station capacity through a maximum of 32, are available as **autodial** locations at the first level of storage.
- 14 — Can be monitored but **CentraTech** cannot actuate message waiting light. Also, will not function as proprietary terminal,
- 15 — Not compatible with background music feature.
- 16 — Will not **function** with single-line proprietary telephones.
- 17 — Door box cannot page in zone 1
- 18 — Door box can only page in zone 1
- 19 — Works on all stations; however, not recommended for programming or use at station 10.

*1432B Rev. F; 2232A Rev. E; 2232C Rev. G; K2264 Rev. C; K2296 Rev. C.

Legend

BLF = Busy Lamp Field	Multi = Multiline station
Btn = Button	MW = Message Waiting
Bus = Business application	OHVA = Off-Hook Voice Announce
Hotel = Hotel room application	S/K = Programmable button
LCD = Liquid Crystal Display	SL = Single-line
LV = Low Voltage	SLPS = Single-line proprietary
	Spkr = Speakerphone